LICENSE PLATE LAMP LENS


6511S–01

REPLACEMENT

HINT:

Parts are shown for the LH side only. The LH and RH side are symmetrical.

1. **REMOVE BACK DOOR TRIM BOARD ASSY (SEE PAGE 75–33)**
2. **REMOVE BACK DOOR GARNISH SUB–ASSY OUTSIDE (SEE PAGE 76–24)**

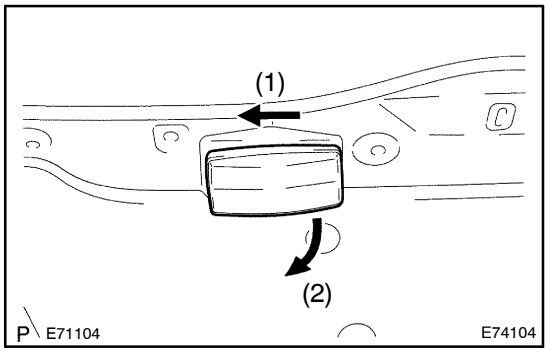

3. **REMOVE LICENSE PLATE LAMP LENS**

(a) Push the license plate lamp assy in the direction indicated by the arrow in the illustration and remove it.

(b) Disconnect the license plate lamp socket & wire and bulb. Remove the license plate lamp lens.