
HEADLAMP DIMMER SWITCH ASSY

6511U–01

REPLACEMENT


1. DISCONNECT BATTERY NEGATIVE TERMINAL (SEE PAGE 60–1)
2. REMOVE STEERING WHEEL COVER LOWER NO.2 (SEE PAGE 60–20)
3. REMOVE STEERING WHEEL COVER LOWER NO.3 (SEE PAGE 60–20)
4. REMOVE HORN BUTTON ASSY (SEE PAGE 60–20)
5. REMOVE STEERING WHEEL ASSY (SEE PAGE 50–8)
   SST 09950–50013 (09951–05010, 09952–05010, 09953–05020, 09954–05021)
6. REMOVE STEERING COLUMN COVER (SEE PAGE 50–8)
7. REMOVE SPIRAL CABLE SUB–ASSY (SEE PAGE 60–29)
8. REMOVE WINDSHIELD WIPER SWITCH ASSY (SEE PAGE 66–26)

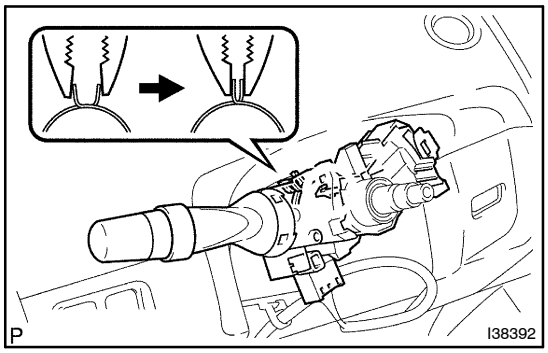


9. REMOVE HEADLAMP DIMMER SWITCH ASSY

(a) Disconnect the connectors.

(b) Remove the band clamp as shown in the illustration.

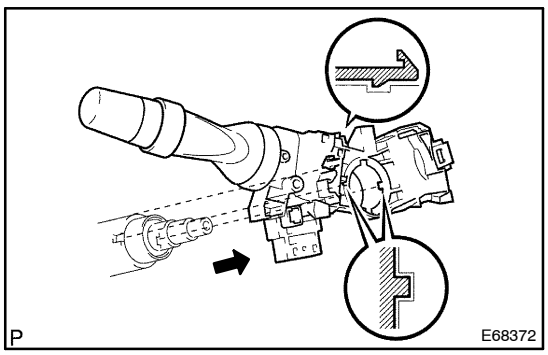


(c) Disengage the claws and remove the headlamp dimmer switch assy.

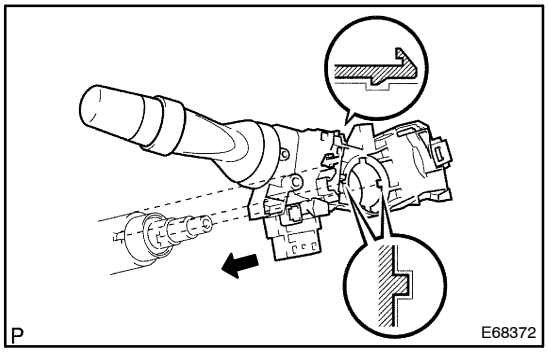

10. INSTALL HEADLAMP DIMMER SWITCH ASSY

(a) Insert the headlamp dimmer switch assy so that the recessed portion of the rotating stopper matches that of the rotating stopper.

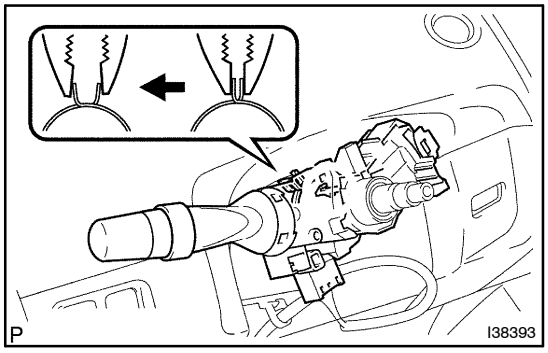

(b) Install the headlamp dimmer switch with the band clamp and claw.
(c) Connect the connectors.

11. CENTER SPIRAL CABLE (SEE PAGE 60–29)
12. INSTALL STEERING WHEEL ASSY (SEE PAGE 50–8)
13. INSTALL HORN BUTTON ASSY (SEE PAGE 60–20)
14. CONNECT BATTERY NEGATIVE TERMINAL (SEE PAGE 21–56)
15. INSPECT HORN BUTTON ASSY (SEE PAGE 60–14)
16. INSPECT SRS WARNING LIGHT (SEE PAGE 05–1151)
17. PERFORM INITIALIZATION (SEE PAGE 01–29)