REAR WIPER MOTOR ASSY

660HA–01

REPLACEMENT


1. REMOVE REAR WIPER ARM COVER

2. REMOVE REAR WIPER ARM ASSY

(a) Remove the nut and the rear wiper arm assy.

3. REMOVE BACK DOOR TRIM BOARD ASSY (SEE PAGE 75–33)

4. REMOVE BACK DOOR TRIM BOARD (SEE PAGE 75–33)

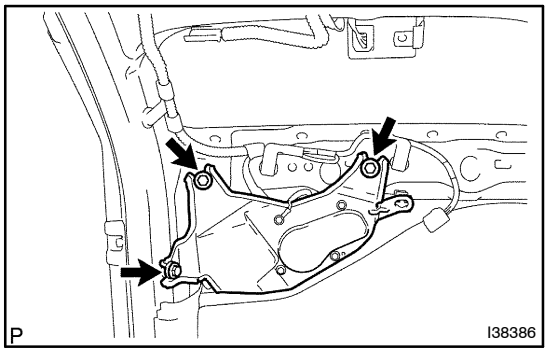

5. REMOVE REAR WIPER MOTOR ASSY

(a) Disconnect the connector.


(b) Remove the 3 bolts and the rear wiper motor assy.

6. INSTALL REAR WIPER MOTOR ASSY

(a) Install the rear wiper motor assy with the 3 bolts.

Torque: 5.5 N·m (56 kgf·cm, 49 in.·lbf)


(b) Connect the connector.

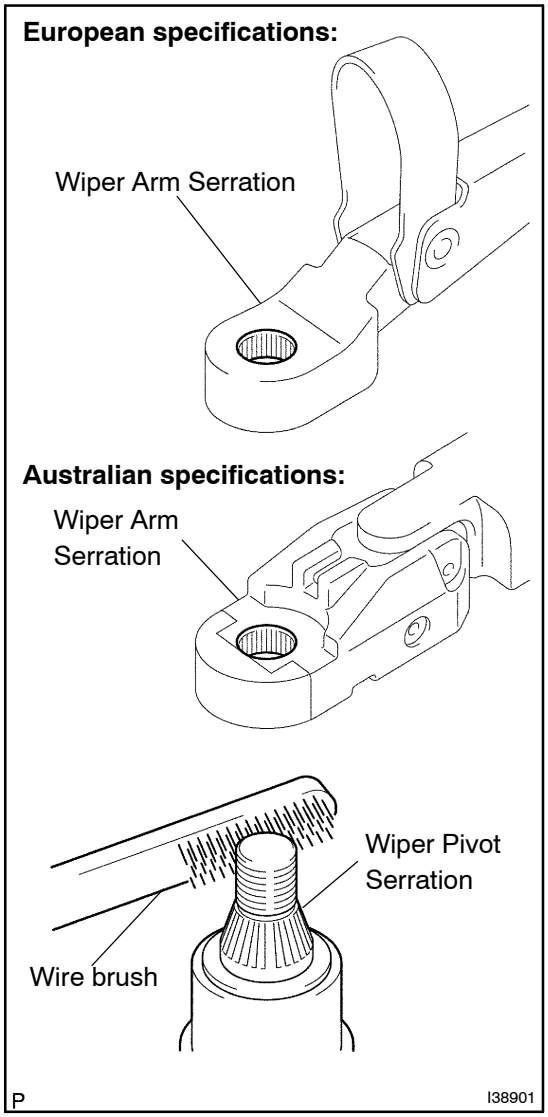

7. INSTALL REAR WIPER ARM ASSY

(a) Clean the rear wiper arm serration with a round file or equivalent (when reinstalling).

(b) Clean the rear wiper pivot serration with a wire brush.

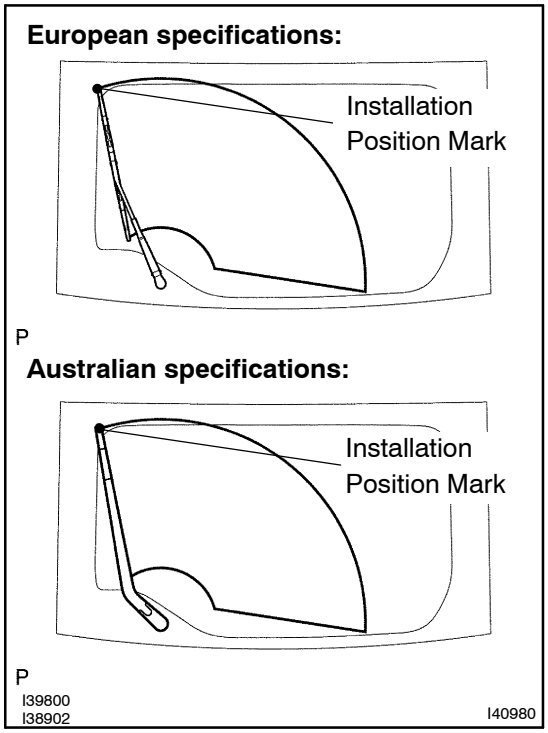

(c) Stop the rear wiper motor assy at the automatic stop position. Install the rear wiper arm assy with the nut in the position shown in the illustration.

Torque: 5.5 N·m (56 kgf·cm, 49 in.·lbf)

HINT:

Hold down the arm hinge by hand in order to fasten the nut.

(d) Operate the rear wiper while spraying water or washer fluid on the glass. Ensure that the wiper functions properly and that there is no interference with the body.