MULTI–DISPLAY ASSY


REPLACEMENT

6714W–01

HINT:

- COMPONENTS: see page 67–2
- Installation is in the reverse order of removal.

1. **REMOVE INSTRUMENT PANEL REGISTER ASSY NO.3 (SEE PAGE 71–7)**
2. **REMOVE INSTRUMENT PANEL REGISTER ASSY NO.4 (SEE PAGE 71–7)**

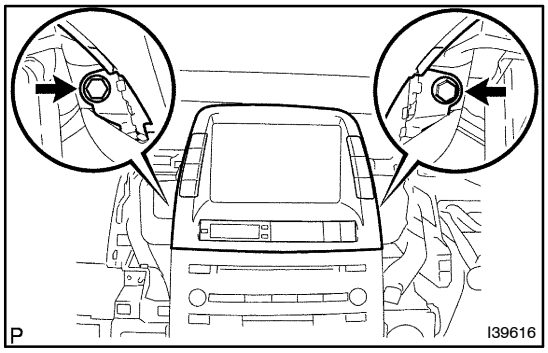

3. **REMOVE MULTI–DISPLAY ASSY**

(a) Remove the 2 bolts.

(b) Disconnect the connector and remove the multi–display assy.