FRONT NO.2 SPEAKER ASSY


6714Y–01

REPLACEMENT

HINT:

- COMPONENTS: see page 67–2
- Use the same procedures for the RH side and LH side.
- The procedures listed below are for the LH side.
- Installation is in the reverse order of removal.

1. REMOVE FRONT DOOR LOWER FRAME BRACKET GARNISH LH (SEE PAGE 75–9)

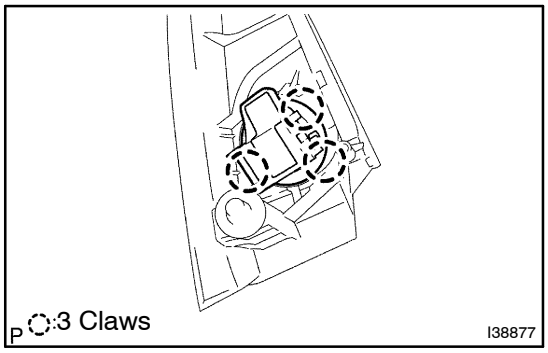

2. REMOVE FRONT NO.2 SPEAKER ASSY

(a) Disengage the 3 claws and remove the front No.2 speaker assy.