REAR SPEAKER ASSY NO.2

67150–01

REPLACEMENT

HINT:


- COMPONENTS: see page 67–2
- Use the same procedures for the RH side and LH side.
- The procedures listed below are for the LH side.
- Installation is in the reverse order of removal.

1. REMOVE REAR DOOR INSIDE HANDLE BEZEL LH **(SEE PAGE 75–33)**

2. REMOVE DOOR PULL HANDLE **(SEE PAGE 75–33)**

3. REMOVE REAR DOOR ARMREST BASE PANEL UPPER LH **(SEE PAGE 75–33)**

4. REMOVE REAR DOOR TRIM BOARD SUB–ASSY LH **(SEE PAGE 75–33)**

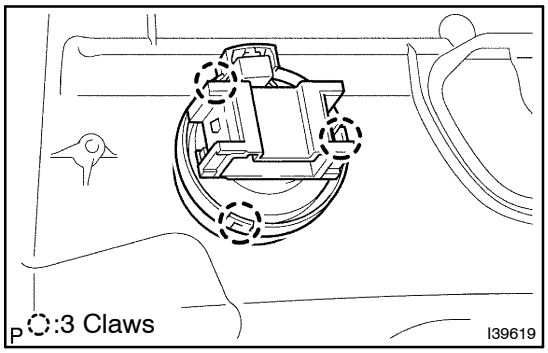

5. REMOVE REAR SPEAKER ASSY NO.2

(a) Disengage the 3 claws and remove the rear speaker assy No.2.