ANTENNA CORD SUB–ASSY

67154–01

REPLACEMENT

HINT:

- COMPONENTS: see page 67–2
- Installation is in the reverse order of removal.

1. REMOVE ROOF HEADLINING ASSY (SEE PAGE 76–29)


HINT:

Refer to the procedures up to ”INSTALL ROOF HEAD LINING ASSY”.

2. REMOVE ANTENNA CORD SUB–ASSY

(a) Disconnect each connector.

(b) Remove the 10 clamps and earth bolt to remove the antenna cord sub–assy.

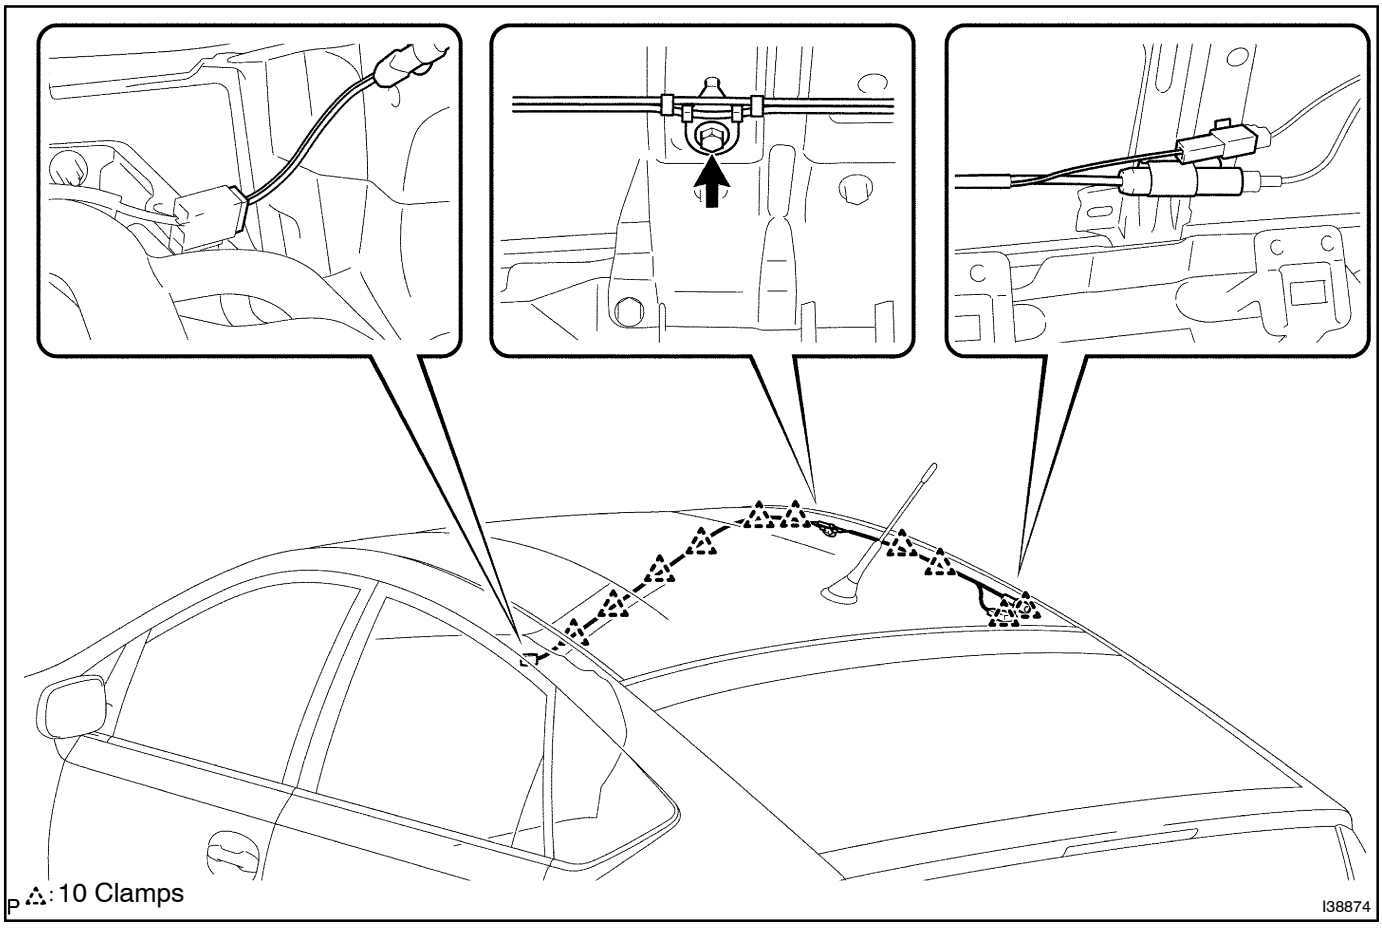


3. INSTALL ANTENNA CORD SUB–ASSY

(a) Install the 10 clamps and bolt.

Torque: 7.0 N·m (71 kgf·cm, 62 in.·lbf)

(b) Connect each connector.

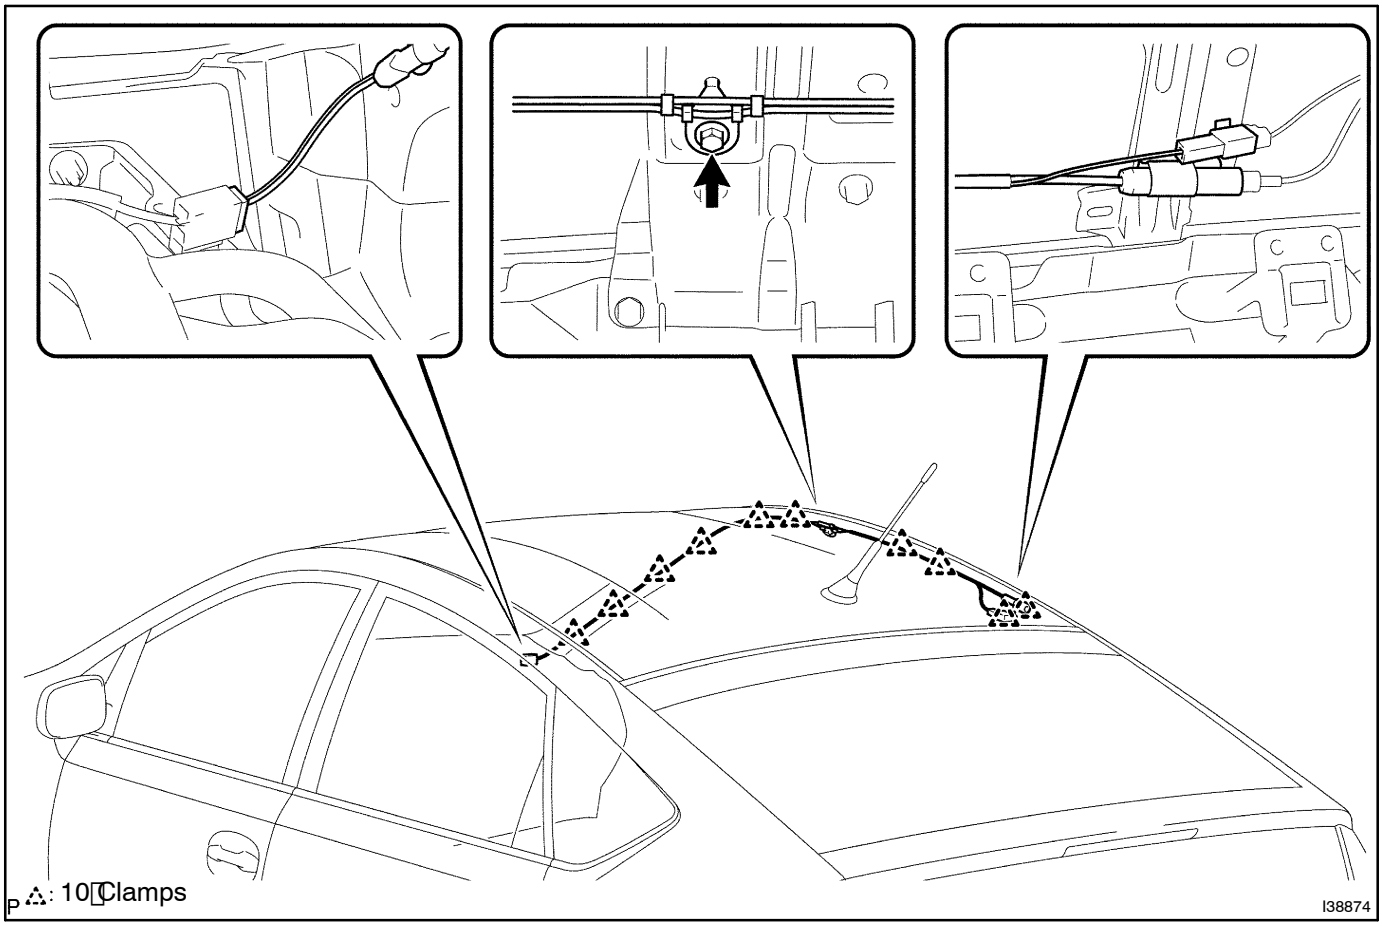

4. INSTALL ROOF HEADLINING ASSY (SEE PAGE 76–29)

HINT:

Refer to the procedures from ”INSTALL ROOF HEAD LINING ASSY”.