ANTENNA (CORD/POLE SEPARATE TYPE) HOLDER ASSY

67152–01

REPLACEMENT


HINT:

- COMPONENTS: see page 67–2
- Installation is in the reverse order of removal.

1. REMOVE ROOF HEADLINING ASSY (SEE PAGE 76–29)

HINT:

Refer to the procedures up to ”INSTALL ROOF HEAD LINING ASSY”.

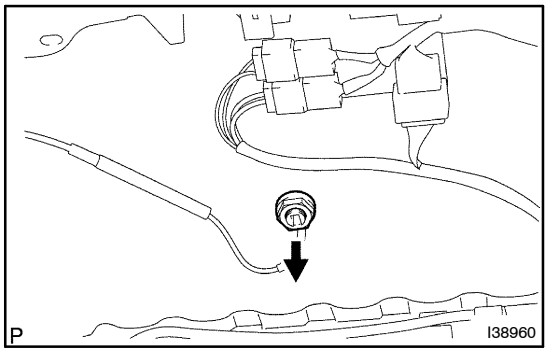



2. REMOVE ANTENNA (CORD/POLE SEPARATE TYPE) HOLDER ASSY

(a) Disconnect each connector.

(b) Remove the antenna nut.

(c) Remove the clamp and disengage the 2 claws to remove the antenna holder assy.

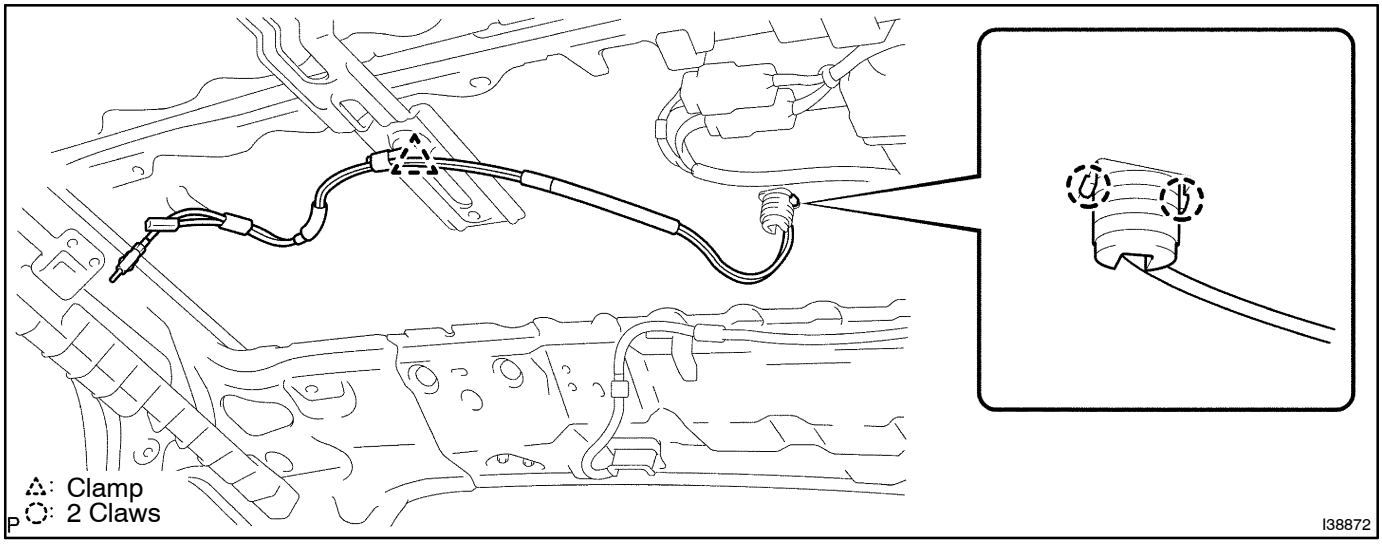

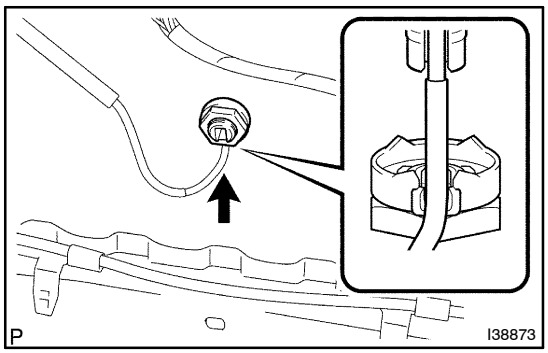

3. INSTALL ANTENNA (CORD/POLE SEPARATE TYPE) HOLDER ASSY

(a) Install the antenna holder assy on the roof and align the antenna cord with the antenna nut cutout.

(b) Tighten the antenna holder assy with the antenna nut.

Torque: 5.0 N·m (51 kgf·cm, 44 in.·lbf)

(c) Install each clamp.

4. INSTALL ROOF HEADLINING ASSY (SEE PAGE 76–29)

HINT:

Refer to the procedures from ”INSTALL ROOF HEAD LINING ASSY”.