NAVIGATION ECU


REPLACEMENT

67157–01

HINT:


- COMPONENTS: see page 67–2
- Installation is in the reverse order of removal.

1. REMOVE FRONT SEAT ASSEMBLY LH (SEE PAGE 72–2)

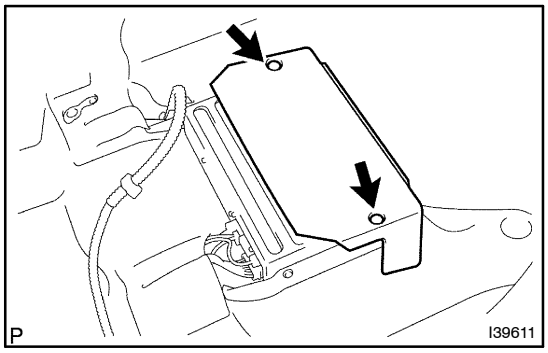

2. REMOVE NAVIGATION ECU COVER


(a) Remove the 2 clips and navigation ECU cover.

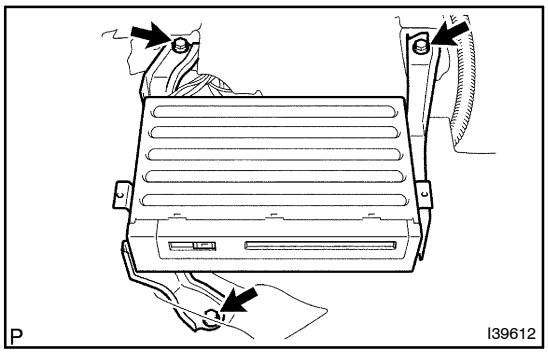

3. REMOVE NAVIGATION ECU W/BRACKET


(a) Disconnect each connector.

(b) Remove the 3 bolts and navigation ECU w/ bracket.

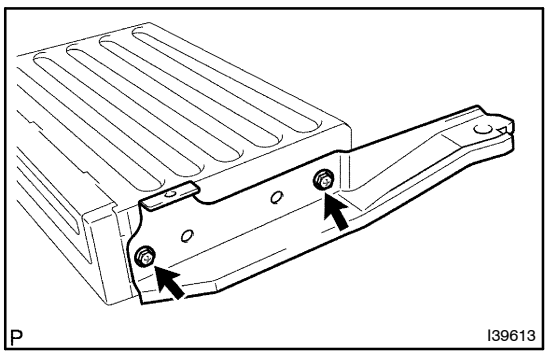

4. REMOVE DISC PLAYER BRACKET

(a) Remove the 2 bolts and disc player bracket.

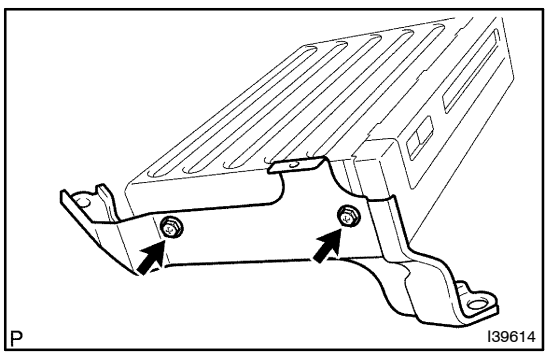

5. REMOVE DISC PLAYER BRACKET NO.2

(a) Remove the 2 bolts and disc player bracket No.2.

6. REMOVE NAVIGATION ECU

7. INSTALL FRONT SEAT ASSEMBLY LH (SEE PAGE 72–2)