STEERING PAD SWITCH LH


67159–01

REPLACEMENT

HINT:

- COMPONENTS: see page 67–2
- Installation is in the reverse order of removal.

1. **PRECAUTION (SEE PAGE 60–1)**
2. **DISCONNECT BATTERY NEGATIVE TERMINAL (SEE PAGE 60–20)**
3. **REMOVE STEERING WHEEL COVER LOWER NO.2 (SEE PAGE 50–8)**
4. **REMOVE STEERING WHEEL COVER LOWER NO.3 (SEE PAGE 50–8)**
5. **REMOVE HORN BUTTON ASSY (SEE PAGE 60–20)**

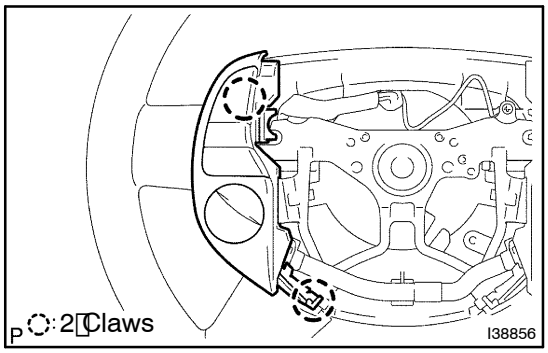

6. **REMOVE STEERING PAD SWITCH LH**
   (a) Disengage the 2 claws and pull out the steering pad switch LH.
   (b) Disconnect each connector and remove the steering pad switch LH.

7. **INSTALL HORN BUTTON ASSY (SEE PAGE 60–20)**
8. **CONNECT BATTERY NEGATIVE TERMINAL (SEE PAGE 19–2)**
9. **PERFORM INITIALIZATION (SEE PAGE 01–29)**
10. **INSPECT HORN BUTTON ASSY (SEE PAGE 60–14)**
11. **INSPECT SRS WARNING LIGHT (SEE PAGE 05–1155)**