STEERING PAD SWITCH RH


REPLACEMENT

6715A–01

HINT:

- COMPONENTS: see page 67–2
- Installation is in the reverse order of removal.

1. PRECAUTION (SEE PAGE 60–1)
2. DISCONNECT BATTERY NEGATIVE TERMINAL (SEE PAGE 60–1)
3. REMOVE STEERING WHEEL COVER LOWER NO.2 (SEE PAGE 50–8)
4. REMOVE STEERING WHEEL COVER LOWER NO.3 (SEE PAGE 50–8)
5. REMOVE HORN BUTTON ASSY (SEE PAGE 60–20)

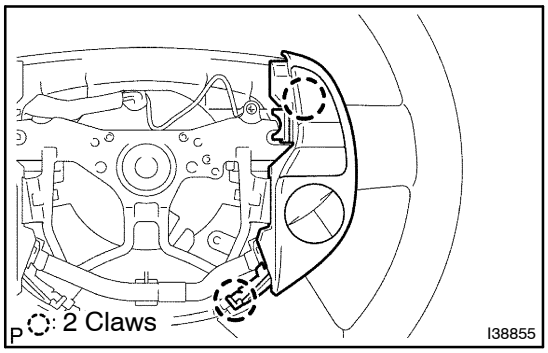

6. **REMOVE STEERING PAD SWITCH RH**

(a) Disengage the 2 claws and pull out the steering pad switch RH.

(b) Disconnect each connector and remove the steering pad switch RH.

7. INSTALL HORN BUTTON ASSY (SEE PAGE 60–20)
8. CONNECT BATTERY NEGATIVE TERMINAL (SEE PAGE 19–2)
9. PERFORM INITIALIZATION (SEE PAGE 01–29)
10. INSPECT HORN BUTTON ASSY (SEE PAGE 60–14)
11. INSPECT SRS WARNING LIGHT (SEE PAGE 05–1155)