
POWER POINT SOCKET ASSY

REPLACEMENT

6715B–01

HINT:

COMPONENTS: See page 67–2

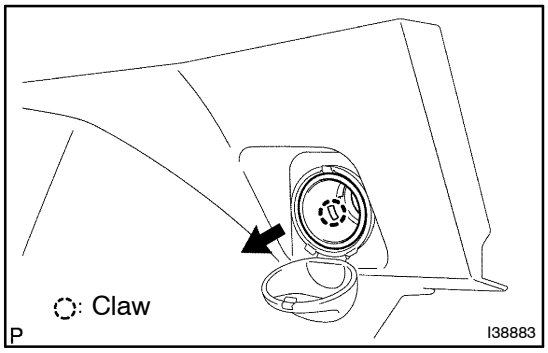

1. REMOVE POWER POINT SOCKET ASSY

(a) Disengage the claw to remove the power point socket assy.

2. INSTALL POWER POINT SOCKET ASSY

(a) Align the power point socket assy and power point socket cover.

(b) Insert them from the front side and install the power point socket assy.