
POWER POINT SOCKET ASSY RR

6715C–01

REPLACEMENT

HINT:

COMPONENTS: See page 67–2

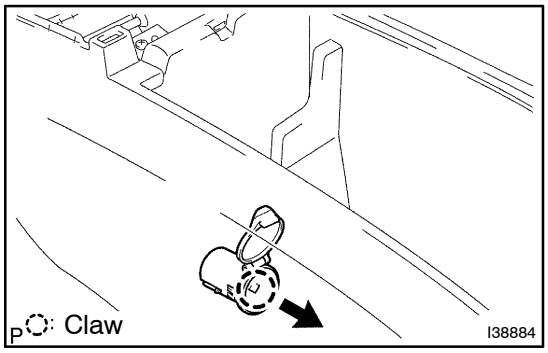

1. REMOVE POWER POINT SOCKET ASSY RR

(a) Disengage the claw to remove the power point socket assy RR.

2. INSTALL POWER POINT SOCKET ASSY RR

(a) Align the power point socket assy RR and power point socket cover.

(b) Insert them from the front side and install the power point socket assy RR.