
70122–01

INSPECTION

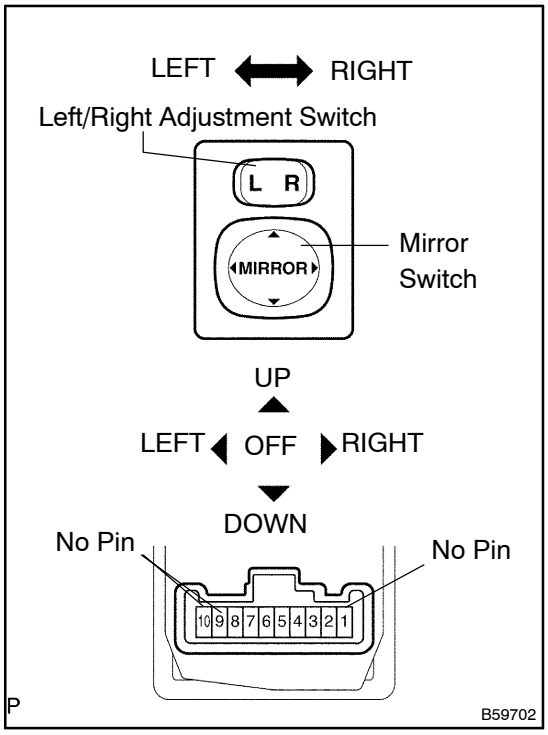

1. INSPECT OUTER MIRROR SWITCH ASSY

(a) Press L on the left/right adjustment switch. Measure the resistance between the mirror switch terminals.

Standard (Left side):

Terminal Connection	Switch Condition	Specified Condition
4 – 8 6 – 7	UP	Below 1 Ω
4 – 7 6 – 8	DOWN	Below 1 Ω
5 – 8 6 – 7	LEFT	Below 1 Ω
5 – 7 6 – 8	RIGHT	Below 1 Ω


If the result is not as specified, replace the switch assy.

(b) Press R on the left/right adjustment switch. Measure the resistance between the mirror switch terminals.

Standard (Right side):

Terminal Connection	Switch Condition	Specified Condition
3 – 8 6 – 7	UP	Below 1 Ω
3 – 7 6 – 8	DOWN	Below 1 Ω
2 – 8 6 – 7	LEFT	Below 1 Ω
2 – 7 6 – 8	RIGHT	Below 1 Ω

If the result is not as specified, replace the switch assy.

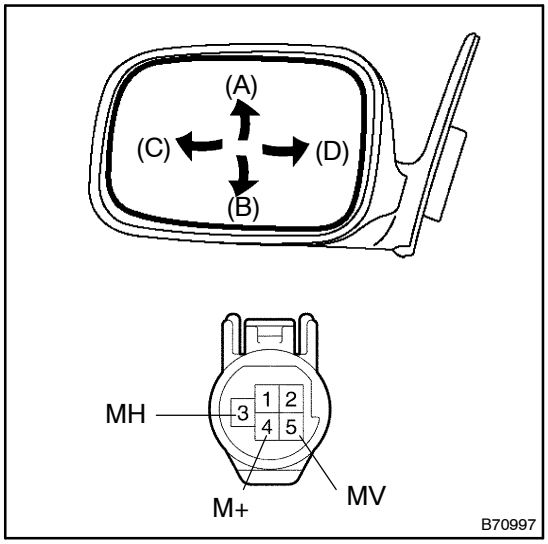

2. INSPECT OUTER REAR VIEW MIRROR ASSY LH


(a) Disconnect the mirror connector.

(b) Apply battery voltage to the mirror terminals and check operation of the mirror face, as shown in the table and illustration.

OK:

Measurement Condition	Mirror Operation
Battery positive (+) →Terminal 5 (MV) Battery negative (–) →Terminal 4 (M+)	Turns upward (A)
Battery positive (+) →Terminal4 (M+) Battery negative (–) →Terminal 5 (MV)	Turns downward (B)
Battery positive (+) →Terminal 3 (MH) Battery negative (–) →Terminal 4 (M+)	Turns left (C)
Battery positive (+) →Terminal 4 (M+) Battery negative (–) →Terminal 3 (MH)	Turns right (D)

If the result is not as specified, replace the mirror assy.

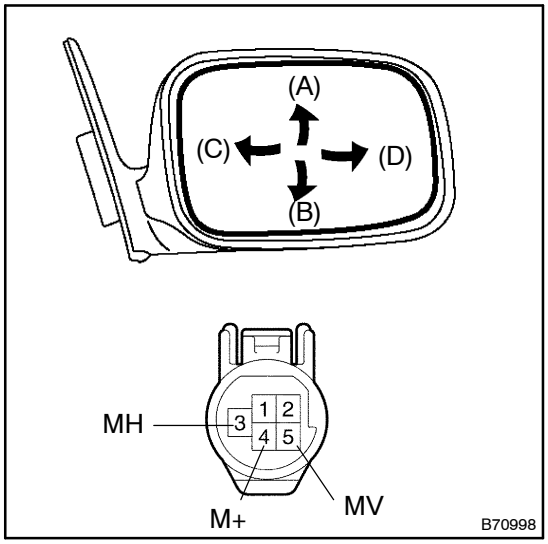

3. INSPECT OUTER REAR VIEW MIRROR ASSY RH

(a) Disconnect the mirror connector.

(b) Apply battery voltage to the mirror terminals and check operation of the mirror face, as shown in the table and illustration.

OK:

Measurement Condition	Mirror Operation
Battery positive (+) →Terminal 5 (MV) Battery negative (–) →Terminal 4 (M+)	Turns upward (A)
Battery positive (+) →Terminal 4 (M+) Battery negative (–) →Terminal 5 (MV)	Turns downward (B)
Battery positive (+) →Terminal 3 (MH) Battery negative (–) →Terminal 4 (M+)	Turns right (C)
Battery positive (+) →Terminal 4 (M+) Battery negative (–) →Terminal 3 (MH)	Turns left (D)

If the result is not as specified, replace the mirror assy.