OUTER REAR VIEW MIRROR


REPLACEMENT

70123–01

HINT:

- The installation procedures are the removal procedures in reverse order. However, only installation procedures requiring additional information are included.
- Use the same procedures for the RH side and LH side.
- The procedures listed below are for the LH side.


1. **REMOVE FRONT DOOR INSIDE HANDLE BEZEL LH** (See page 75–9)
2. **REMOVE FRONT DOOR LOWER FRAME BRACKET GARNISH LH** (See page 75–9)
3. **REMOVE DOOR PULL HANDLE** (See page 75–9)
4. **REMOVE FRONT ARMREST BASE PANEL UPPER LH** (See page 75–9)
5. **REMOVE FRONT DOOR TRIM BOARD SUB–ASSY LH** (See page 75–9)

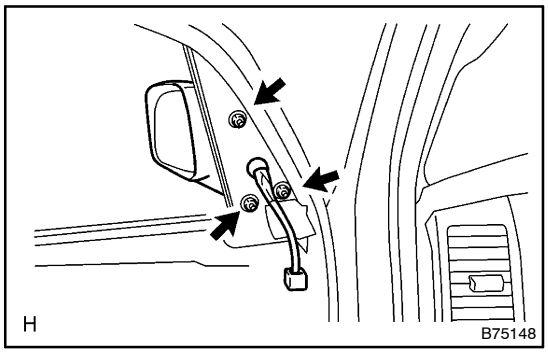

6. REMOVE OUTER REAR VIEW MIRROR ASSY

(a) Disconnect the connector.

(b) Remove the 3 nuts and mirror.

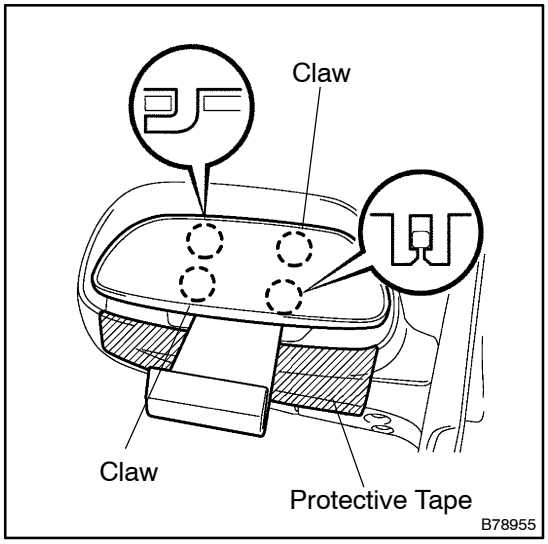


7. REMOVE OUTER MIRROR COVER


(a) Using a moulding remover, disengage the 2 claws and outer rear view mirror.

HINT:

Apply protective tape to the mirror body.

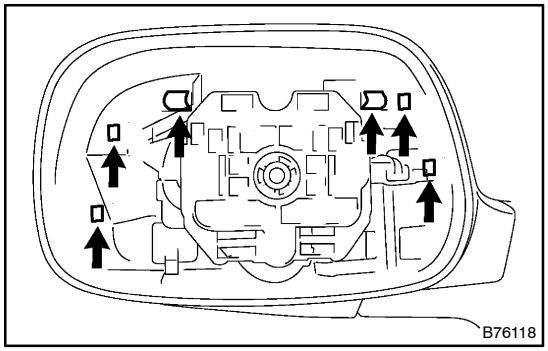


(b) Disengage the 6 claws and remove the mirror cover.

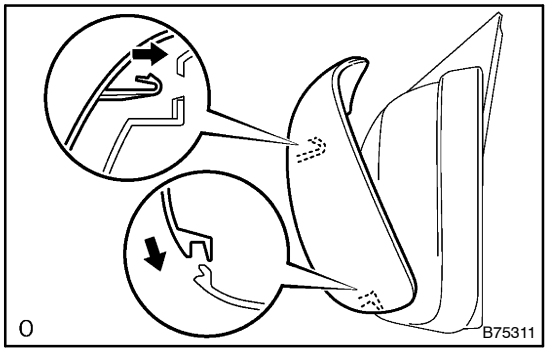

8. INSTALL OUTER MIRROR COVER


(a) Install the mirror cover, as shown in the illustration.

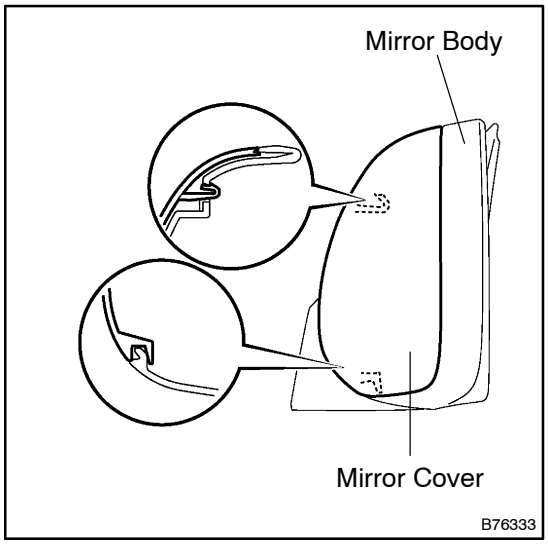


(b) After installing the outer mirror cover, check that there is no gap between the cover and mirror body.

HINT:

If there is a gap between the cover and body, noise will occur during driving.

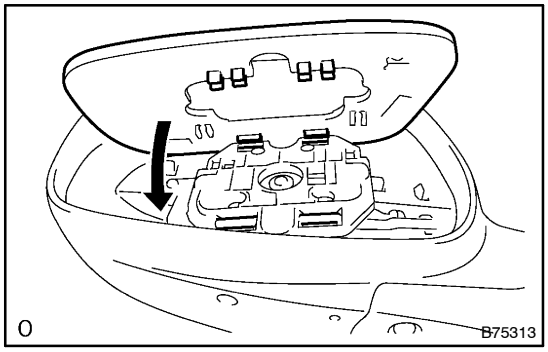

(c) Install the outer mirror, as shown in the illustration.

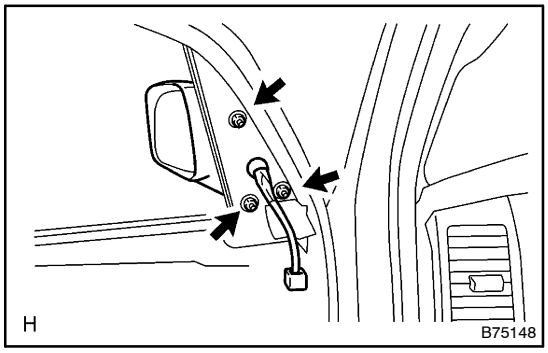

9. INSTALL OUTER REAR VIEW MIRROR ASSY

(a) Install the mirror with the 3 nuts.

Torque: 5.5 N·m (56 kgf·cm, 49 in.·lbf)