COMBINATION METER ASSY

710LE–01

OVERHAUL


NOTICE:

When disassembling the combination meter assy, eliminate static electricity by touching the vehicle body to prevent the components from being damaged.

HINT:


- Installation is in the reverse order of removal.
- COMPONENTS: (SEE PAGE 71–1

1. REMOVE INSTRUMENT PANEL SUB–ASSY W/PASSENGER AIRBAG ASSY
(SEE PAGE 71–7)

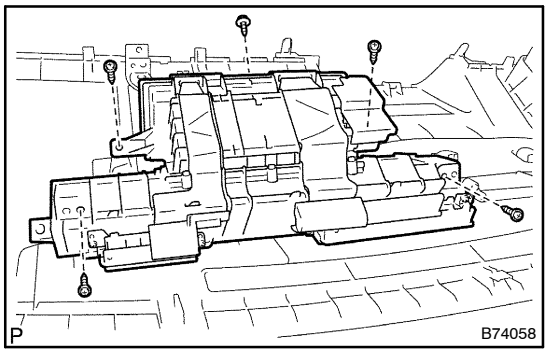


2. REMOVE COMBINATION METER ASSY

(a) Remove the 5 screws and then the combination meter assy.

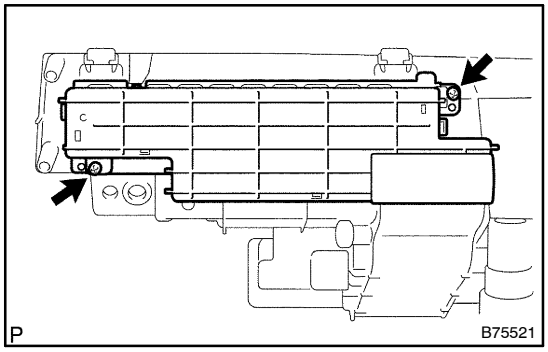


3. REMOVE COMBINATION METER COVER NO.1

(a) Remove the 2 screws.

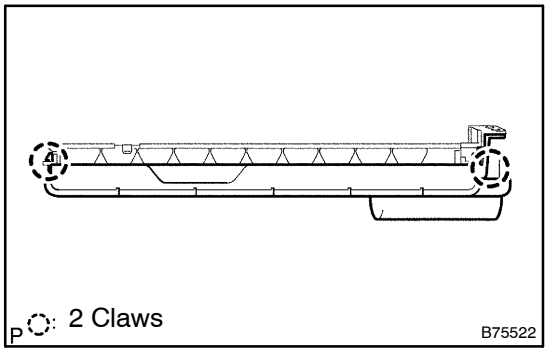

(b) Disengage the 2 claws and then remove the combination meter cover No.1.

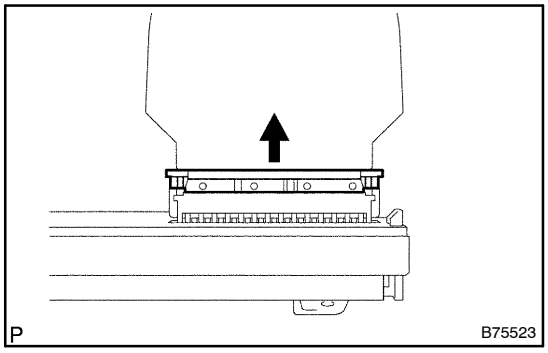


4. REMOVE METER CIRCUIT PLATE

NOTICE:


When disassembling the combination meter assy, eliminate static electricity by touching the vehicle body to prevent the components from being damaged.

(a) Pull the connector lock in the direction indicated by the arrow in the illustration and separate the meter circuit plate No.3 from the meter circuit plate.

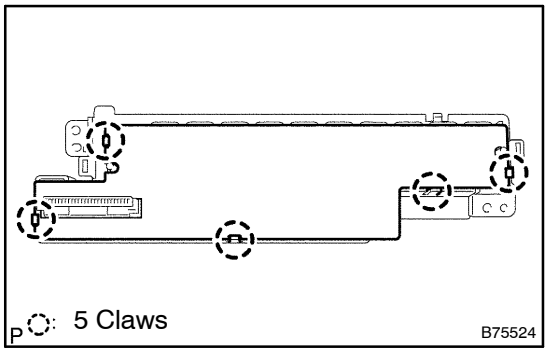

(b) Disengage the 5 claws and then remove the meter circuit plate.

5. REMOVE COMBINATION METER CASE NO.2

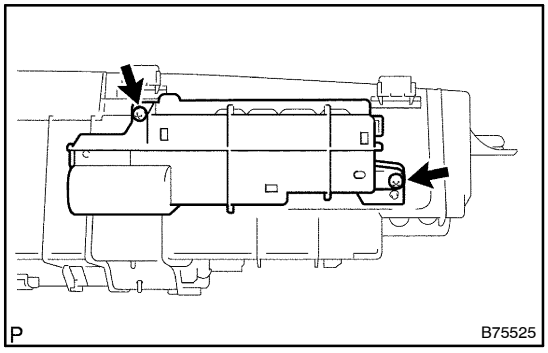


6. REMOVE COMBINATION METER COVER NO.2


NOTICE:

When disassembling the combination meter assy, eliminate static electricity by touching the vehicle body to prevent the components from being damaged.

(a) Remove the 2 screws.

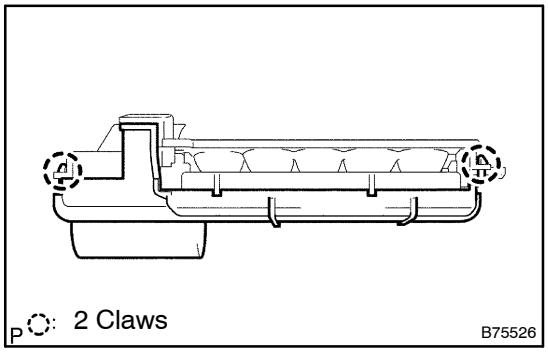

(b) Disengage the 2 claws and then remove the combination meter cover No.2.

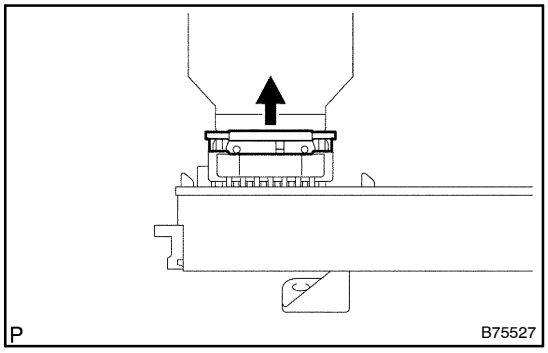


7. REMOVE METER CIRCUIT PLATE NO.2

NOTICE:


When disassembling the combination meter assy, eliminate static electricity by touching the vehicle body to prevent the components from being damaged.

(a) Pull the connector lock in the direction indicated by the arrow in the illustration and separate the meter circuit plate No.4 from the meter circuit plate No.2.

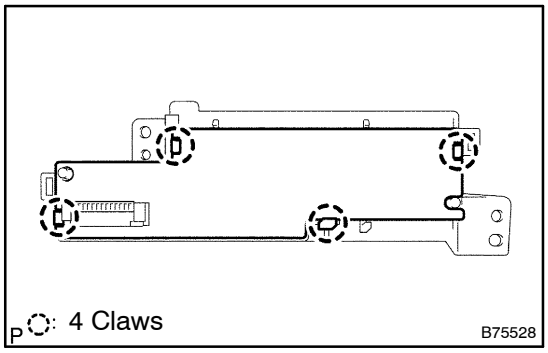


(b) Disengage the 4 claws and then remove the meter circuit plate No.2.

8. REMOVE COMBINATION METER NO.3 CASE

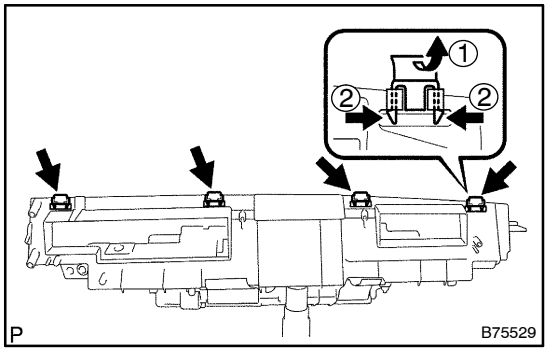


9. REMOVE COMBINATION METER REFLECTOR NO.1

(a) Remove the 4 clips.

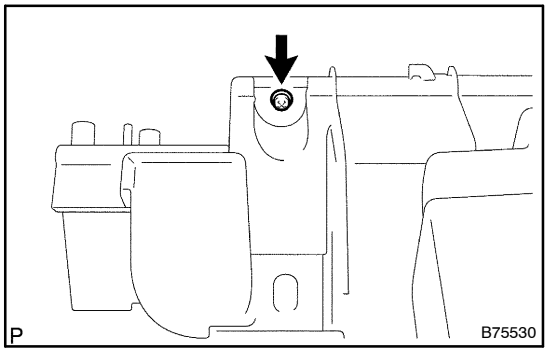

(b) Remove the screw and then the combination meter reflector No.1.

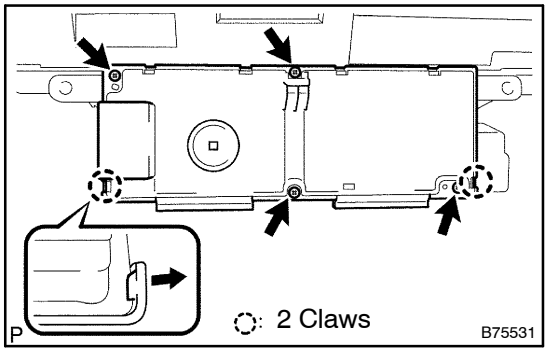


10. REMOVE COMBINATION METER COVER NO.3

(a) Remove the 4 screws.

(b) Widen the 2 claws along the outside to disengage them.

(c) Raise the cover from the bottom and remove the combination meter reflector No.1.

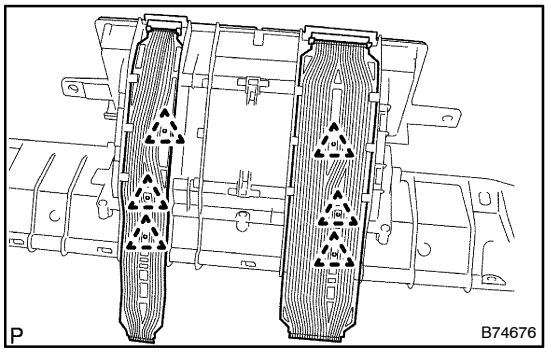


11. REMOVE COMBINATION METER ECU


NOTICE:

When disassembling the combination meter assy, eliminate static electricity by touching the vehicle body to prevent the components from being damaged.

(a) Disengage the 6 clamps from the meter circuit plate No.2 and the meter circuit plate No.3.

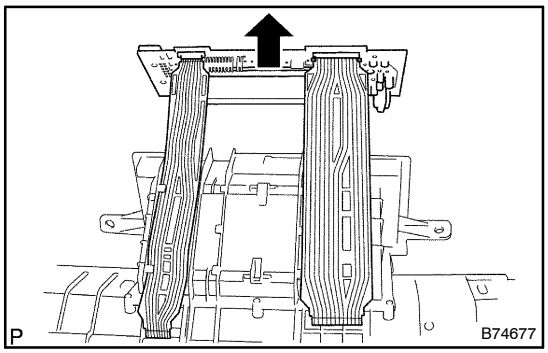

(b) Pull the combination meter ECU in the direction indicated by the arrow in the illustration and remove it.

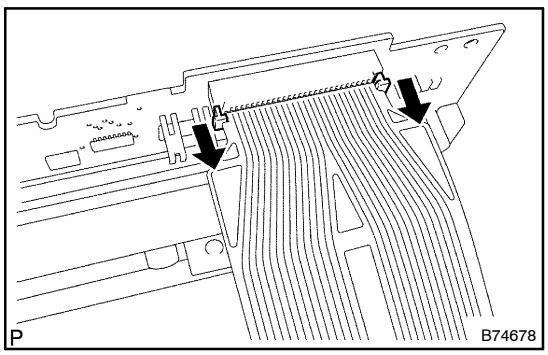


12. REMOVE METER CIRCUIT PLATE NO.3

NOTICE:

When disassembling the combination meter assy, eliminate static electricity by touching the vehicle body to prevent the components from being damaged.

(a) Pull the connector lock in the direction indicated by the arrow in the illustration and remove the meter circuit plate No.3.

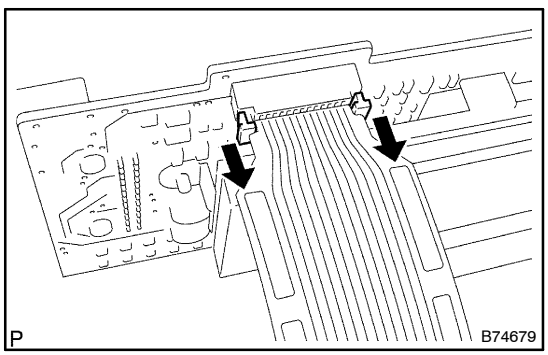

13. REMOVE METER CIRCUIT PLATE NO.4

NOTICE:

When disassembling the combination meter assy, eliminate static electricity by touching the vehicle body to prevent the components from being damaged.

(a) Pull the connector lock in the direction indicated by the arrow in the illustration and remove the meter circuit plate No.4.

14. REMOVE COMBINATION METER CASE

15. INSTALL INSTRUMENT PANEL SUB–ASSY W/PASSENGER AIRBAG ASSY (SEE PAGE 71–7)