CLOCK ASSY


REPLACEMENT

710LG–01

HINT:

- Installation is in the reverse order of removal.
- COMPONENTS: SEE PAGE 71–1

1. **REMOVE INSTRUMENT PANEL REGISTER ASSY NO.1 (SEE PAGE 71–7)**
2. **REMOVE INSTRUMENT PANEL FINISH PANEL SUB–ASSY LOWER (SEE PAGE 71–7)**
3. **REMOVE INSTRUMENT PANEL FINISH PANEL SUB–ASSY UPPER (SEE PAGE 71–7)**
4. **REMOVE INSTRUMENT PANEL REGISTER ASSY NO.3 (SEE PAGE 71–7)**
5. **REMOVE INSTRUMENT PANEL REGISTER ASSY NO.4 (SEE PAGE 71–7)**
6. **REMOVE MULTI–DISPLAY ASSY (SEE PAGE 67–7)**

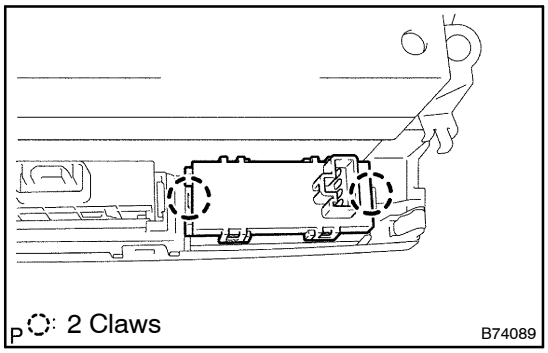

7. **REMOVE CLOCK ASSY**

(a) Disengage the 2 claws and then remove the clock assy.