
750U3–01

OVERHAUL


HINT:

- The installation procedures are the removal procedures in reverse order. However, only installation procedures requiring additional information are included.
- A bolt without a torque specification is shown in the standard bolt chart (see page 03–2).

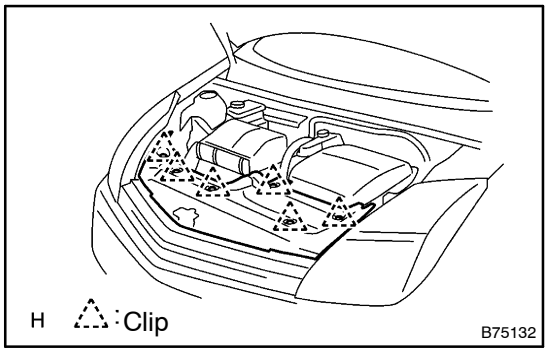

1. REMOVE RADIATOR SUPPORT OPENING COVER

(a) Remove the 6 clips and radiator support opening cover.

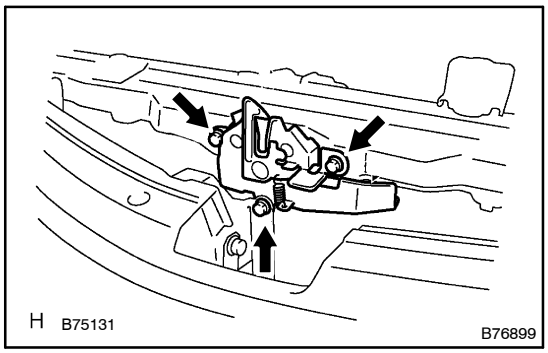

2. REMOVE HOOD LOCK ASSY

(a) Remove the 3 bolts and hood lock.

(b) Remove the lock control cable.

3. REMOVE HOOD SUPPORT ROD

(a) Remove the rod.

(b) Using a clip remover, remove the horuder and retainer.

4. REMOVE HOOD INSULATOR

(a) Using s clip remover, remove the 6 clips and insulator.

5. REMOVE HOOD LOCK CONTROL CABLE ASSY


(a) Remove the front bumper cover (see page 76–2).

(b) LHD:
Remove the front fender liner LH (see page 76–2).


(c) RHD:
Remove the front fender liner RH (see page 76–2).

(d) Using the screwdriver, disconnect the cable clamps as shown in the illustration.

HINT:
Tape the screwdriver tip before use.

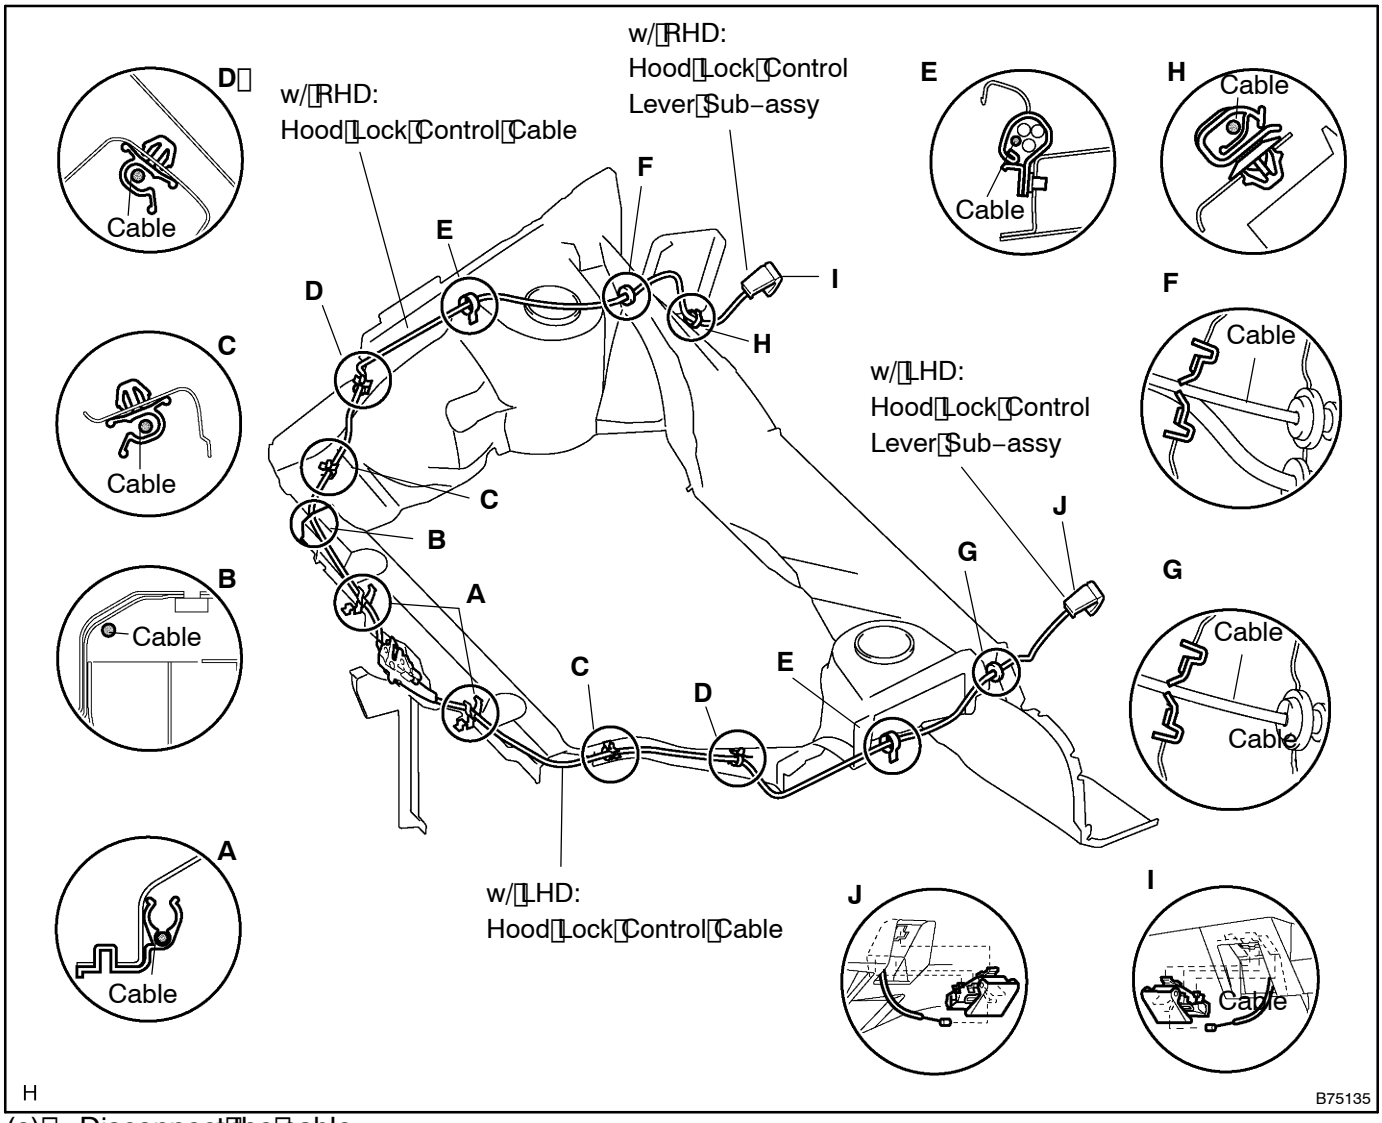

(e) Disconnect the cable.

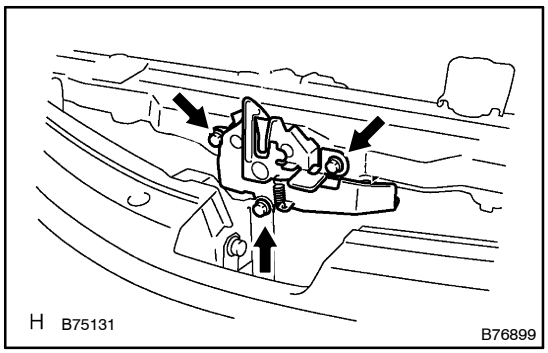

6. INSTALL HOOD LOCK ASSY

(a) Connect the hood lock control cable.

(b) Install the lock with the 3 bolts.

Torque: 8.0 N·m (82 kgf·cm, 71 in.·lbf)

(c) Adjust the hood lock (see page 75–2).