FUEL LID LOCK CONTROL ASSY

7616C–01

REPLACEMENT

HINT:

A bolt without a torque specification is shown in the standard bolt chart (see page 03–2).

1. REMOVE FUEL LID LOCK OPEN LEVER SUB–ASSY


(a) Remove the front seat (see page 72–2).

(b) Remove the rear seat (see page 72–9).

(c) Remove the center pillar garnish lower (see page 76–29).

(d) Remove the quarter trim panel lower (see page 76–29).

(e) Remove the quarter trim panel upper (see page 76–29).

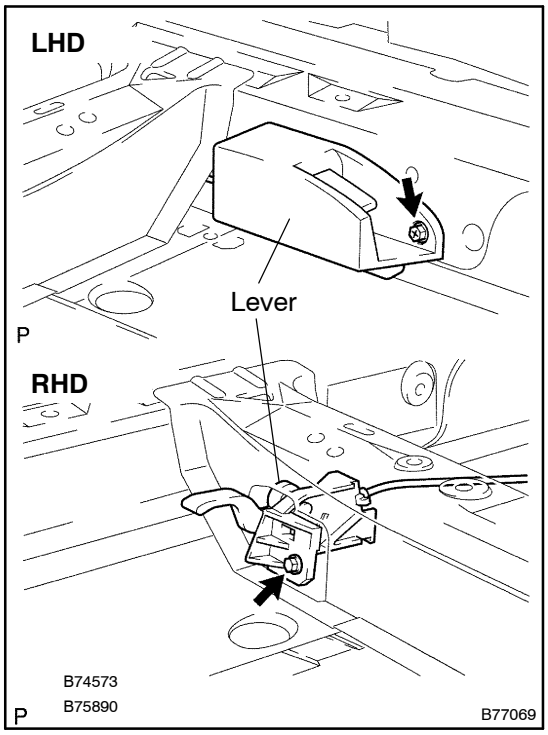


(f) w/ LHD:
Remove the screw and fuel lever.


(g) w/ RHD:
Remove the bolt and fuel lever.

(h) Remove the cable.


2. REMOVE FUEL LID LOCK CONTROL CABLE SUB–ASSY

(a) Remove the cable from the clamps at the location shown in the illustration.

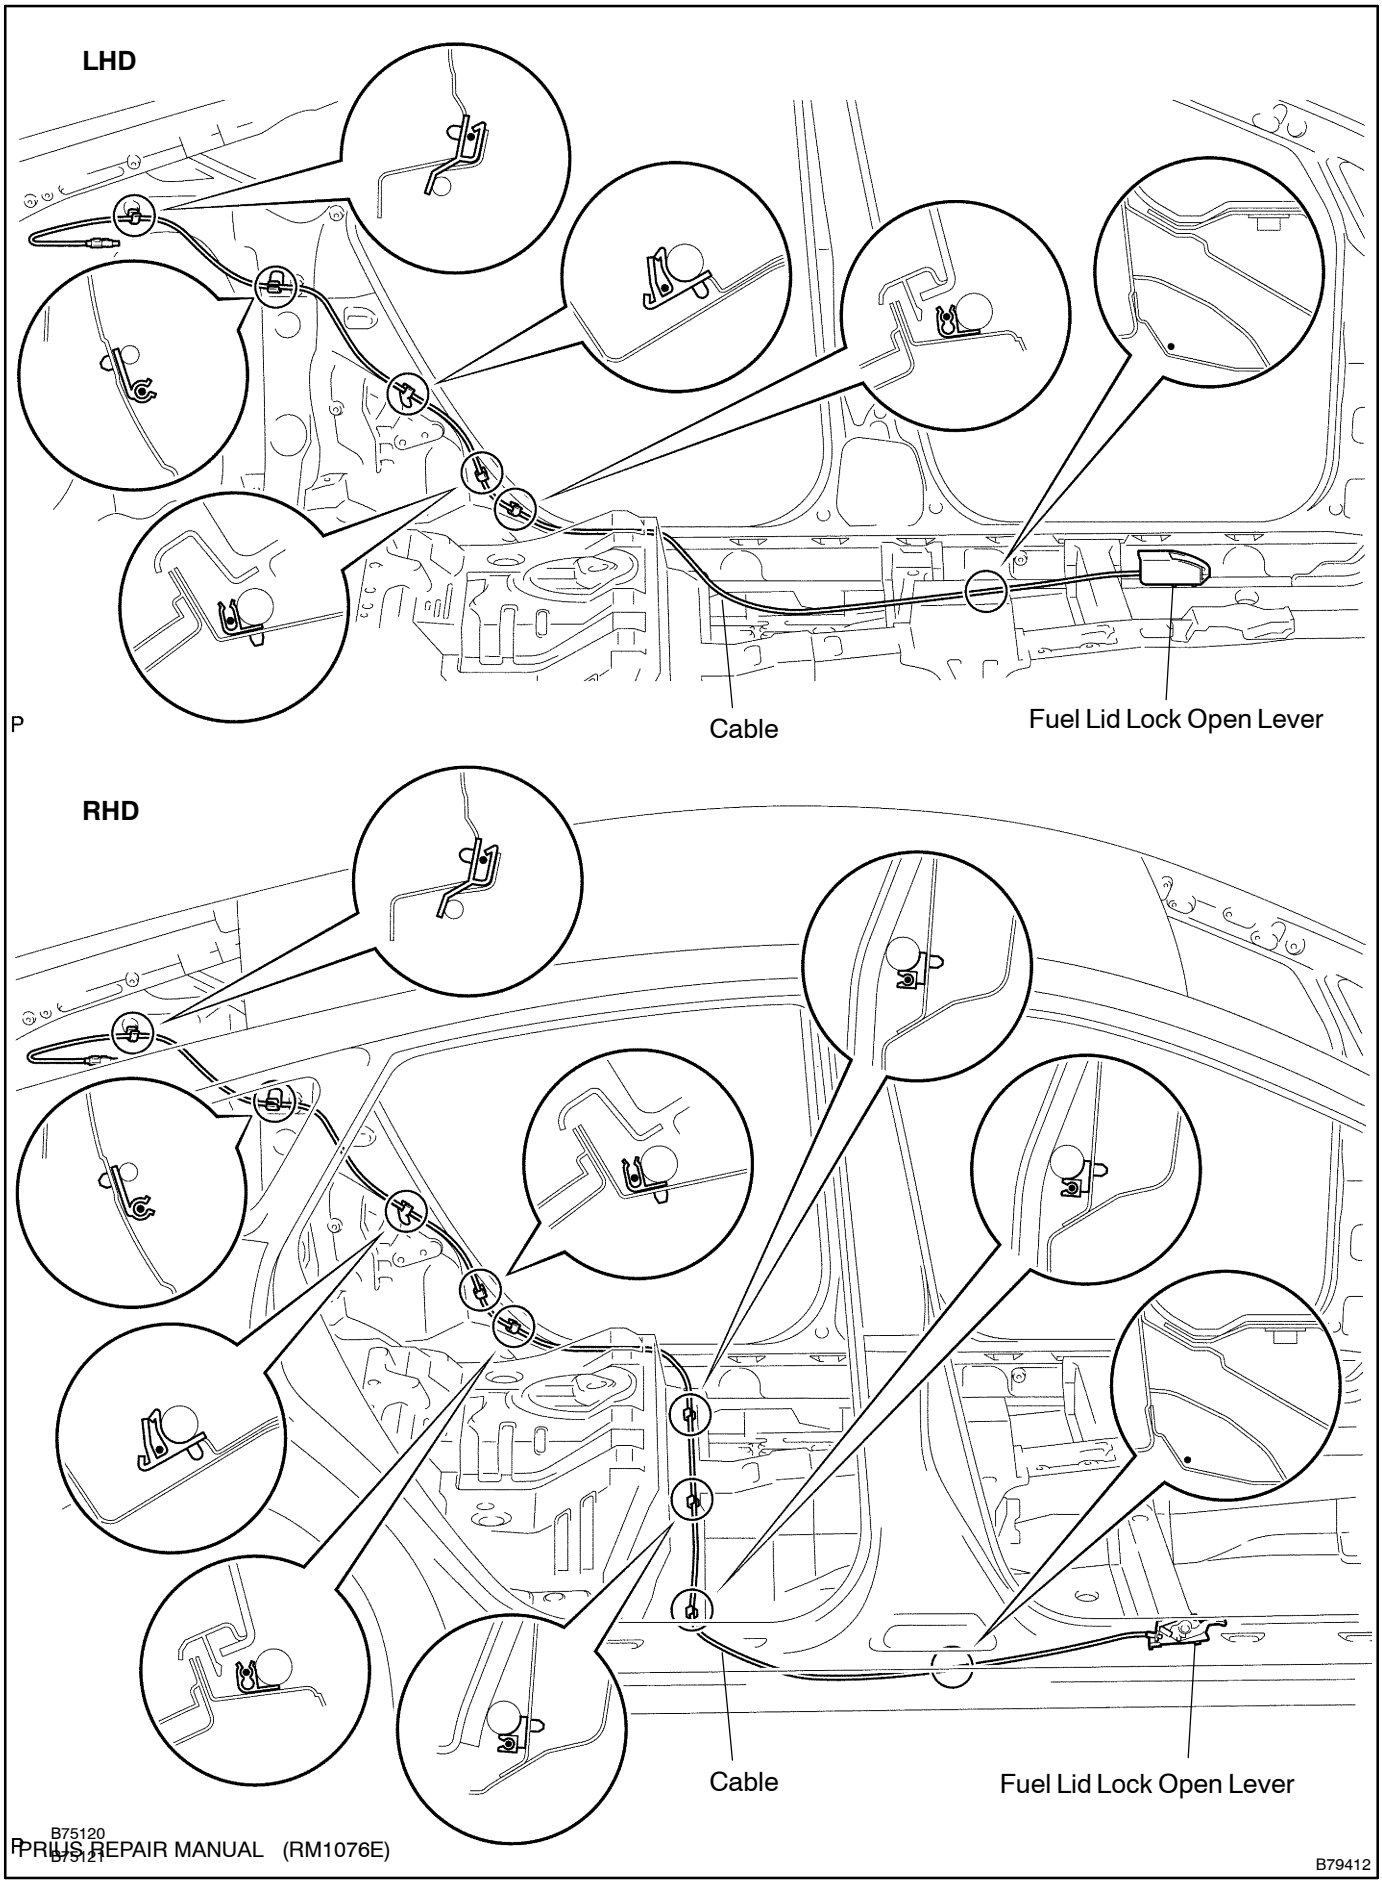

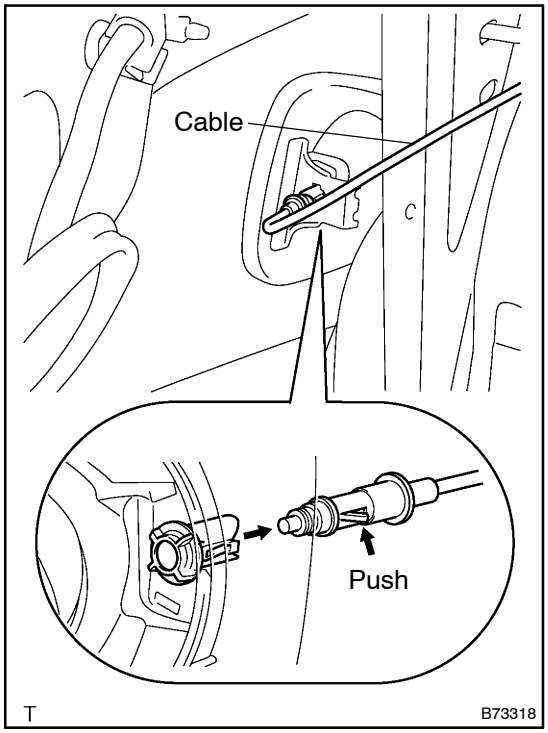


(b) Disengage the claw and remove the cable.

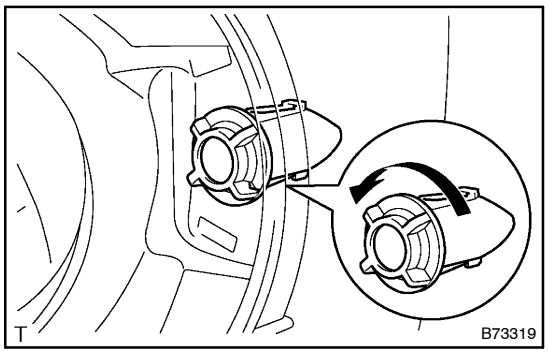


3. REMOVE FUEL FILLER OPENING LID LOCK RETAINER

(a) Remove the fuel filler opening lock retainer, as shown in the illustration.

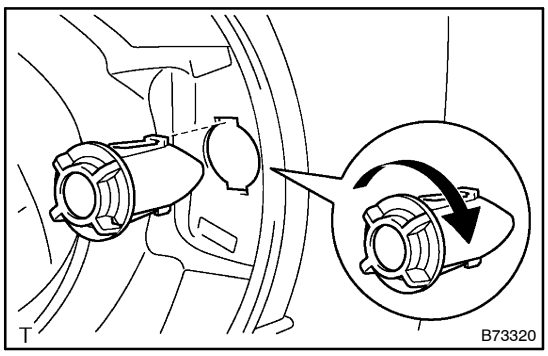

4. INSTALL FUEL FILLER OPENING LID LOCK RETAINER

(a) Install the fuel filler opening lock retainer, as shown in the illustration.

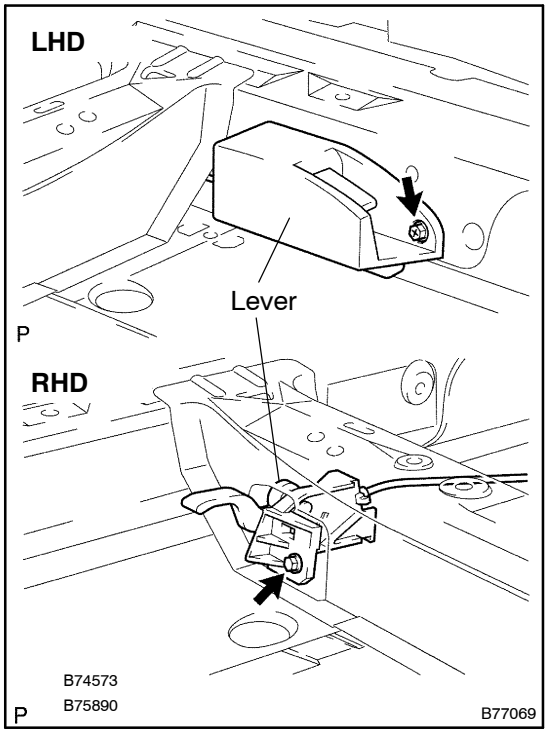

5. INSTALL FUEL LID LOCK OPEN LEVER SUB–ASSY

(a) Install the cable.

(b) w/ LHD:
Install the lever with the screw.

(c) w/ RHD:
Install the lever with the bolt.

(d) Install the quarter trim panel upper (see page 76–29).

(e) Install the quarter trim panel lower (see page 76–29).

(f) Install the center pillar garnish lower (see page 76–29).

(g) Install the rear seat (see page 72–9).

(h) Install the front seat (see page 72–2).