
7616S–01

REPLACEMENT

HINT:

- The installation procedures are the removal procedures in reverse order. However, only installation procedures requiring additional information are included.
- A bolt without a torque specification is shown in the standard bolt chart (see page 03–2).

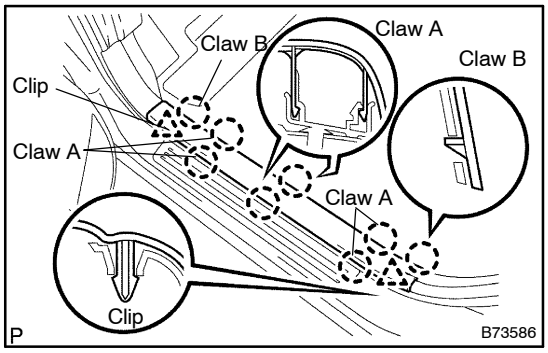

1. REMOVE FRONT DOOR SCUFF PLATE LH

(a) Using a screwdriver, disengage the 6 claws labeled A and 2 claws labeled B, remove the 2 clips and scuff plate.


HINT:

Tape the screwdriver tip before use.

2. REMOVE FRONT DOOR SCUFF PLATE RH

HINT:

Use the same procedures described for the LH side.

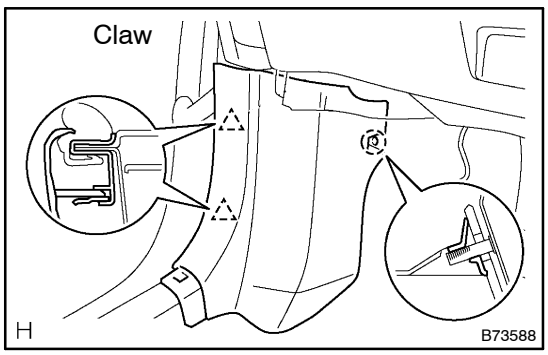

3. REMOVE COWL SIDE TRIM BOARD LH

(a) Using a screwdriver, disengage the 2 claws and remove the trim board.

HINT:

Tape the screwdriver tip before use.


4. REMOVE COWL SIDE TRIM BOARD RH

HINT:

Use the same procedures described for the LH side.

5. REMOVE FRONT DOOR OPENING TRIM WEATHERSTRIP LH

6. REMOVE FRONT DOOR OPENING TRIM WEATHERSTRIP RH

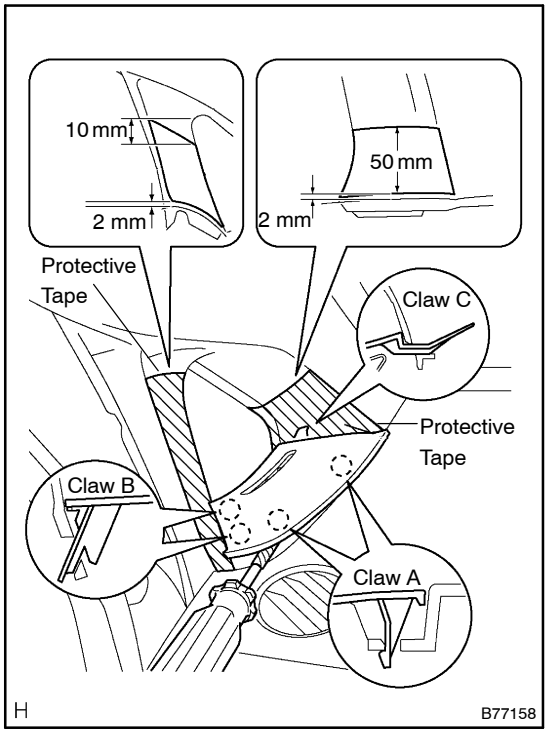

7. REMOVE FRONT PILLAR GARNISH CORNER PIECE LH

(a) Using a screwdriver, disengage the 2 claws labeled A, 2 claws labeled B and claw labeled C. Remove the corner piece.


HINT:

Tape the screwdriver tip before use.

8. REMOVE FRONT PILLAR GARNISH CORNER PIECE RH

HINT:

Use the same procedures described for the LH side.

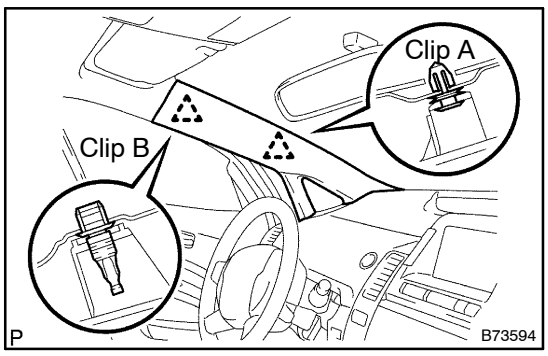


9. REMOVE FRONT PILLAR GARNISH LH

(a) Using a screwdriver, remove the clip labeled A and clip labeled B and pillar garnish..

HINT:

Tape the screwdriver tip before use.

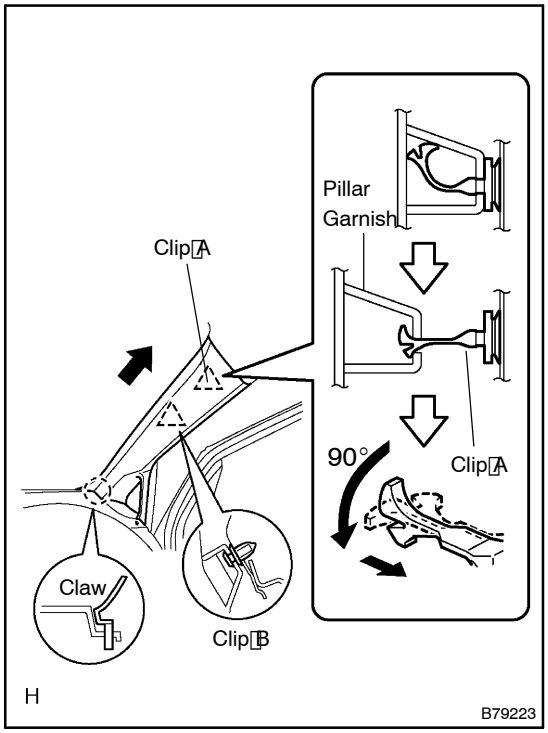

(b) w/ Curtain shield airbag:

(1) Using a screwdriver, disengage the clips clip labeled A and clip labeled B.

HINT:

Tape the screwdriver tip before use.


(c) Remove the pillar garnish.

(1) Pull the pillar garnish until the clip marked A in the illustration stretches.

(2) Turn the clip marked A in the illustration 90 degrees and remove the pillar garnish.

HINT:

Use the same procedures described for the LH side.

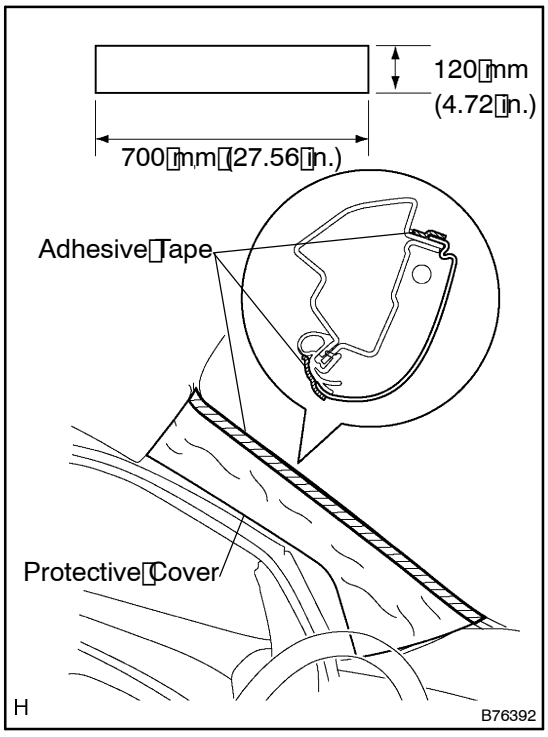

(d) w/ Curtain shield airbag:

Protect the curtain shield airbag LH.

(1) Thoroughly cover the airbag with cloth or nylon of 700 mm (27.56 in.) x 120 mm (4.72 in.) and fix the ends of the cover with adhesive tape, as shown in the illustration.

NOTICE:


Cover the curtain shield airbag with the protection cover as soon as the pillar garnish is removed.

10. REMOVE FRONT PILLAR GARNISH RH

HINT:

Use the same procedures described for the LH side.

11. REMOVE REAR SEAT CUSHION ASSY (See page 72-9)

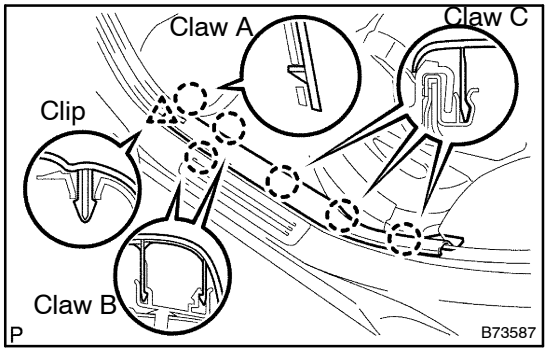

12. REMOVE REAR DOOR SCUFF PLATE LH

(a) Using a screwdriver, disengage the claw labeled A, 2 claws labeled B and 3 claws labeled C. Remove the scuff plate.


HINT:

Tape the screwdriver tip before use.

13. REMOVE REAR DOOR SCUFF PLATE RH

HINT:

Use the same procedures described for the LH side.

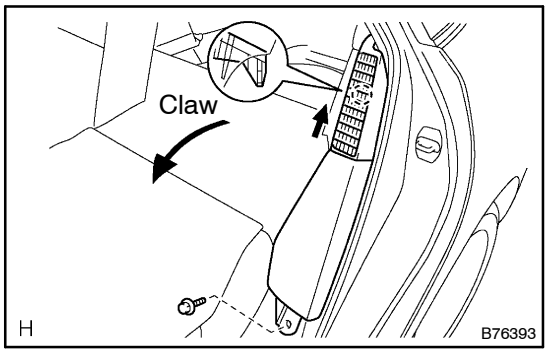

14. REMOVE REAR SIDE SEAT BACK FRAME LH

(a) Remove the bolt.

(b) Disengage the claw and remove the frame.


15. REMOVE REAR SIDE SEAT BACK FRAME RH

HINT:

Use the same procedures described for the LH side.

16. REMOVE REAR DOOR OPENING TRIM WEATHERSTRIP LH

17. REMOVE REAR DOOR OPENING TRIM WEATHERSTRIP RH

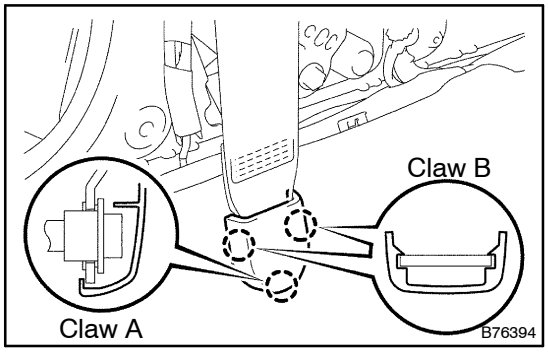

18. REMOVE LAP BELT OUTER ANCHOR COVER

(a) Using a screwdriver, disengage the claw labeled A and 2 claws labeled B and remove the anchor cover.

HINT:


Tape the screwdriver tip before use.

19. REMOVE FRONT SEAT OUTER BELT ASSY LH

(a) Remove the floor anchor bolt.

20. REMOVE FRONT SEAT OUTER BELT ASSY RH

(a) Remove the floor anchor bolt.

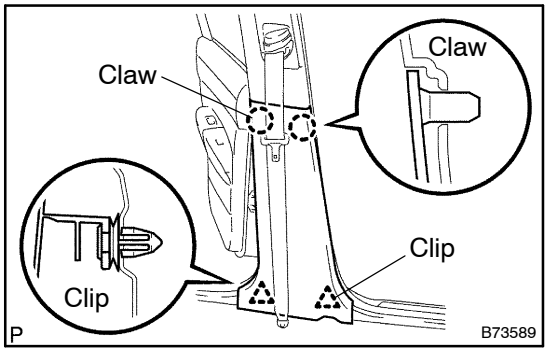

21. REMOVE CENTER PILLAR GARNISH LOWER LH

(a) Using a screwdriver, disengage the 2 claws and remove the 2 clips and garnish lower.


HINT:

Tape the screwdriver tip before use.

22. REMOVE CENTER PILLAR GARNISH LOWER RH

HINT:

Use the same procedures described for the LH side.

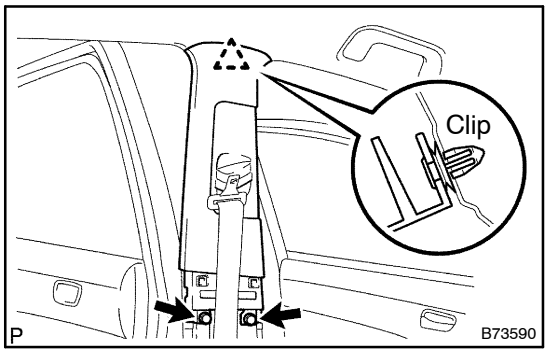

23. REMOVE CENTER PILLAR GARNISH LH

(a) Using a screwdriver, remove the clip and 2 screws and pillar garnish.

HINT:

Tape the screwdriver tip before use.

24. REMOVE CENTER PILLAR GARNISH RH

HINT:

Use the same procedures described for the LH side.

25. REMOVE REAR SEAT 3 POINT TYPE BELT ASSY OUTER

26. REMOVE REAR SEAT BELT ASSY OUTER CENTER

27. REMOVE BACK DOOR WEATHERSTRIP

28. REMOVE TONNEAU COVER ASSY


29. REMOVE REAR FLOOR BOARD NO.2

30. REMOVE REAR FLOOR BOARD NO.3

31. REMOVE REAR FLOOR BOARD NO.4

32. REMOVE DECK FLOOR BOX REAR


33. REMOVE DECK FLOOR BOX LH

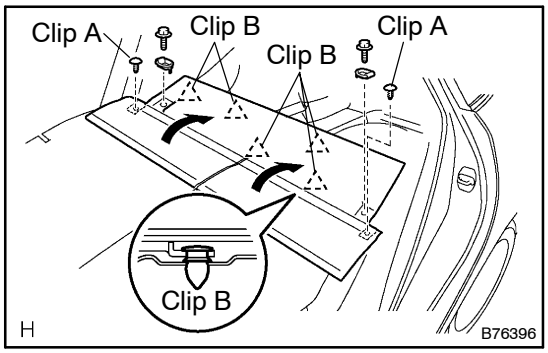

34. REMOVE REAR FLOOR BOARD NO.1

(a) Remove the 2 bolts and 2 clips labeled A.

(b) Remove the 5 clips labeled B and floor board.

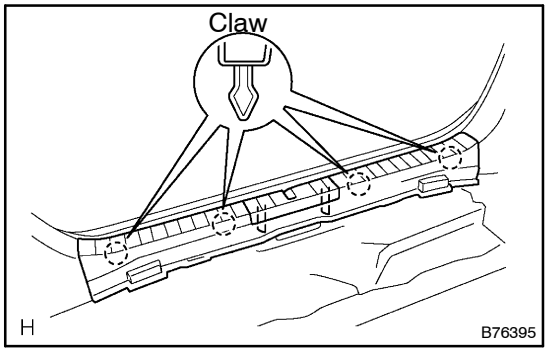


35. REMOVE DECK TRIM COVER REAR

(a) Using a screwdriver, disengage the 6 claws and remove the trim cover.

HINT:

Tape the screwdriver tip before use.

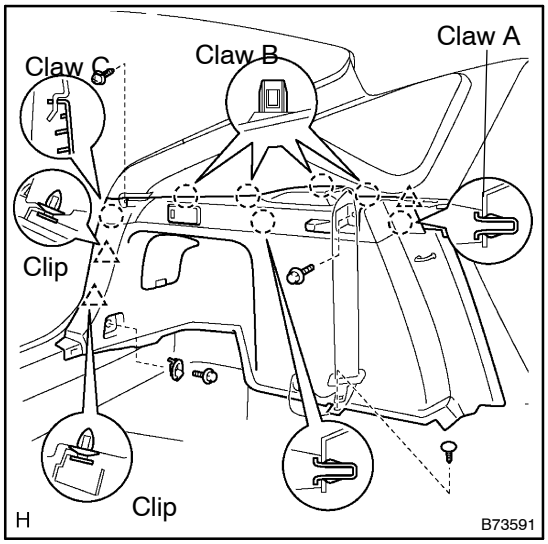


36. REMOVE DECK TRIM SIDE PANEL ASSY LH

(a) Remove the screw and 2 bolts.

(b) Using a screwdriver, disengage the claw labeled A, 4 claws labeled B and claw labeled C. Remove the 2 clips and side panel.

HINT:

Tape the screwdriver tip before use.

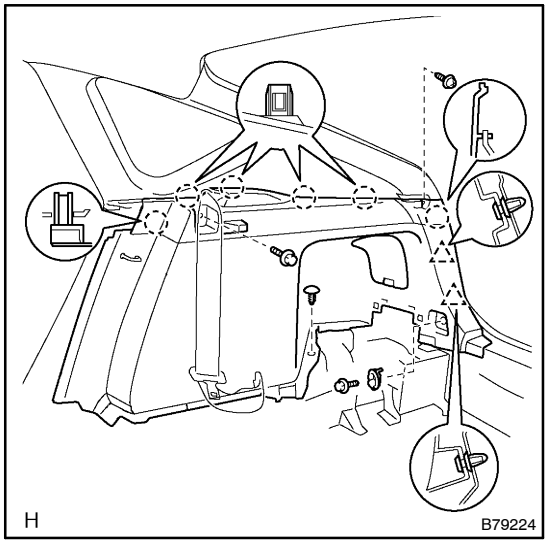


37. REMOVE DECK TRIM SIDE PANEL ASSY RH

(a) Remove the screw and 2 bolts.

(b) Using a screwdriver, disengage the claw labeled A, 4 claws labeled B, claw labeled C, Remove the 2 clips and side panel.

HINT:

Tape the screwdriver tip before use.

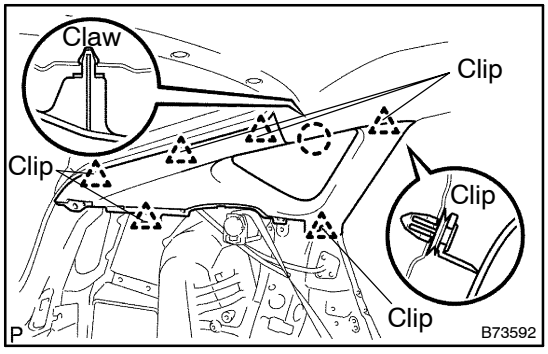

38. REMOVE ROOF SIDE GARNISH ASSY INNER LH

(a) Remove the 6 clips.

(b) Using a screwdriver, disengage the claw and remove the side garnish.


HINT:

Tape the screwdriver tip before use.

39. REMOVE ROOF SIDE GARNISH ASSY INNER RH

HINT:

Use the same procedures described for the LH side.

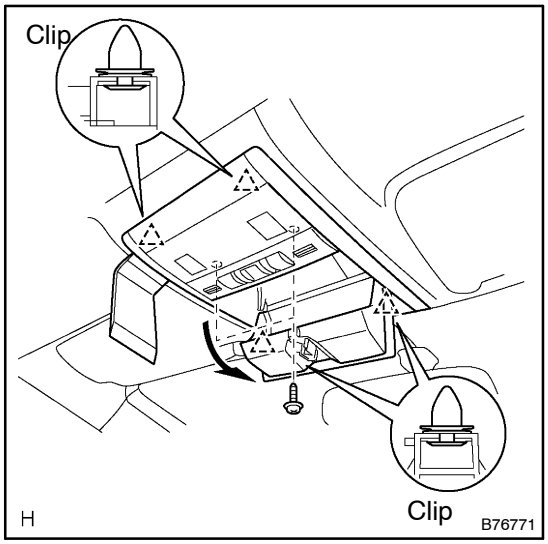


40. REMOVE MAP LAMP ASSY

(a) Remove the 2 screws.

(b) Using a moulding remover, remove the 4 clips and map lamp.

(c) Disconnect the map lamp connector.

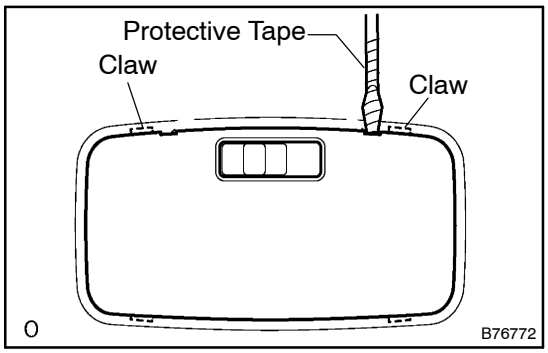


41. REMOVE ROOM LAMP ASSY NO.1

(a) Using a screwdriver, remove the map lamp lens.

HINT:

Tape the screwdriver tip before use.

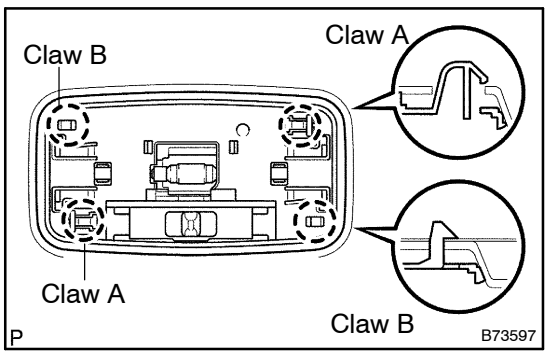


(b) Using a screwdriver, Disengage the 2 claws labeled A and 2 claws labeled B and remove the map lamp.

HINT:

Tape the screwdriver tip before use.

(c) Disconnect the map lamp connector.

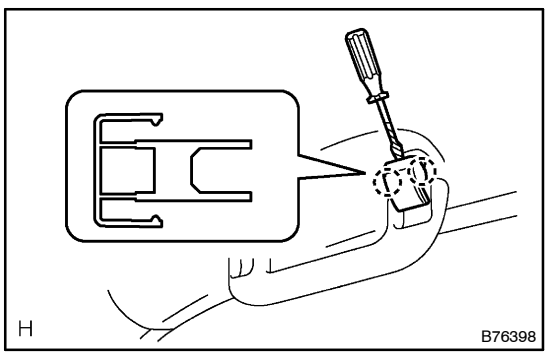


42. REMOVE ASSIST GRIP COVER

(a) Using a screwdriver, disengage the 4 claws and remove the 2 covers.

HINT:

Tape the screwdriver tip before use.

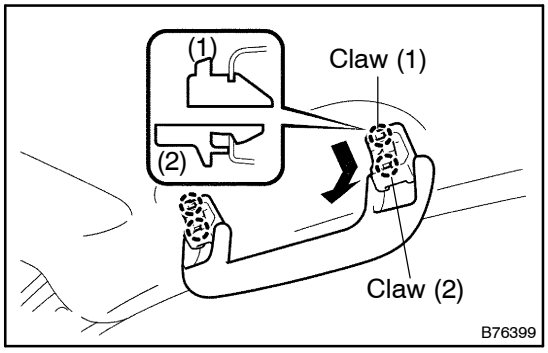


43. REMOVE ASSIST GRIP SUB–ASSY

(a) Using a screwdriver, disengage the 4 claws and assist grip.

HINT:

Tape the screwdriver tip before use.

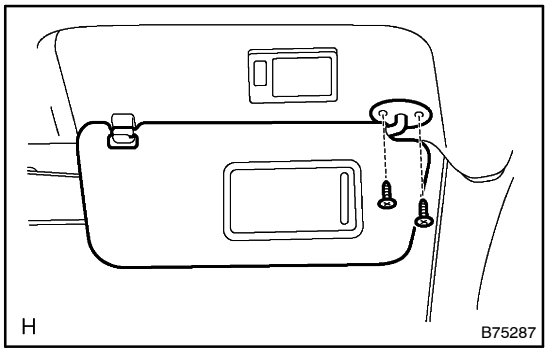

44. REMOVE LH VISOR ASSY


(a) Remove the 2 screws and visor.

(b) Disconnect the connector, remove the visor.

45. REMOVE RH VISOR ASSY


HINT:

Use the same procedures described for the LH side.

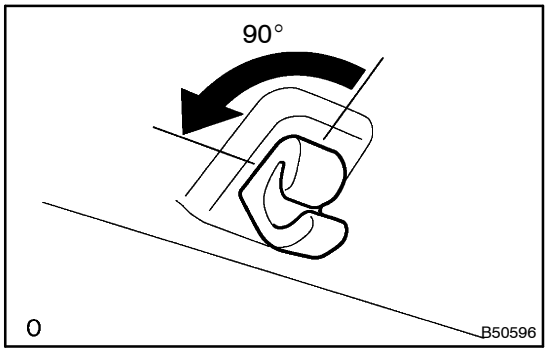

46. REMOVE VISOR HOLDER


(a) Remove the visor holder by turning it counterclockwise.

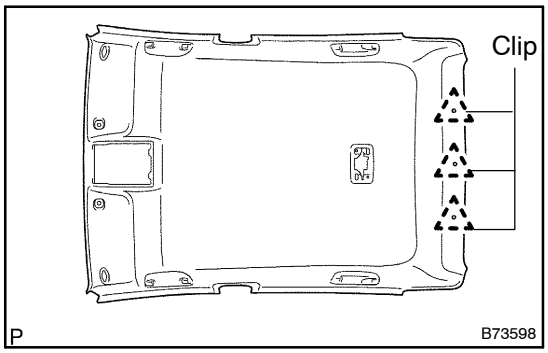

47. REMOVE ROOF HEADLINING ASSY

(a) Remove the 3 clips and headlining.

(b) Remove the silencer form the headlining.

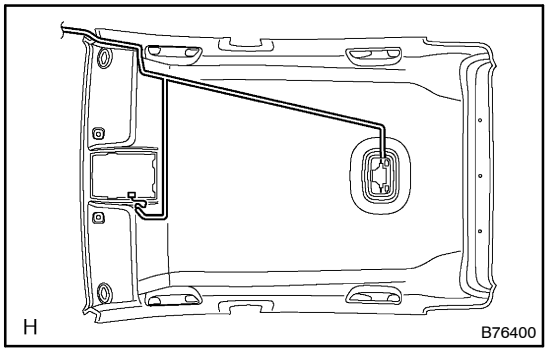

48. INSTALL ROOF HEADLINING ASSY

(a) Align the markings, and then install the wire harness with tape.

NOTICE:

Attach the roof wire harness securely.

(b) Install the roof headlining with the 3 clips.

49. INSTALL REAR SEATBELT ASSY OUT LH

(a) Install the seatbelt with the bolt.
Torque: 42 N·m (430 kgf·cm, 31 ft·lbf)

50. INSTALL REAR SEATBELT ASSY OUT RH

(a) Install the seatbelt with the bolt.
Torque: 42 N·m (430 kgf·cm, 31 ft·lbf)

51. INSTALL FRONT SEAT OUTER BELT ASSY LH

(a) Install the belt with the bolt.
Torque: 42 N·m (430 kgf·cm, 31 ft·lbf)

52. INSTALL FRONT SEAT OUTER BELT ASSY RH

(a) Install the belt with the bolt.
Torque: 42 N·m (430 kgf·cm, 31 ft·lbf)