

QUARTER WHEEL HOUSING OUTER PANEL (ASSY)


F16170A

REPLACEMENT
With the quarter panel removed.

REMOVAL

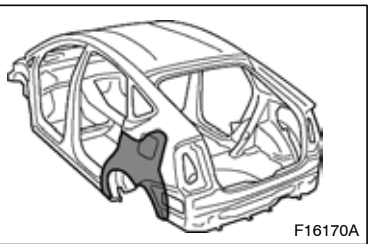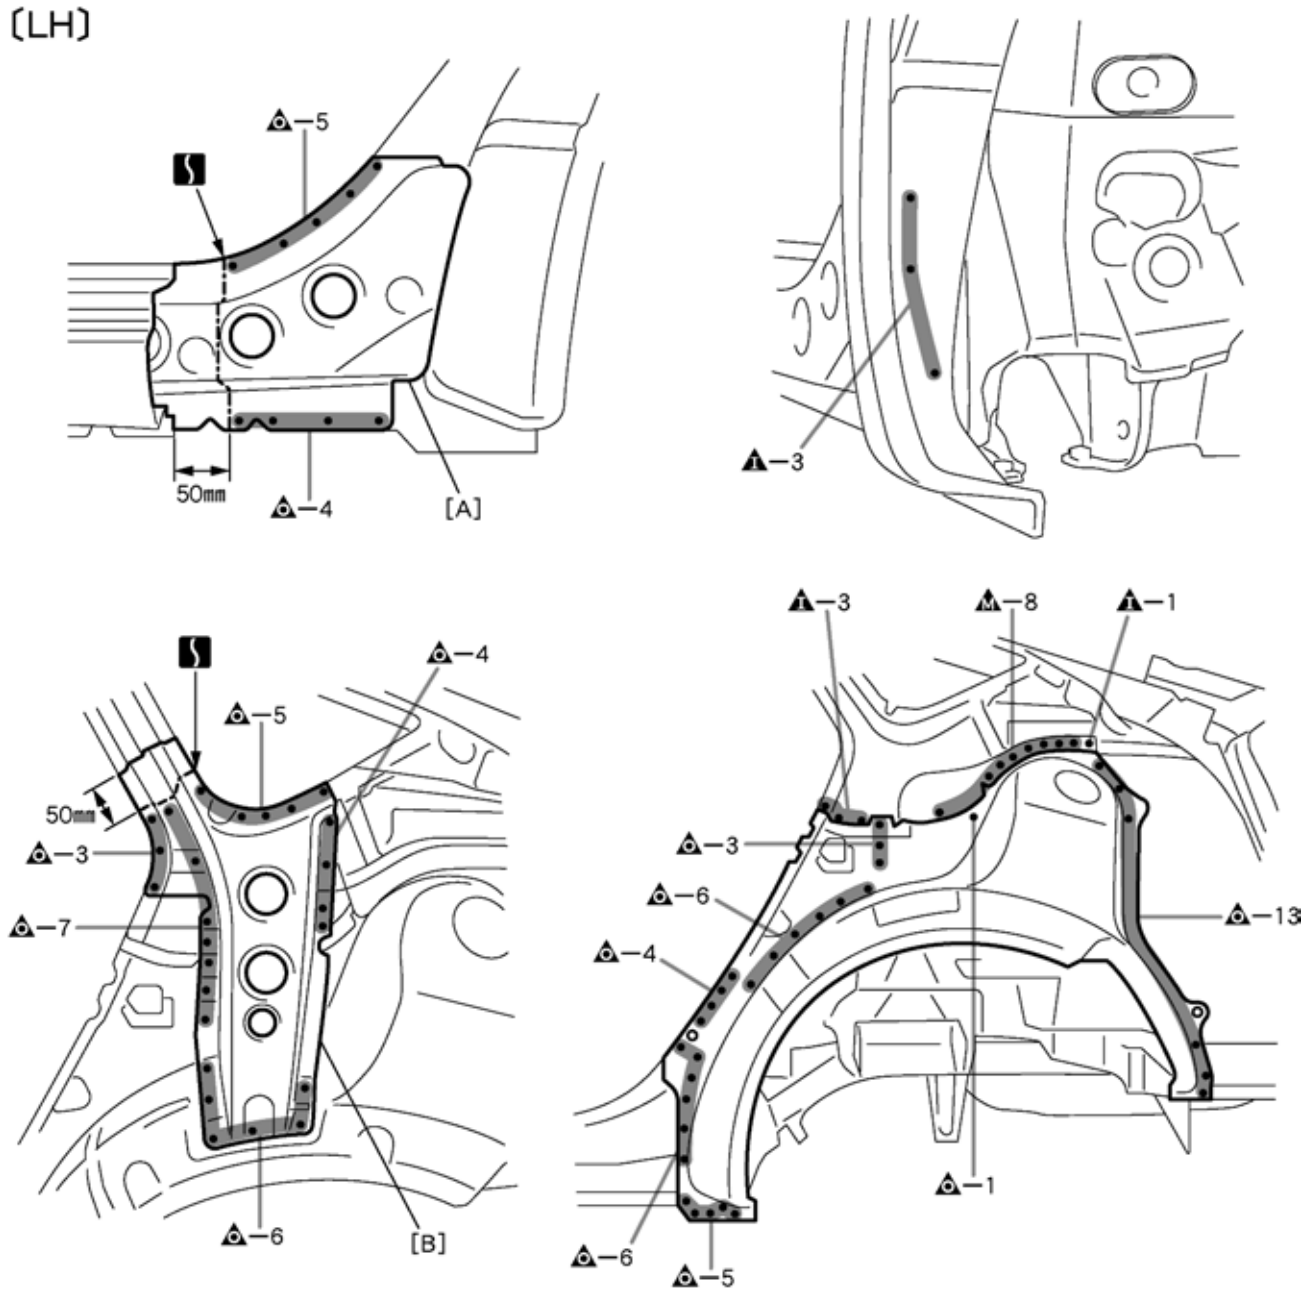


F16170

POINT
1 After removing the [A] and [B], remove the quarter wheel housing panel.

PART NAME
[A] Rocker Outer Reinforcement [B] Roof Side Outer Panel
50mm (1.97in.)

〔RH〕

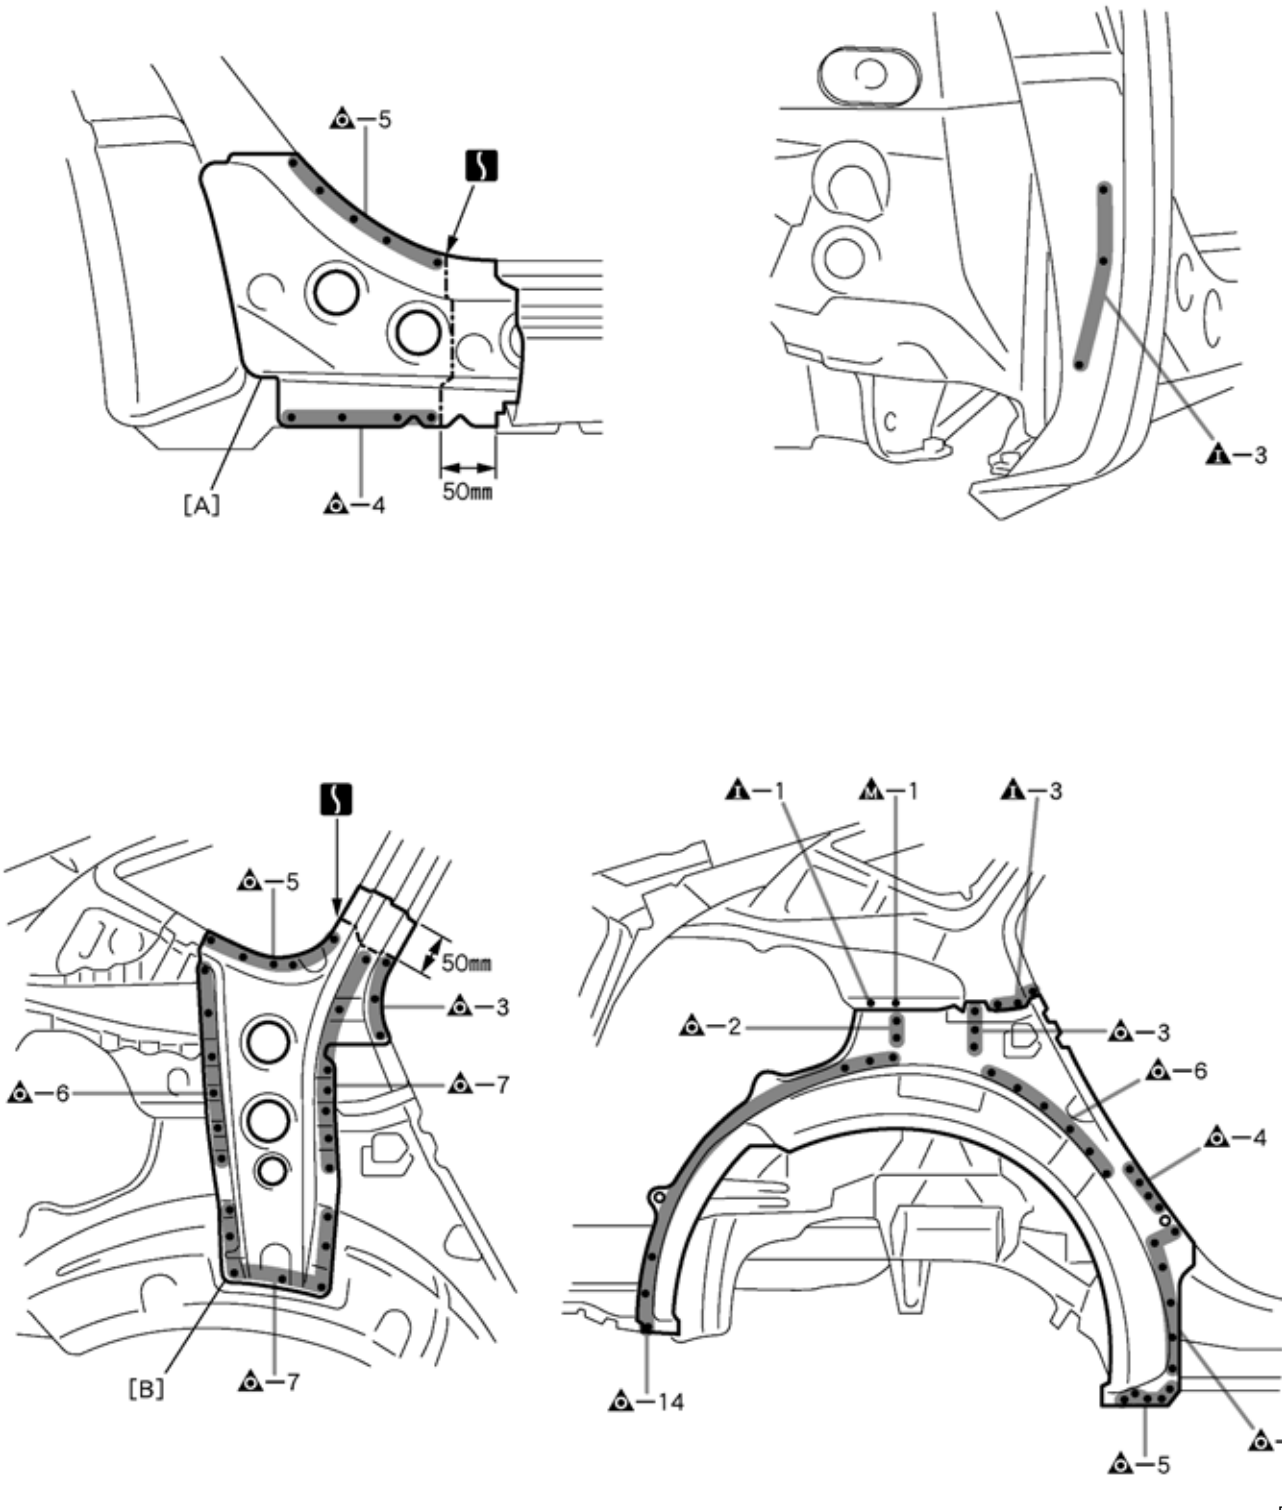


PART NAME

[A] Rocker Outer Reinforcement [B] Roof Side Outer Panel

50mm (1.97in.)

INSTALLATION

- Temporarily install the new parts and measure each part of the new parts in accordance with the body dimension diagram. (See the body dimension diagram)
- Inspect the fitting of the related parts around the new parts before welding. This affects the appearance of the finish.
- After welding, apply the polyurethane foam to the corresponding parts.
- After welding, apply body sealer and under-coating to the corresponding parts.
- After applying the top coat layer, apply anti-rust agent to the inside of the necked section structural weld spots.

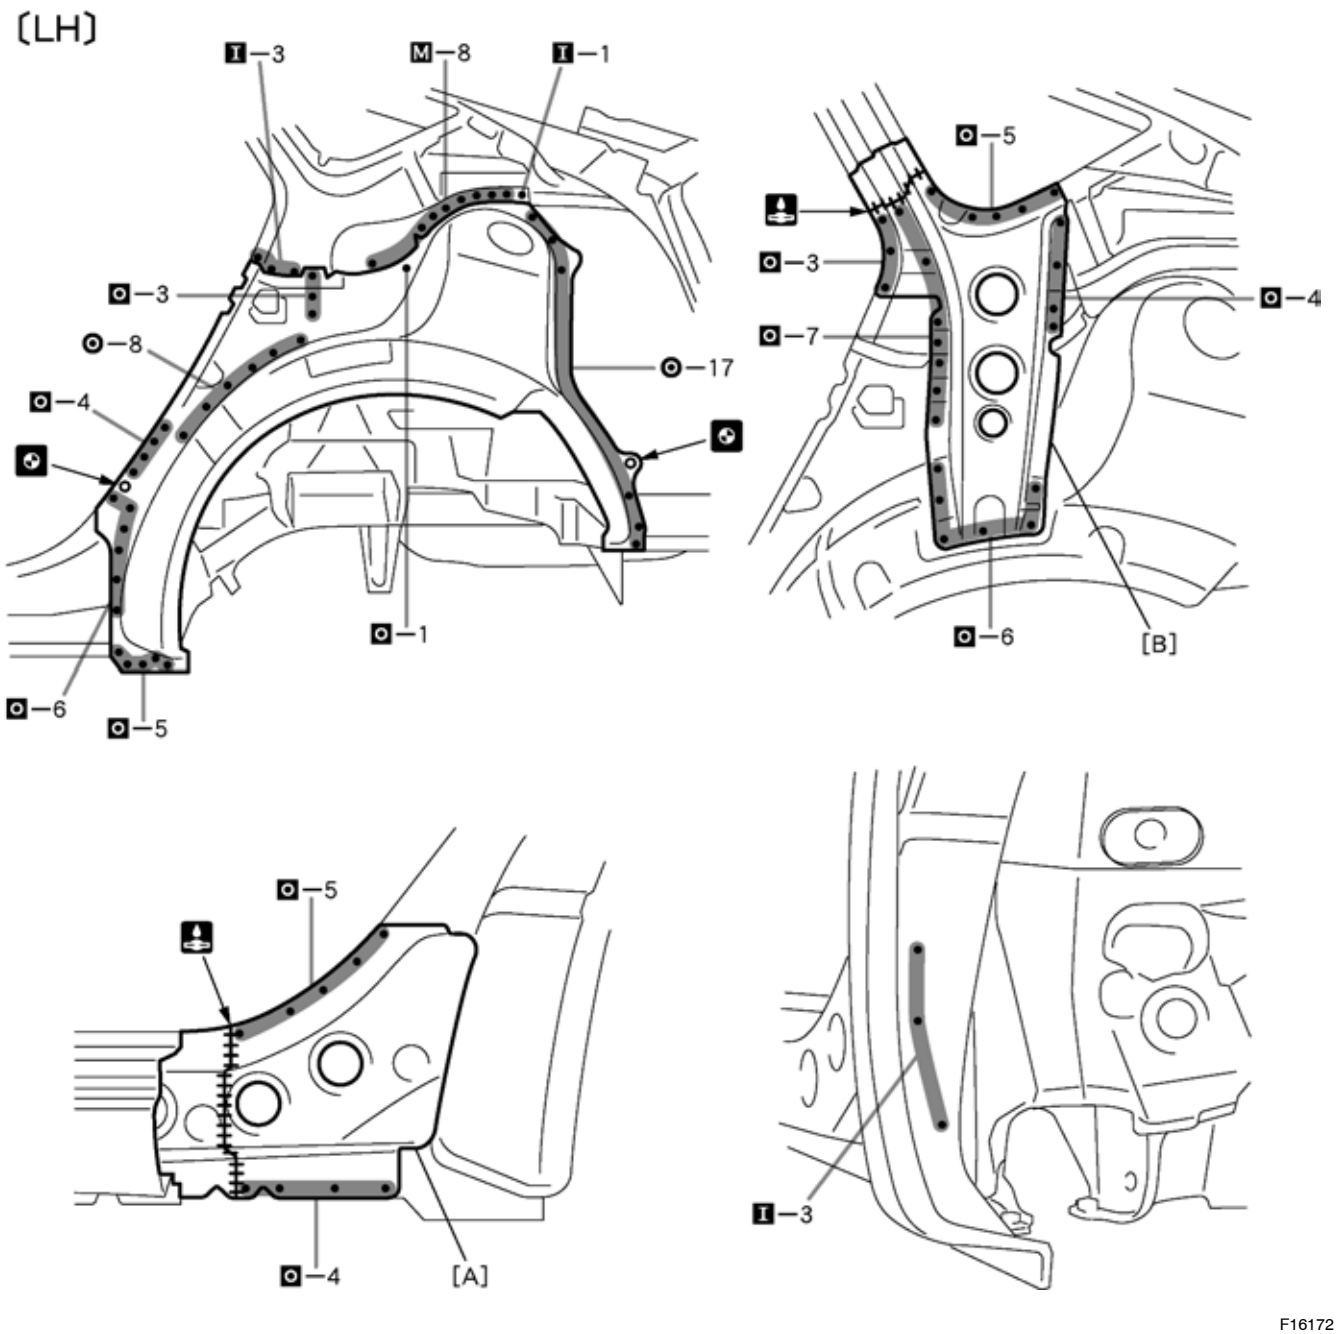


POINT

1 After welding the new parts to the vehicle, install the [A] and [B].

PART NAME

[A] Rocker Outer Reinforcement [B] Roof Side Outer Panel

(RH)

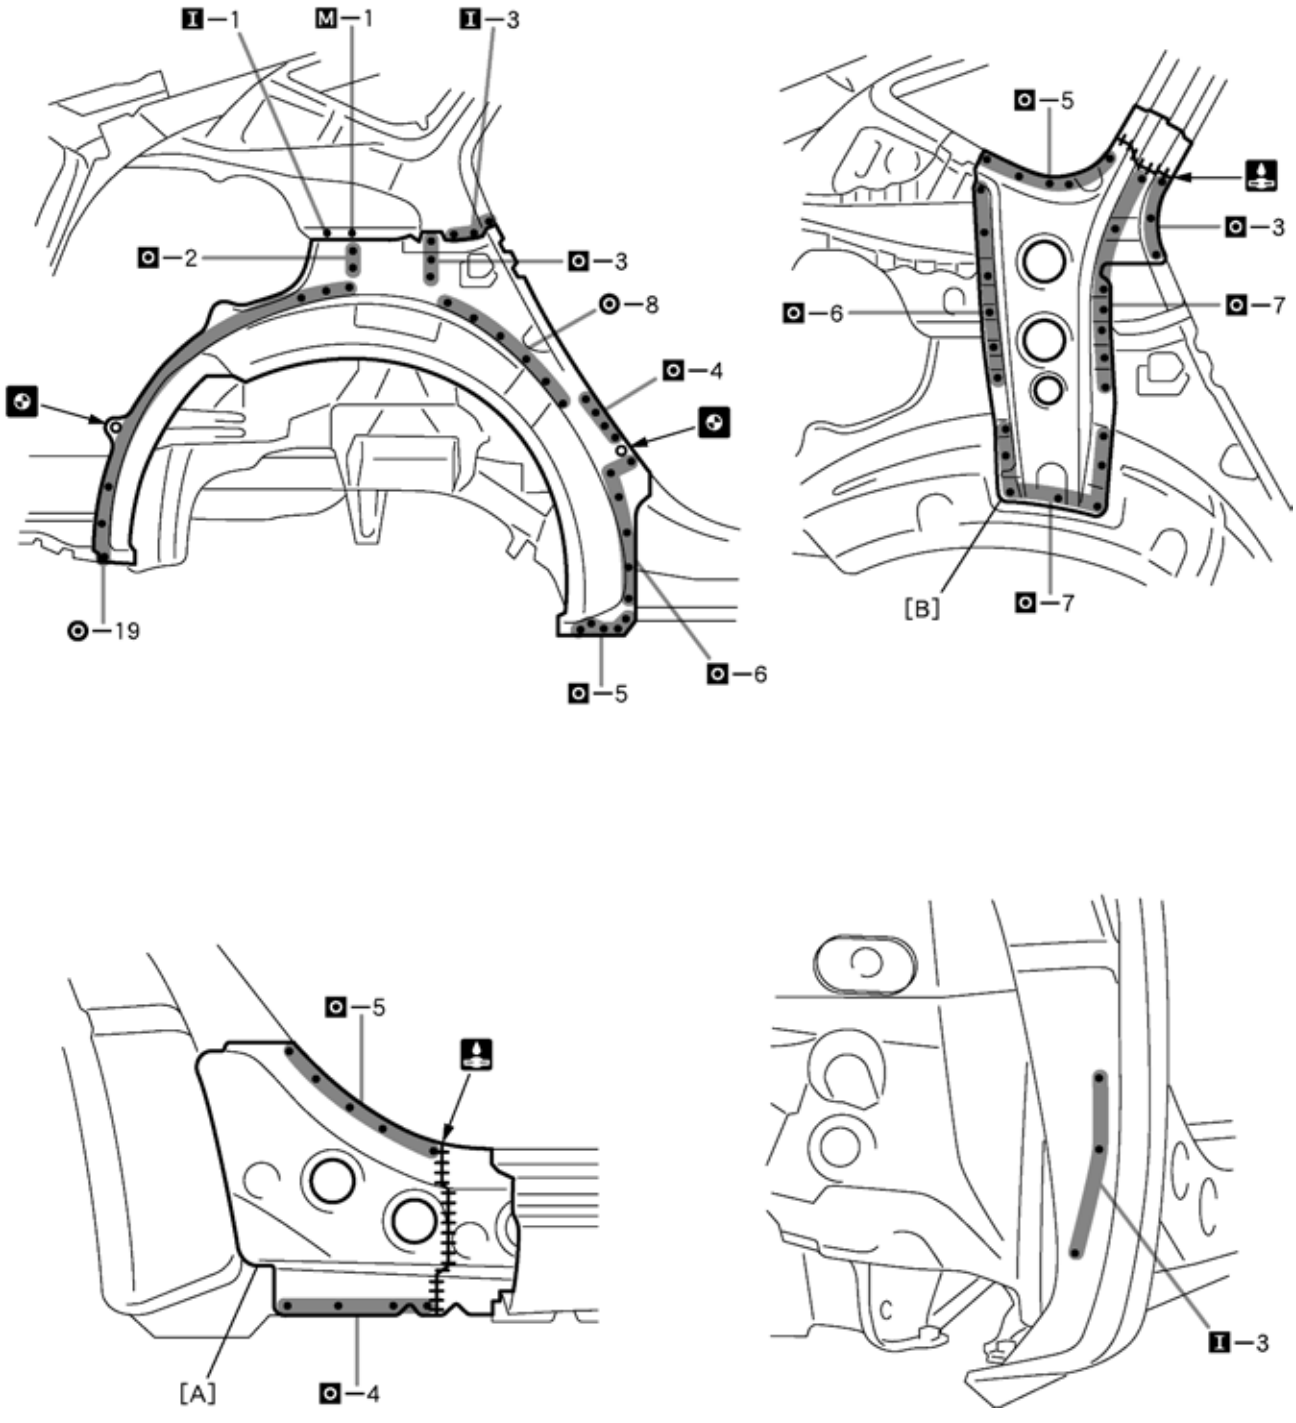

PART NAME

[A] Rocker Outer Reinforcement [B] Roof Side Outer Panel