



(IG)
15A
WASHER
2
5 3C
L
A60(B)
Front Windshield Washer
Motor and Pump Assembly
1 B
M
2 B
BR
4
A49
Junction Connector
5
6
Y
BR
12 AG2
GR
1 A
WF
WF
EW
Off
On
Front Washer Switch
EW
G11(A)
Windshield Wiper
Switch Assembly
2 A
W–B
G3
(BAT)
30A
H–LP
CLN
2
2
B
A64
Headlight Cleaner
Motor and Pump Assembly
1
R
(IG)
10A
GAUGE
2
14 3C
L
2
A48
Junction
Connector
3
A44
Headlight Cleaner Control Relay
IG
PB
FRWA
E
H
HDLO
3
6
5
4
2
1
V
R
Y
W–B
G
L
8 AG2
W–B
G
L
G
A3


(BAT)
40A
H–LP
MAIN
(ACC)
5A
ACC
(IG)
5A
ECU–IG
NO. 1
(BAT)
7. 5A
ECU–B
NO. 1
H–LP
Relay
G73(A)
Junction
Connector
A48
Junction
Connector
G59(A)
Main Body ECU
ACC
IG
BECU
HEAD
HRLY
GND1
AG1
AG2
G64
Headlight Cleaner
Switch Assembly
G9(A)
Headlight Dimmer Switch
Assembly
Light Control
Switch
EL
T
H
OFF
Tail
Head
G6
G5


A 44
Gray

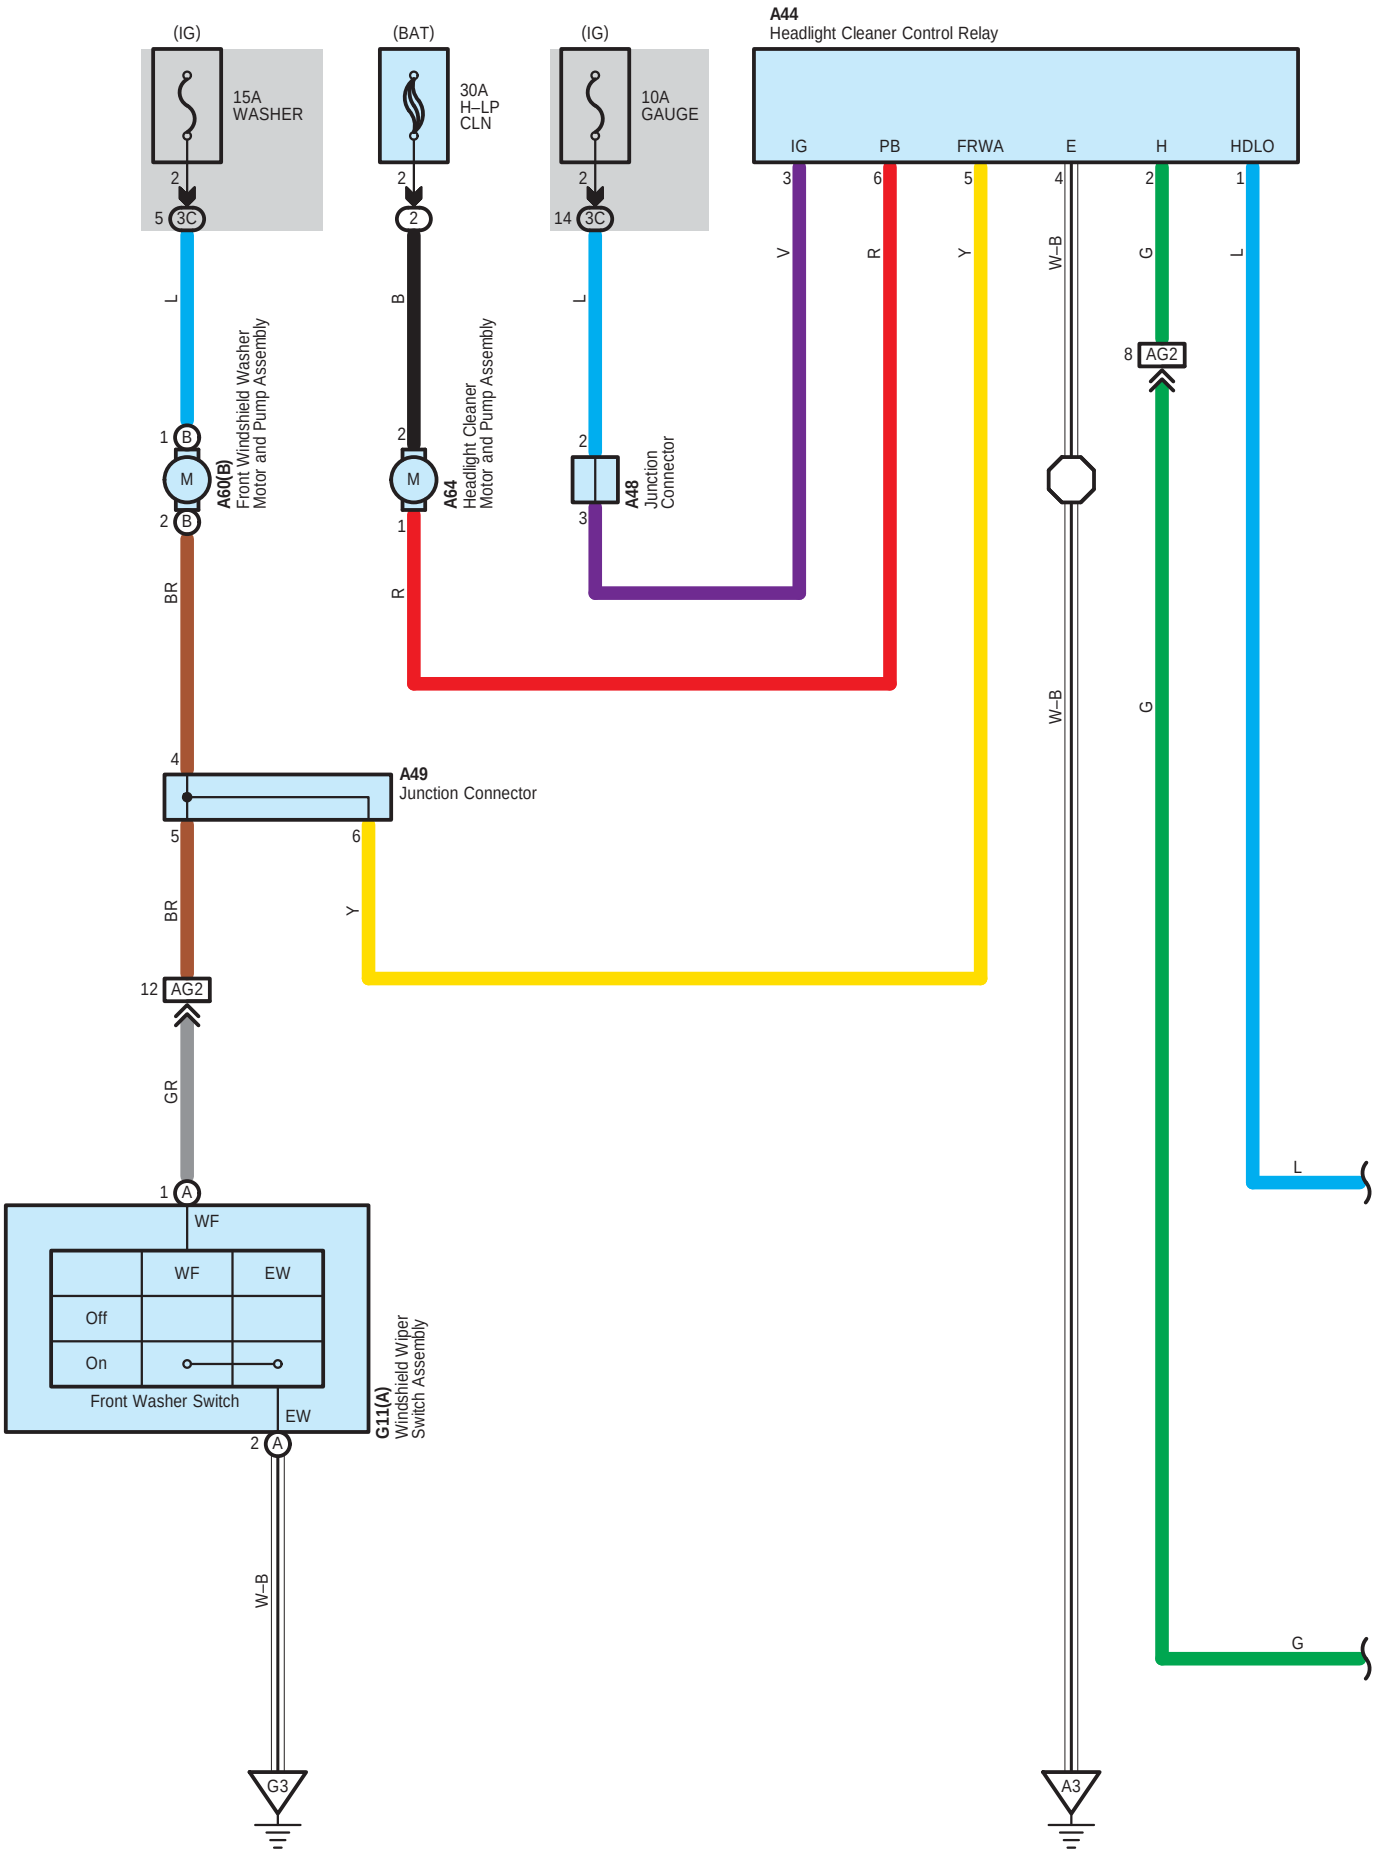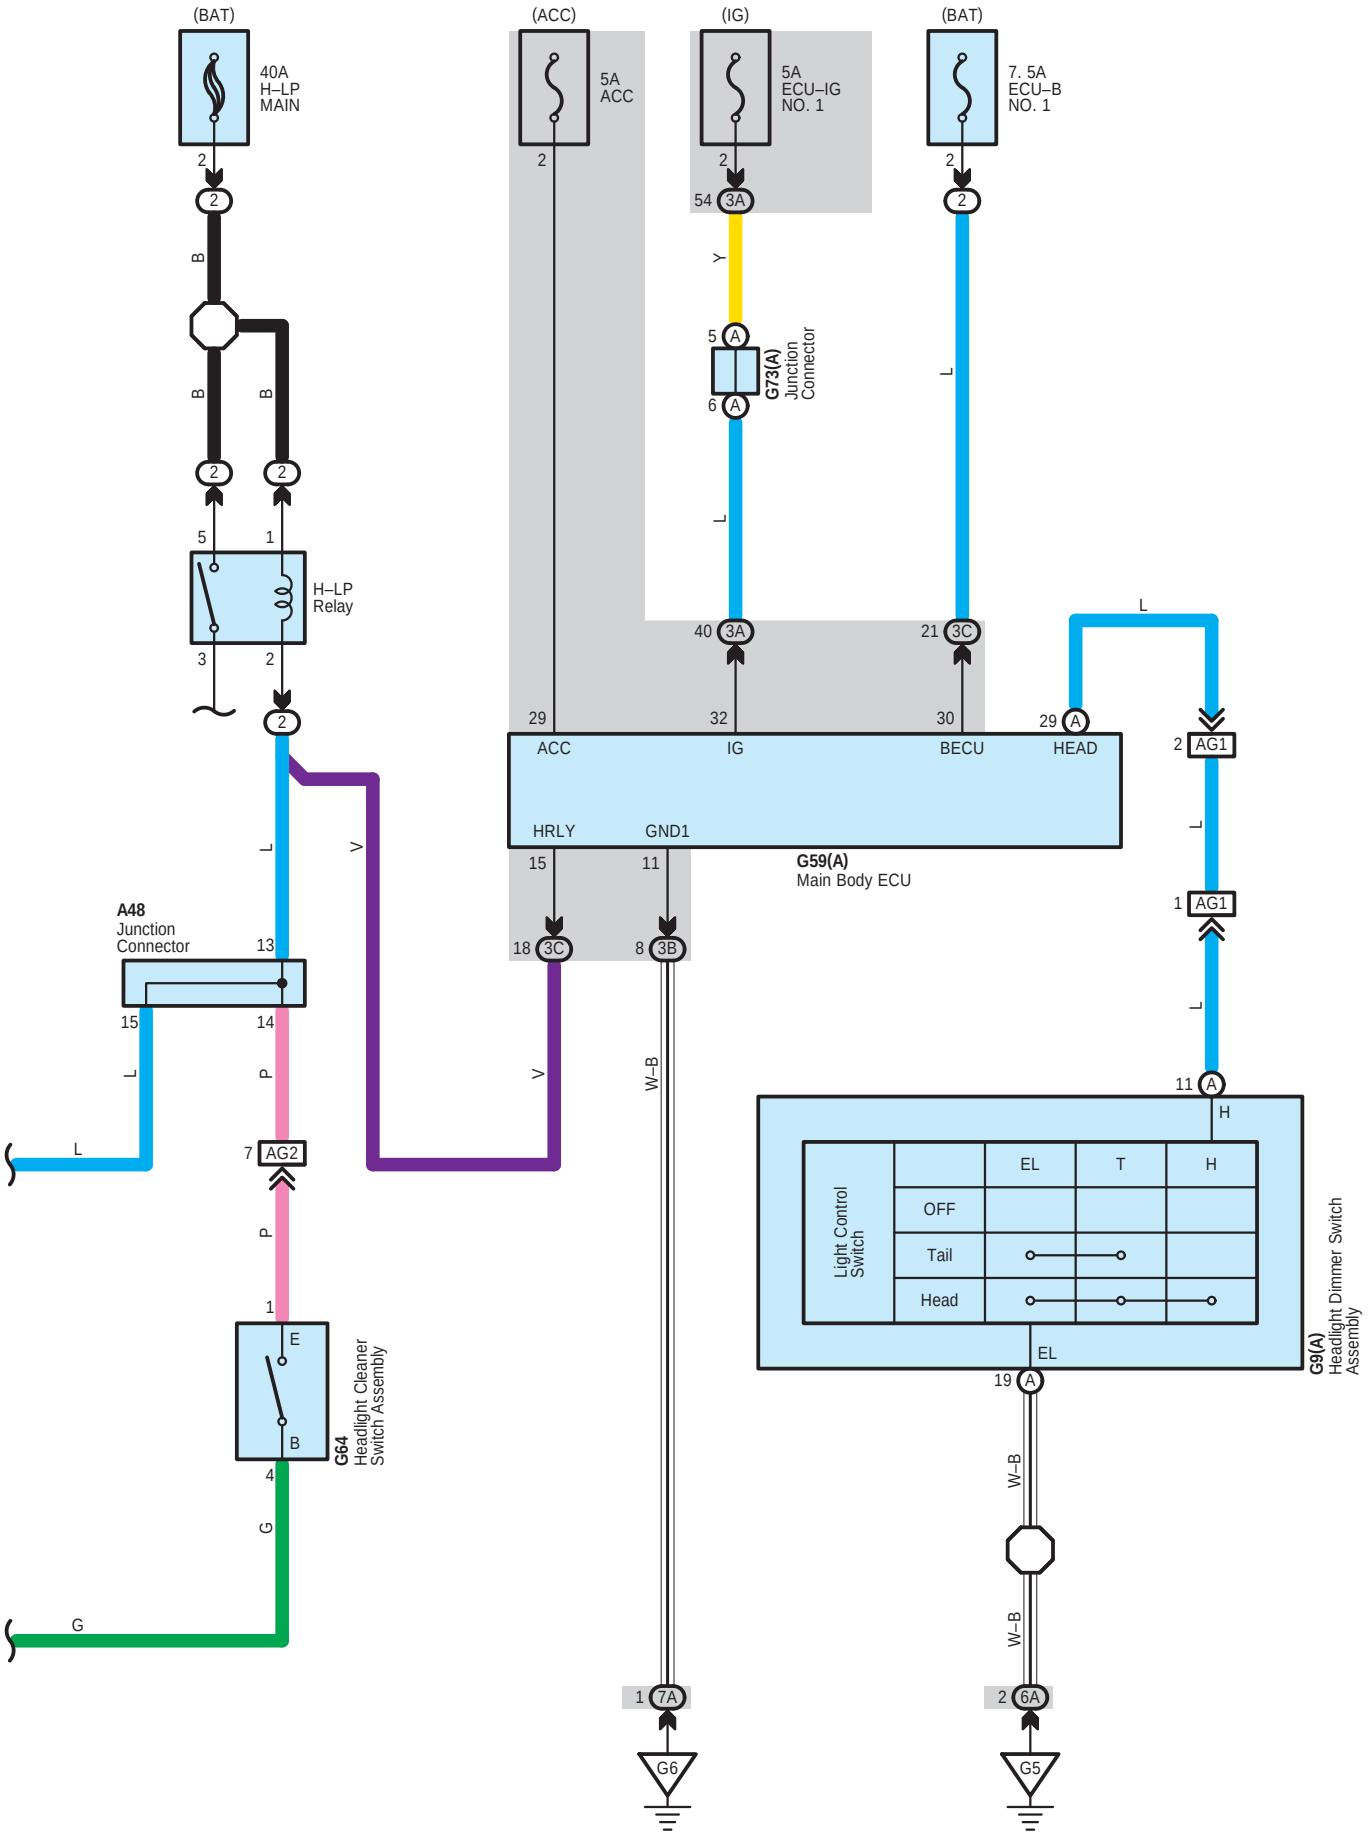


A 48
White

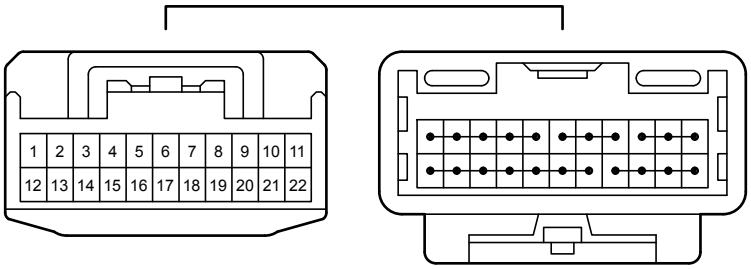


A 49
White

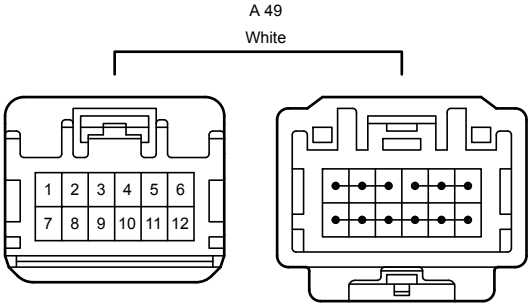


A 60
Black

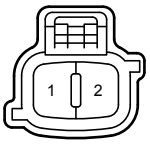


A 64
Black

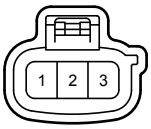


G 9
Black

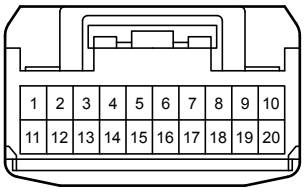


G 11
White

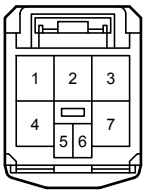


G 59
White

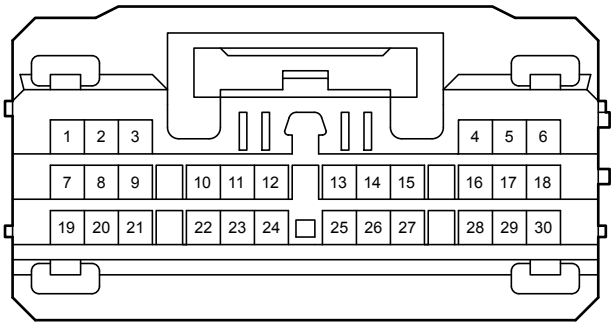


G 64
Gray

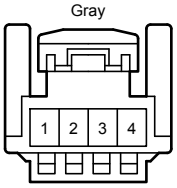


G 73
White

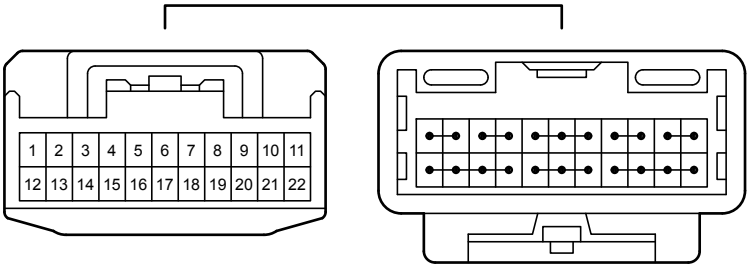


3A
White

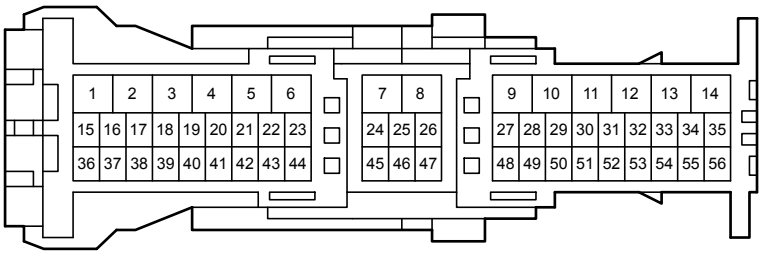


3B
White

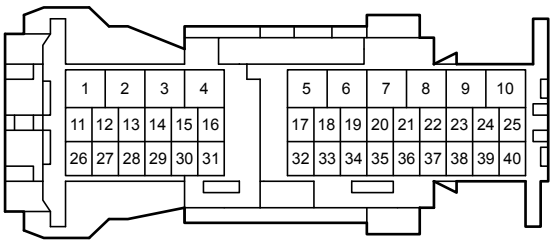


3C
White

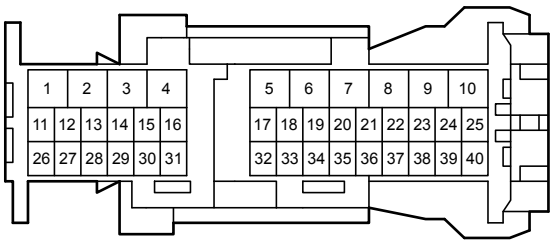


6A
White

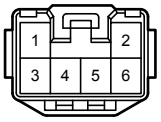

7A
White

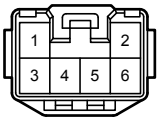

AG1
White

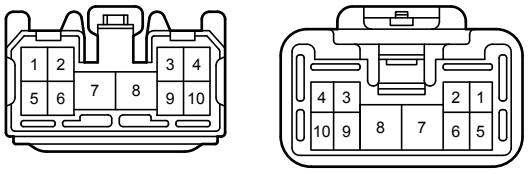

AG2
Black

