




(IG)
10A
IG2
NO. 2
2
2
B
10
A49
Junction
Connector
8
B
31 3C
45 3A
B
21 A
IG2
O1(A), O2(B)
Occupant Detection ECU
SVC1
SIG1
SGD1
SVC3
SIG3
SGD3
FSR+
FSR–
1 A
3 A
5 A
2 A
4 A
6 A
7 B
4 B
R
P
G
GR
SB
W
L
LG
1
2
3
1
2
3
SVC
SIG
SGD
SVC
SIG
SGD
O4
Front Occupant
Classification
Sensor LH
O5
Rear Occupant
Classification
Sensor LH
1 MO1
5 MO1
GR
Y
16 E
24 E
FSR+
FSR–
E1
E2
LBE+
LBE–
CANL
CANH
25 A
26 A
10 D
18 D
22 A
13 A
G18(A), M57(D), M58(E)
Airbag Sensor Assembly
W–B
W–B
G
B
W
B
8 3A
7 3A
8 3B
6 3A
2
1
LBE+
LBE–
Buckle Switch
M51
Front Seat Inner Belt Assembly LH
W–B
W–B
B
W
1 7A
G6
G3



O1(A), O2(B)
Occupant Detection ECU
DIA
BGND
BSW
GND
IG2
+B
(BAT)
(IG)
7. 5A
ECU–B
NO. 2
10A
IG2
NO. 2
GR
P
G
W–B
B
W
L
A49
Junction
Connector
MO1
RBE–
RBE+
Buckle Switch
O3(A)
Front Seat Inner
Belt Assembly RH
M3


G4(A), G93(B)
DLC3
SIL
CANL
CANH
7 A
7 B
14 A
14 B
6 A (*1)
6 B (*2)
B
W
GR
15 B
4 B
14 B
3 B
A74(A), G86(B)
Junction Connector
21 A
10 A
B
W
32 3A
22 3D
SB
W
10
21
G72
Junction
Connector
4
15
7
18
B
W
B
B
W
W
G

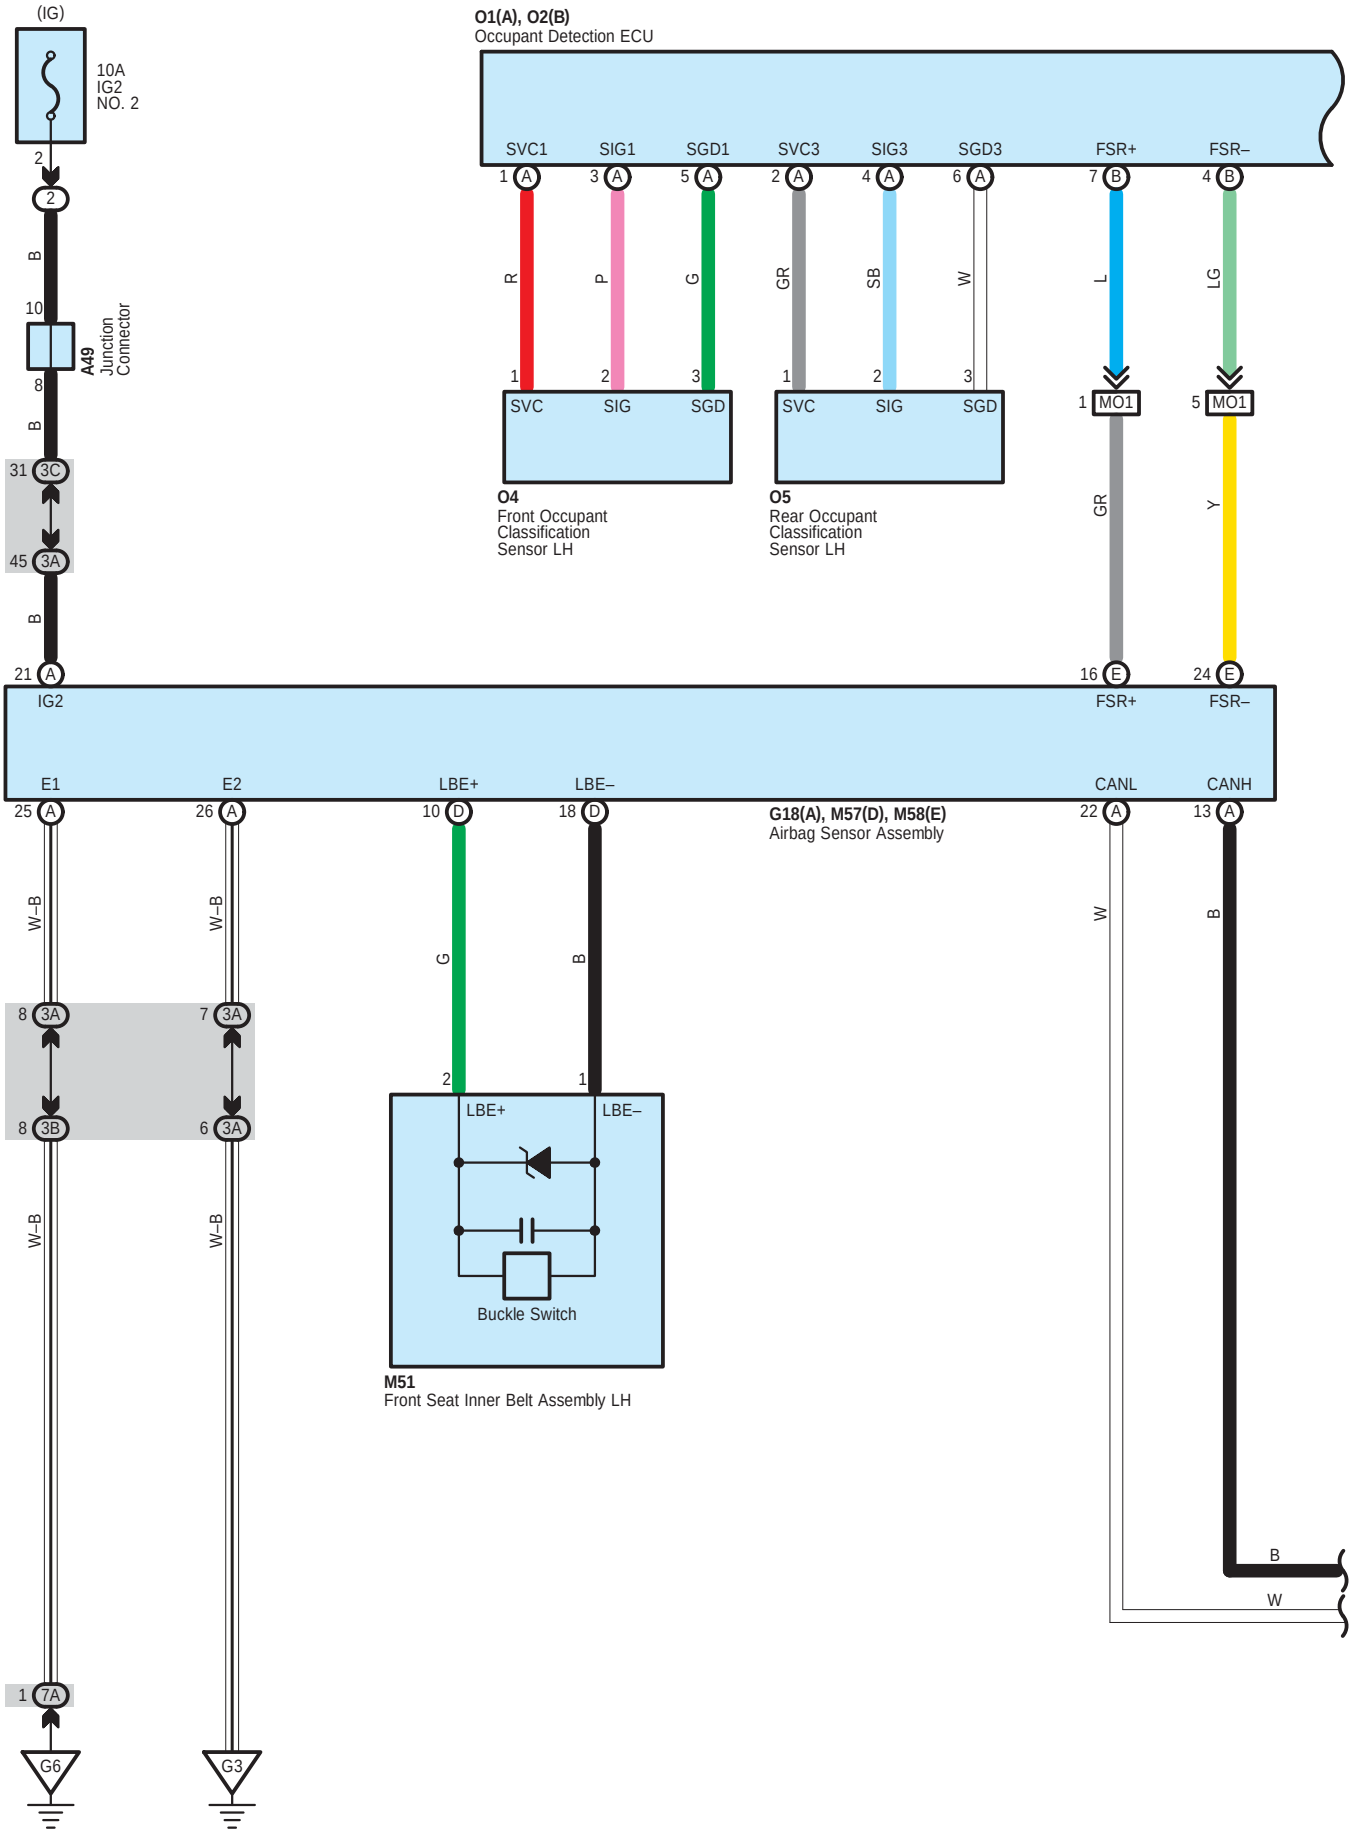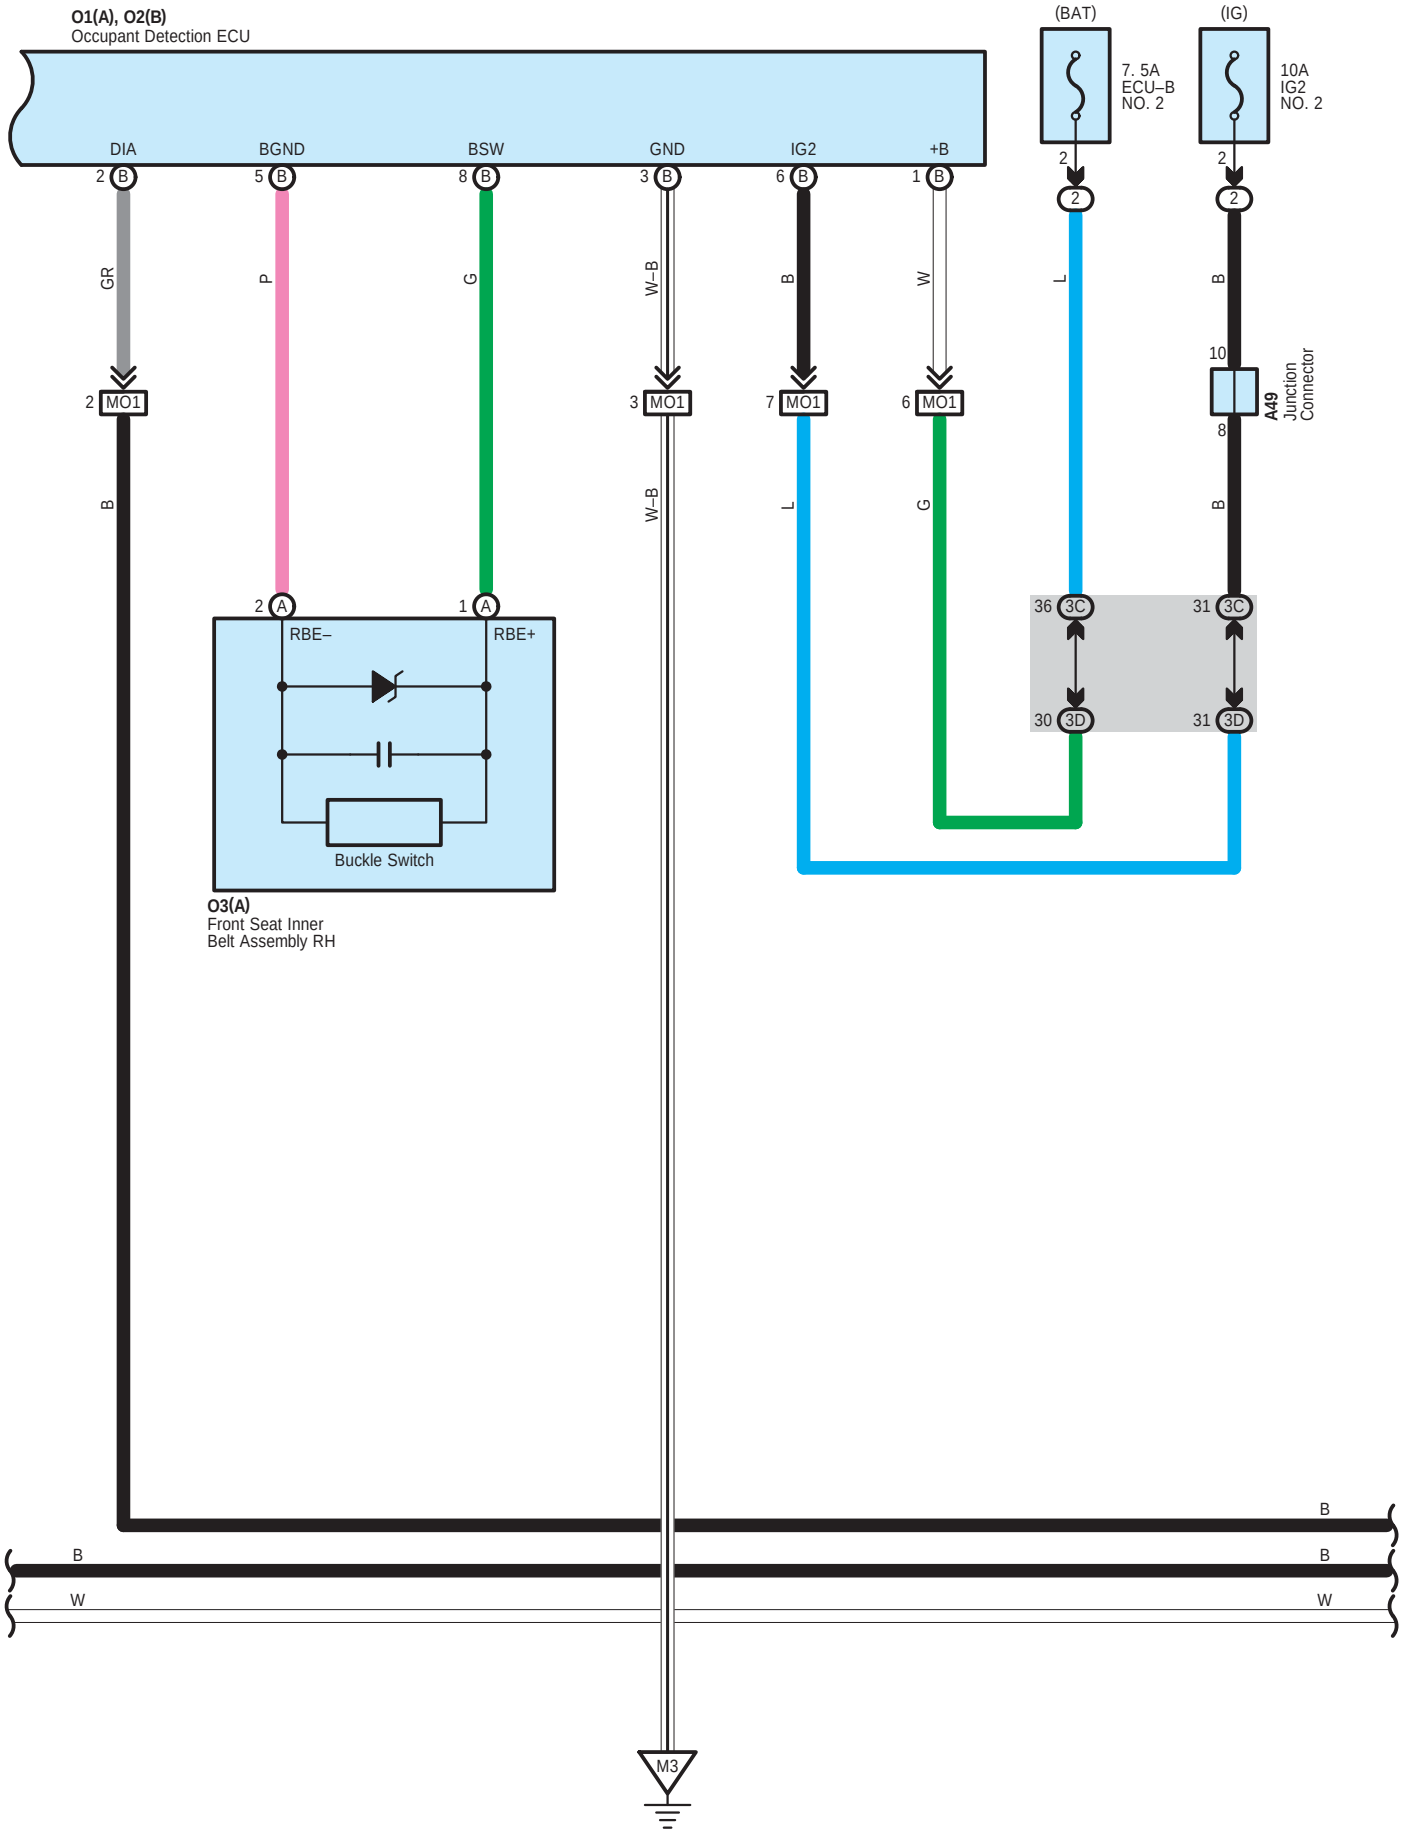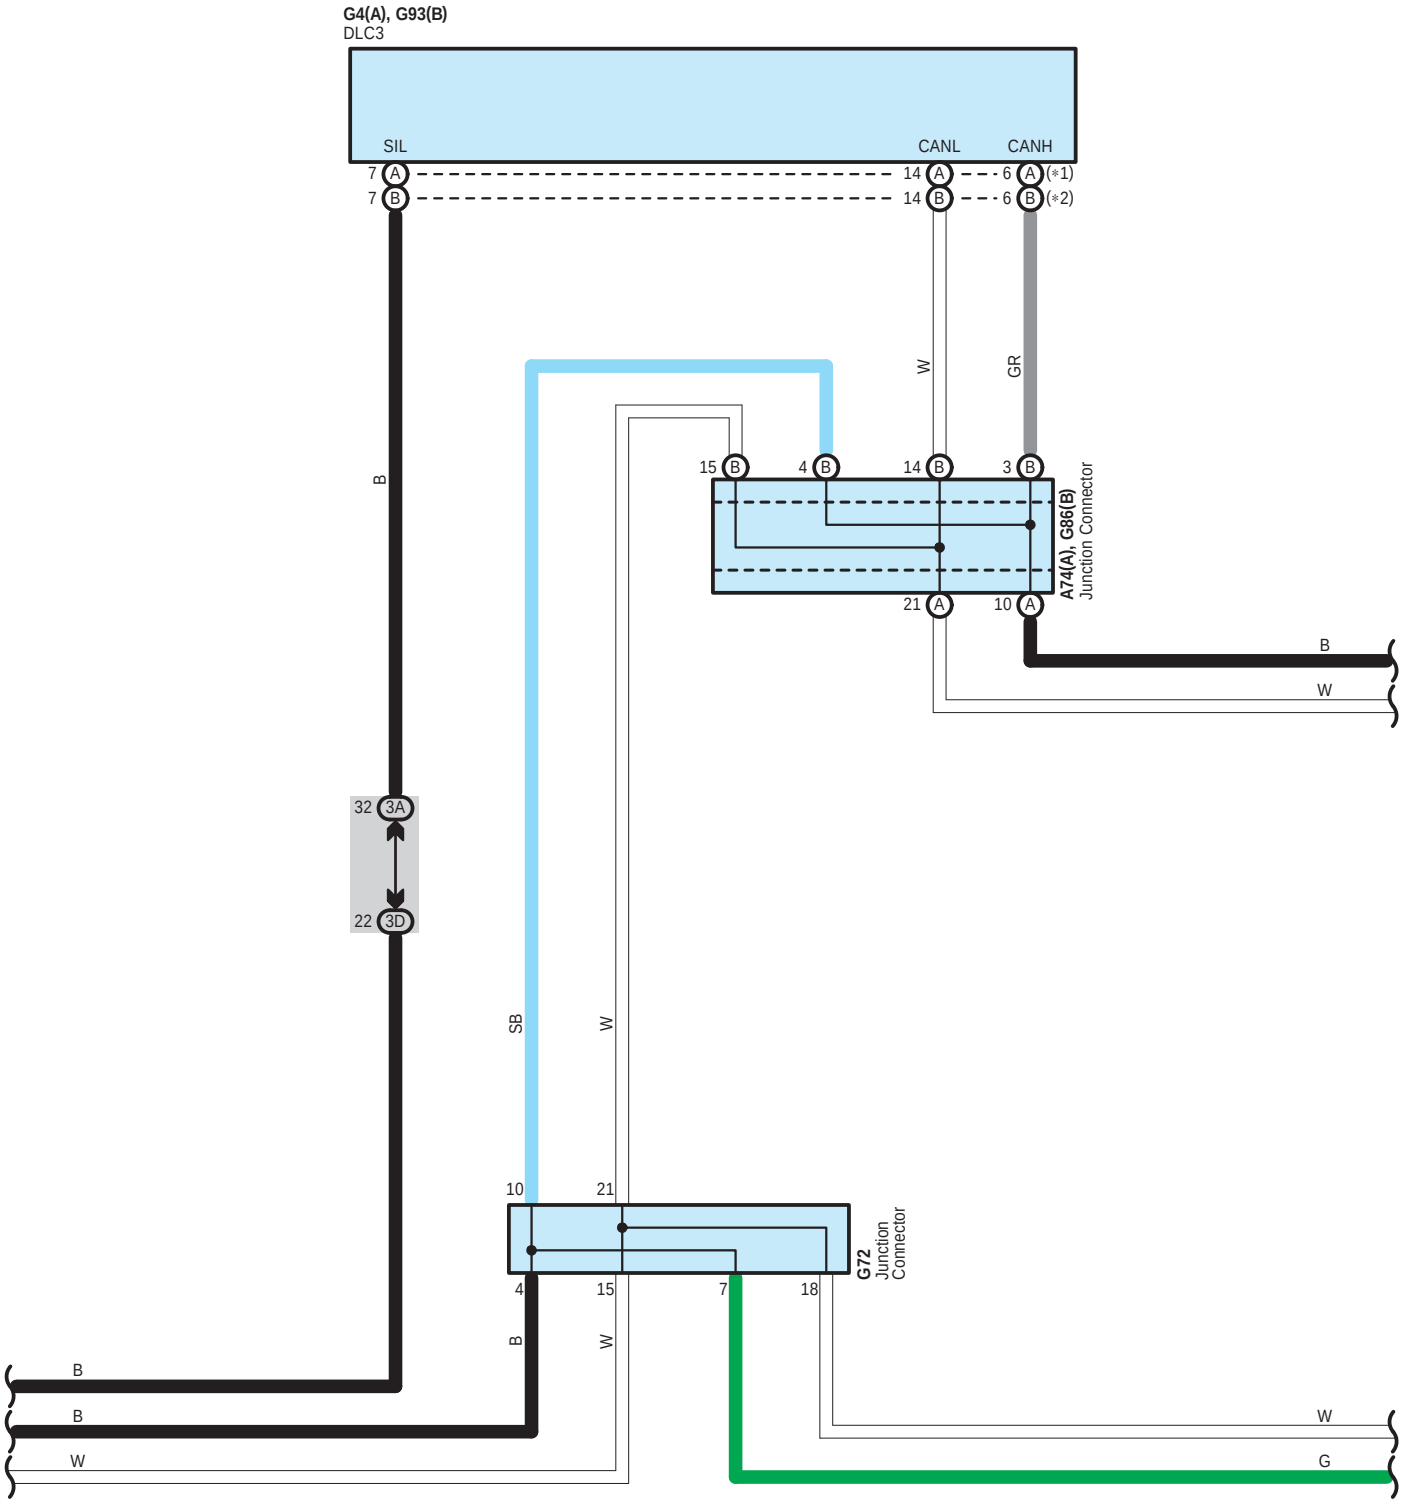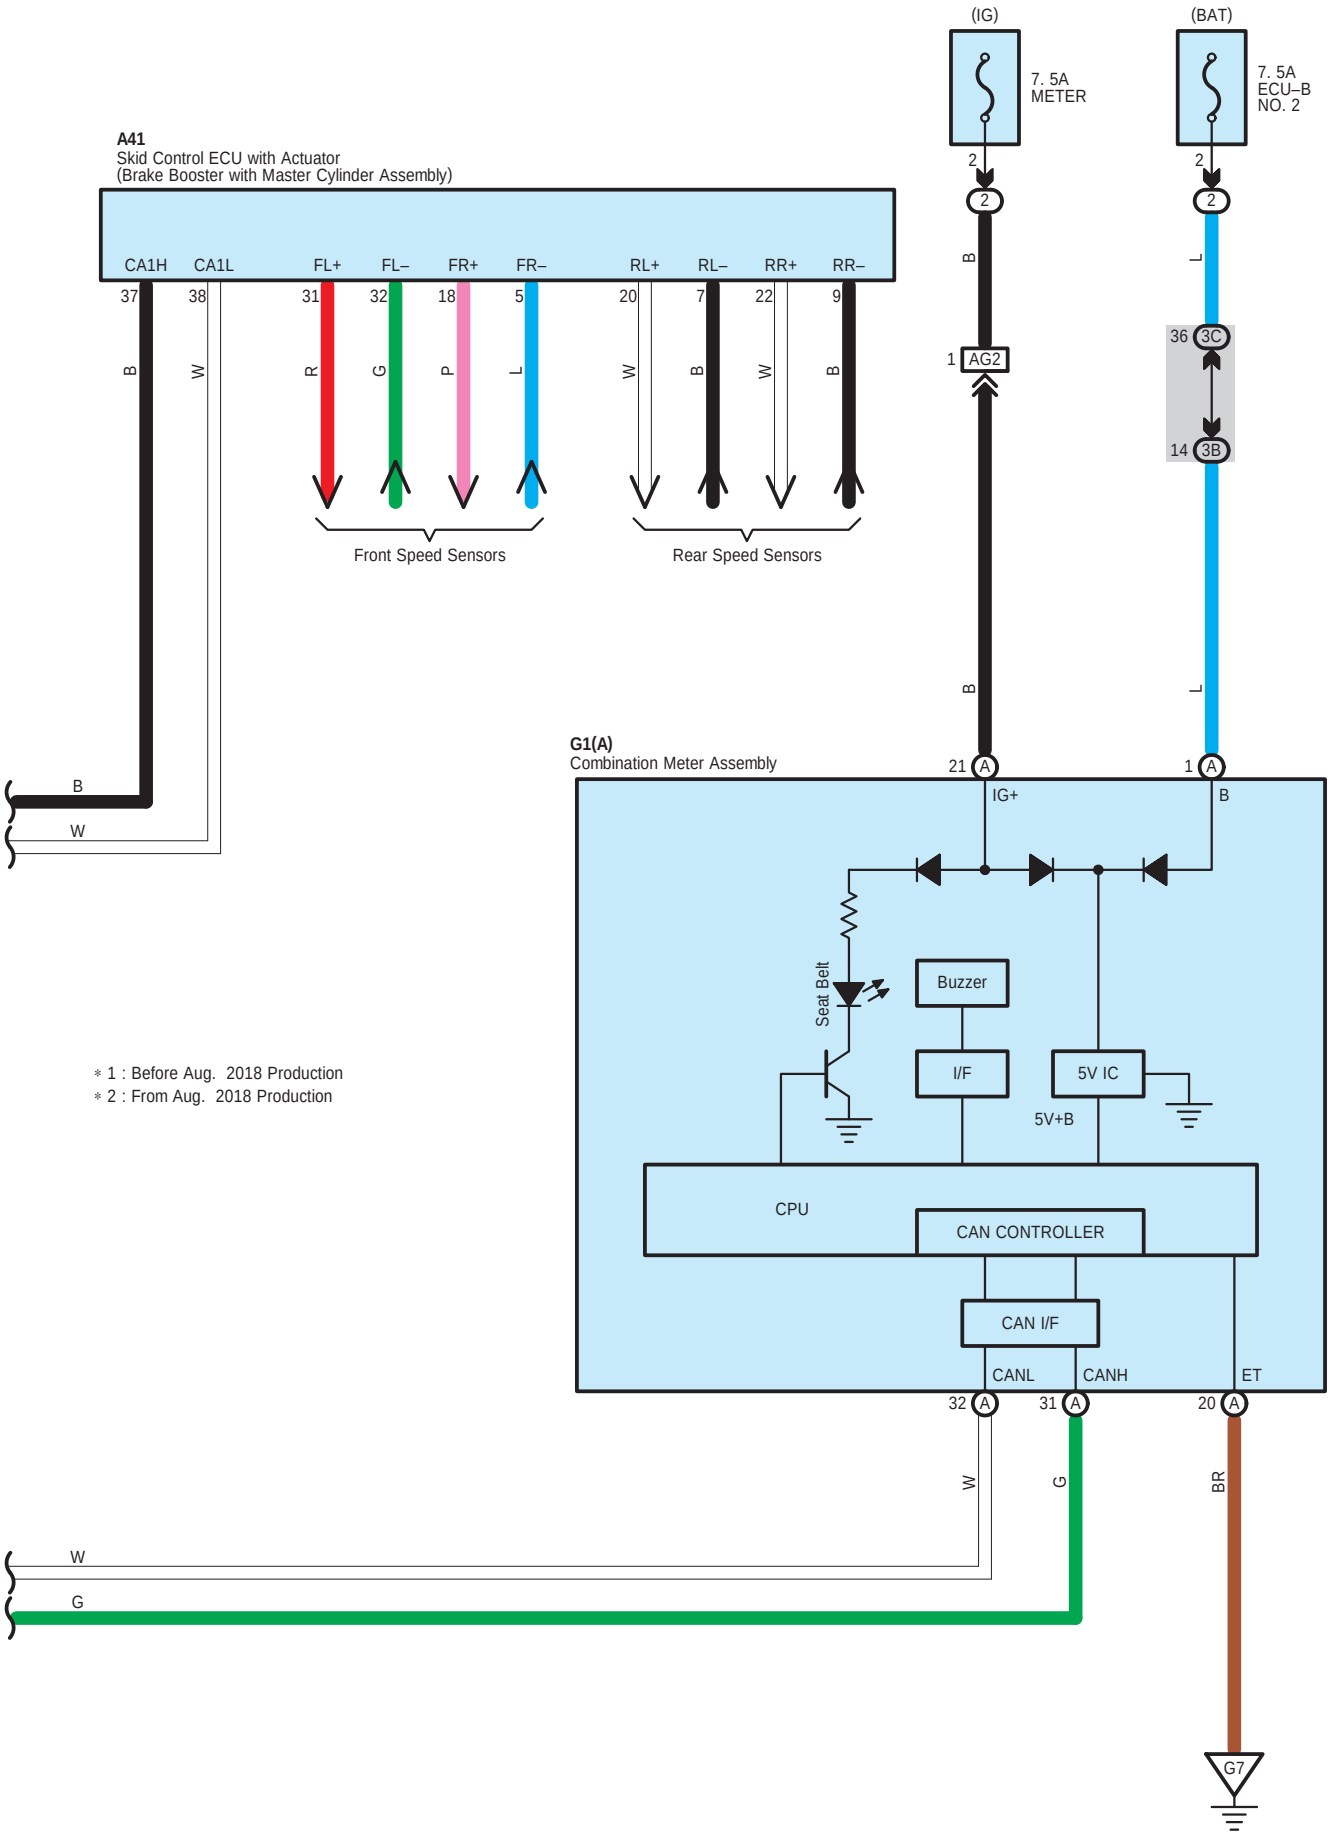


∗ 1 : Before Aug. 2018 Production
∗ 2 : From Aug. 2018 Production


A 41
Black

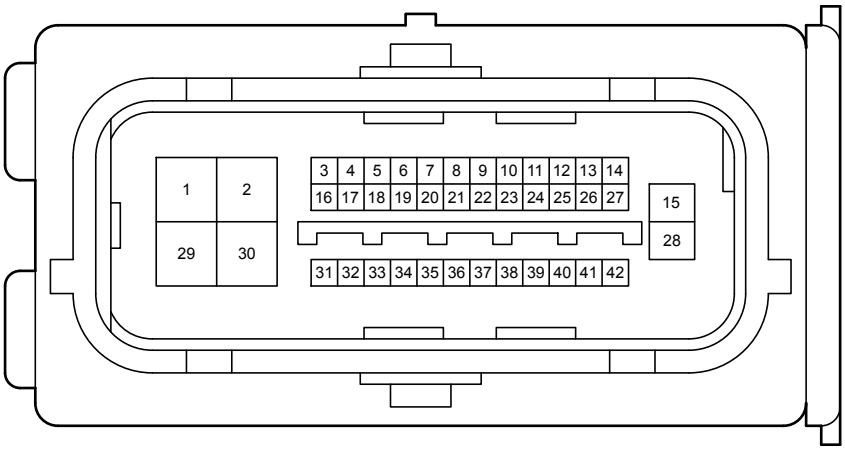


A 49
White

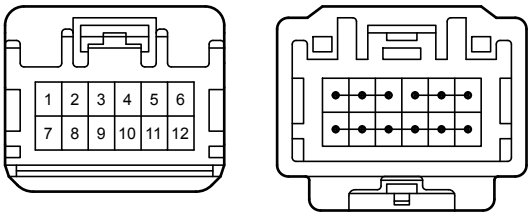


A 74
White

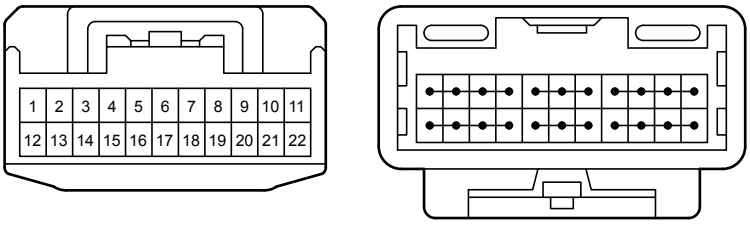


G 1
White

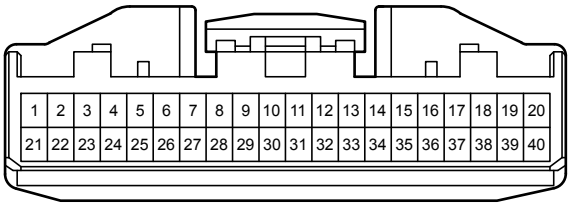


G 4
White

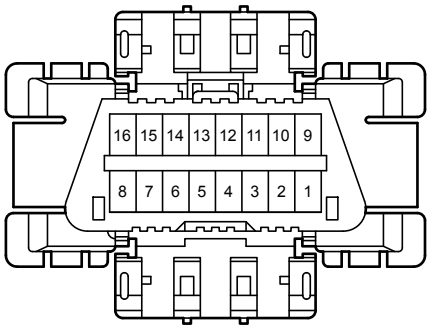


G 18
Yellow

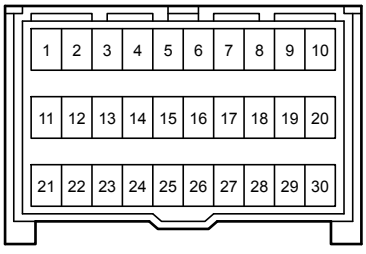


G 72
Gray

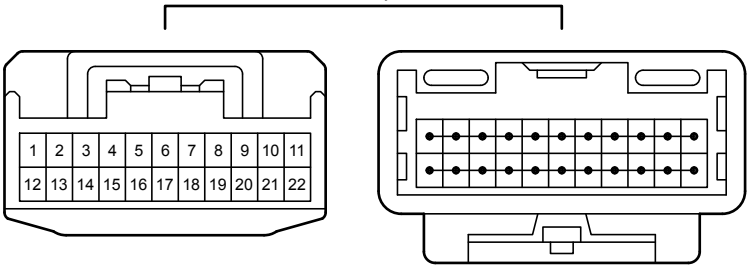

G 86
White

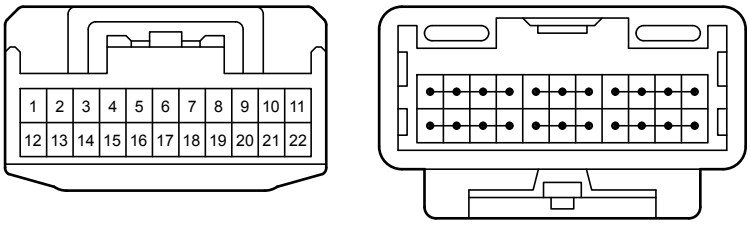


G 93
White

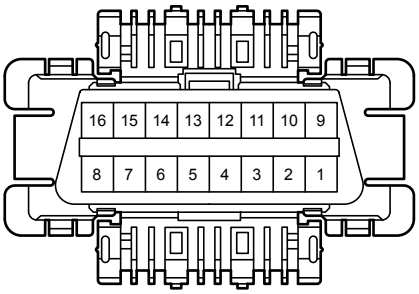


M 51
White




M 57
Yellow

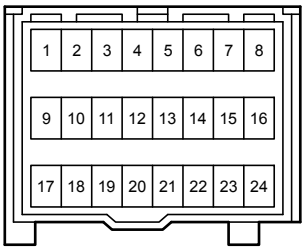


M 58
Yellow

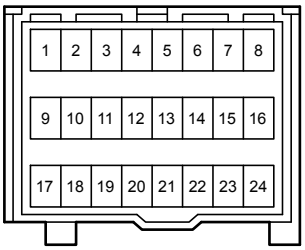

O 1
Gray

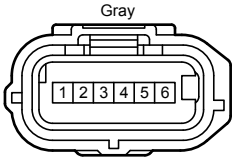


O 2
Black

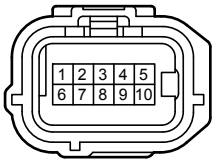


O 3
Gray




O 4
Black

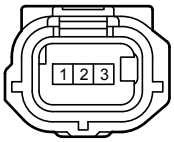


O 5
Gray

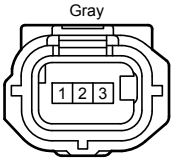


3A
White

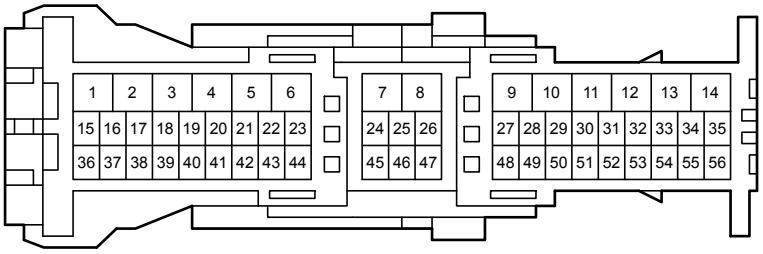



3B
White

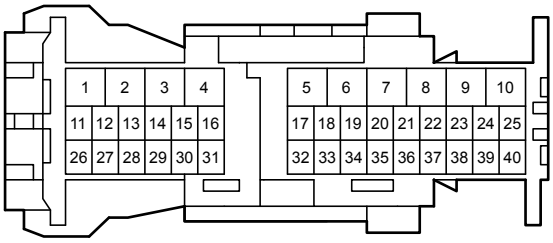



3C
White

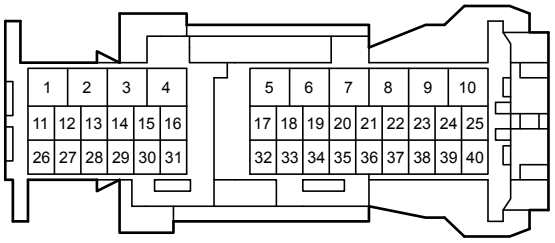

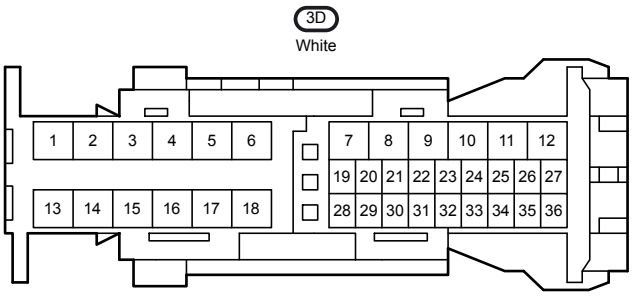
3D
White
1 2 3 4 5 6
7 8 9 10 11 12
19 20 21 22 23 24 25 26 27
13 14 15 16 17 18
28 29 30 31 32 33 34 35 36

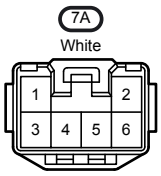
7A
White
1 2
3 4 5 6

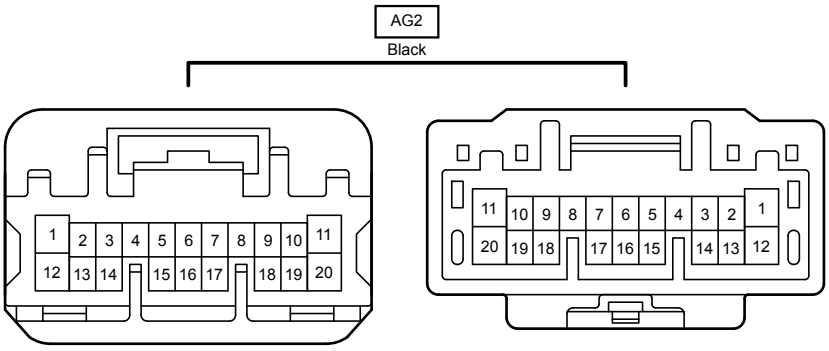
AG2
Black
1 2 3 4 5 6 7 8 9 10 11
12 13 14 15 16 17 18 19 20
11 10 9 8 7 6 5 4 3 2 1
20 19 18 17 16 15 14 13 12

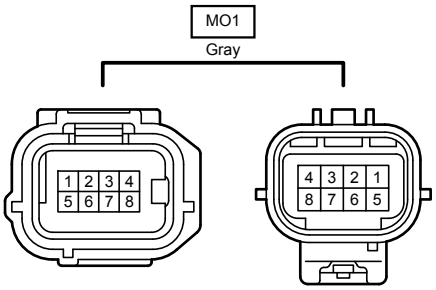
MO1
Gray
1 2 3 4
5 6 7 8
4 3 2 1
8 7 6 5