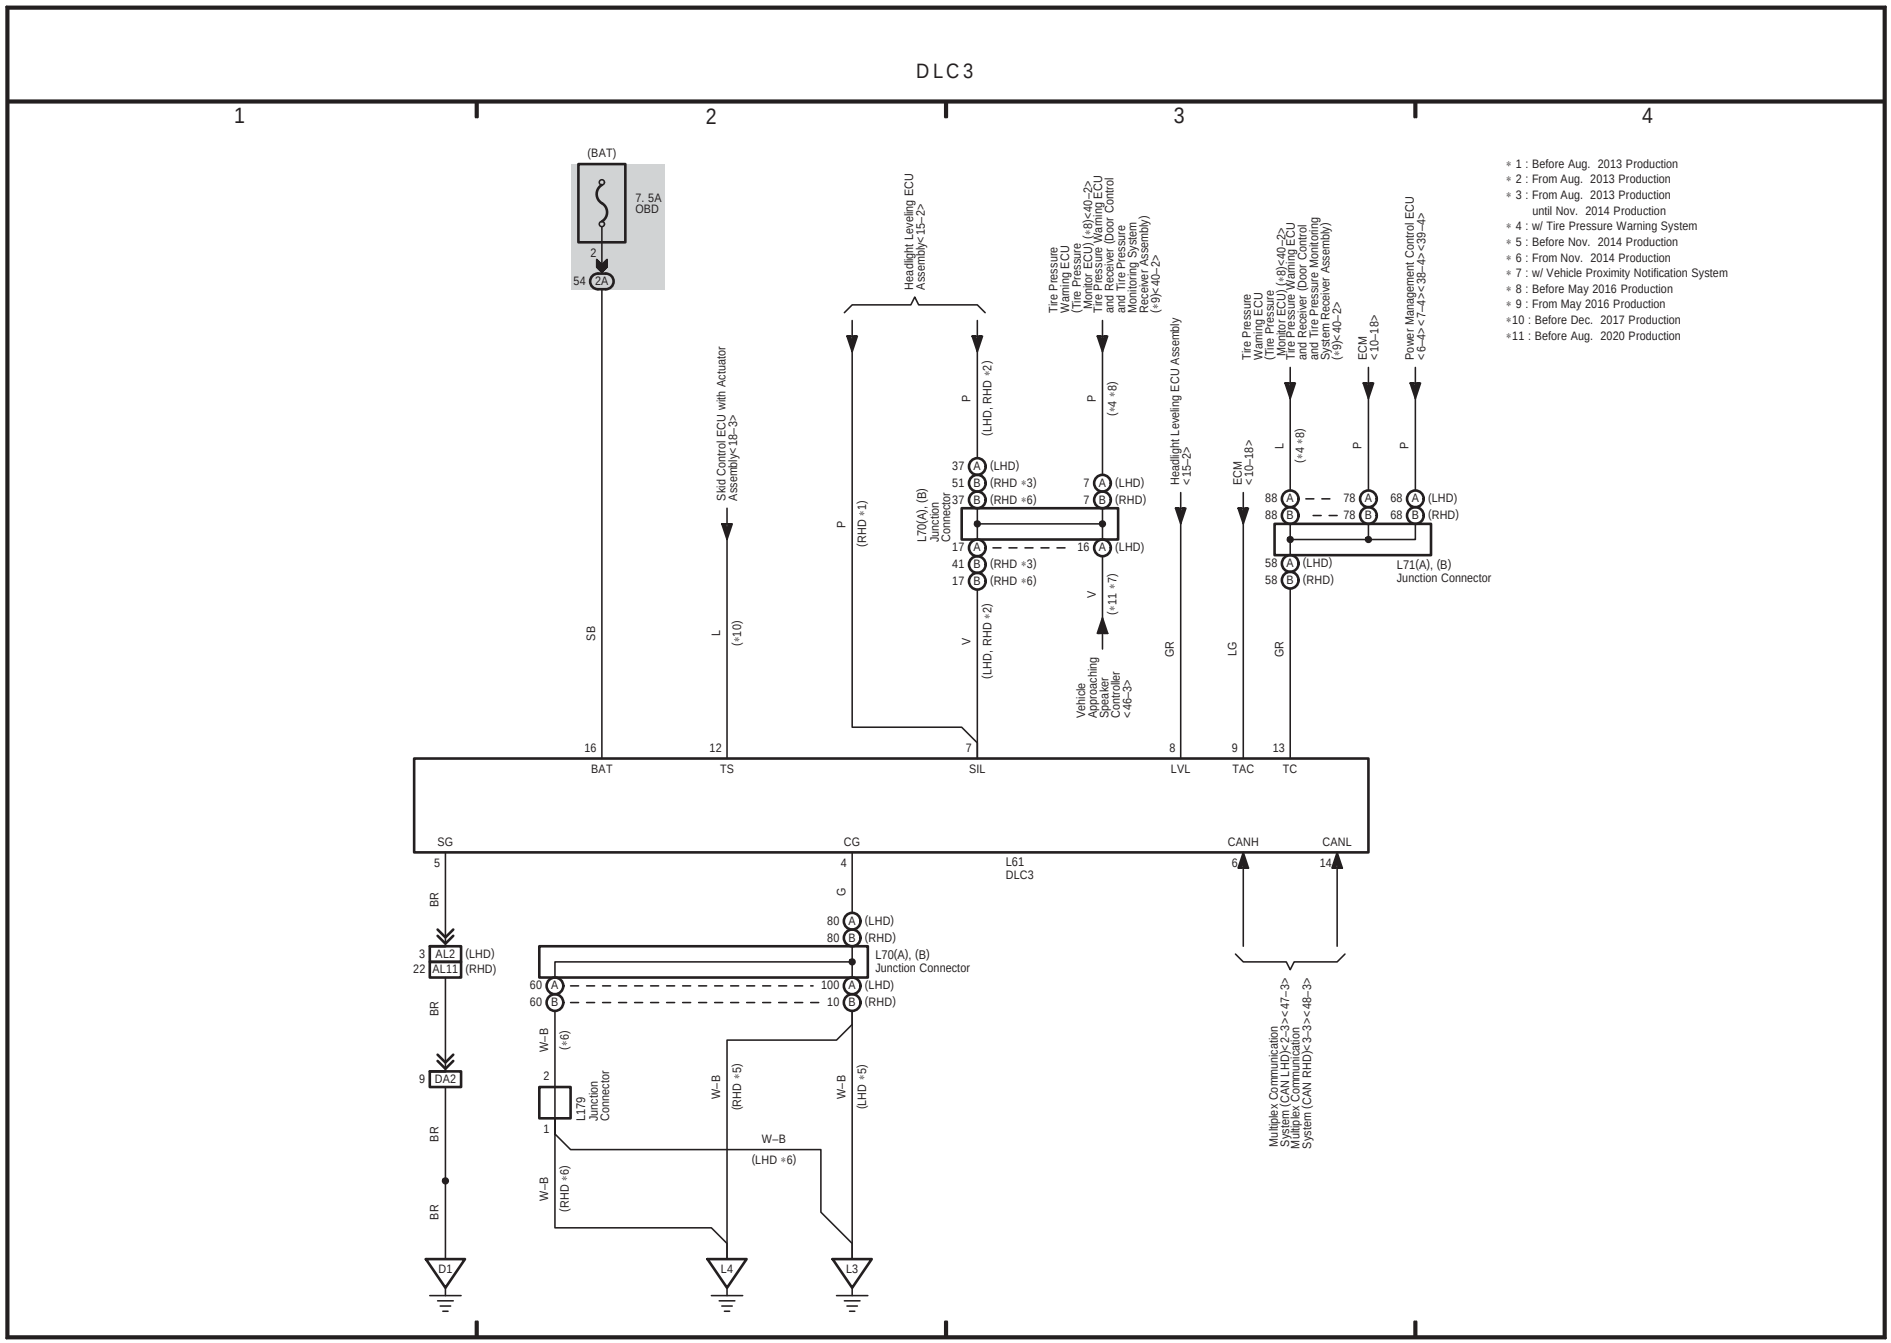

DLC3
1
2
3
4
(BAT)
7. 5A
OBD
2
54 2A
Headlight Leveling ECU
Assembly<15–2>
Tire Pressure
Warning ECU
(Tire Pressure
Monitor ECU) (∗8)<40–2>
Tire Pressure Warning ECU
and Receiver (Door Control
and Air Pressure
Monitoring System
Receiver Assembly)
(∗9)<40–2>
Tire Pressure
Warning ECU
(Tire Pressure
Monitor ECU) (∗8)<40–2>
Tire Pressure Warning ECU
and Receiver (Door Control
and Tire Pressure Monitoring
System Receiver Assembly)
(∗9)<40–2>
ECM
<10–18>
Power Management Control ECU
<6–4><7–4><38–4><39–4>
∗ 1 : Before Aug. 2013 Production
∗ 2 : From Aug. 2013 Production
∗ 3 : From Aug. 2013 Production
until Nov. 2014 Production
∗ 4 : w/ Tire Pressure Warning System
∗ 5 : Before Nov. 2014 Production
∗ 6 : From Nov. 2014 Production
∗ 7 : w/ Vehicle Proximity Notification System
∗ 8 : Before May 2016 Production
∗ 9 : From May 2016 Production
∗10 : Before Dec. 2017 Production
∗11 : Before Aug. 2020 Production
Skid Control ECU with Actuator
Assembly<18–3>
SB
L
(∗10)
P
(RHD ∗1)
P
(LHD, RHD ∗2)
37 A (LHD)
51 B (RHD ∗3)
37 B (RHD ∗6)
L70(A), (B)
Junction
Connector
17 A
41 B (RHD ∗3)
17 B (RHD ∗6)
V
(LHD, RHD ∗2)
P
(∗4 ∗8)
7 A (LHD)
7 B (RHD)
16 A (LHD)
V
(∗11 ∗7)
Vehicle
Approaching
Speaker
Controller
<46–3>
Headlight Leveling ECU Assembly
<15–2>
GR
ECM
<10–18>
LG
L
(∗4 ∗8)
88 A
88 B
78 A
78 B
P
68 A (LHD)
68 B (RHD)
P
58 A (LHD)
58 B (RHD)
GR
L71(A), (B)
Junction Connector
16
BAT
12
TS
7
SIL
8
LVL
9
TAC
13
TC
SG
CG
CANH
CANL
5
4
6
14
L61
DLC3
BR
G
80 A (LHD)
80 B (RHD)
L70(A), (B)
Junction Connector
3 AL2 (LHD)
22 AL11 (RHD)
60 A
60 B
100 A (LHD)
10 B (RHD)
BR
W–B
(∗6)
9 DA2
2
L179
Junction
Connector
W–B
(RHD ∗5)
W–B
(LHD ∗5)
BR
1
W–B
(LHD ∗6)
W–B
(RHD ∗6)
BR
Multiplex Communication
System (CAN LHD)<2–3><47–3>
Multiplex Communication
System (CAN RHD)<3–3><48–3>
D1
L4
L3