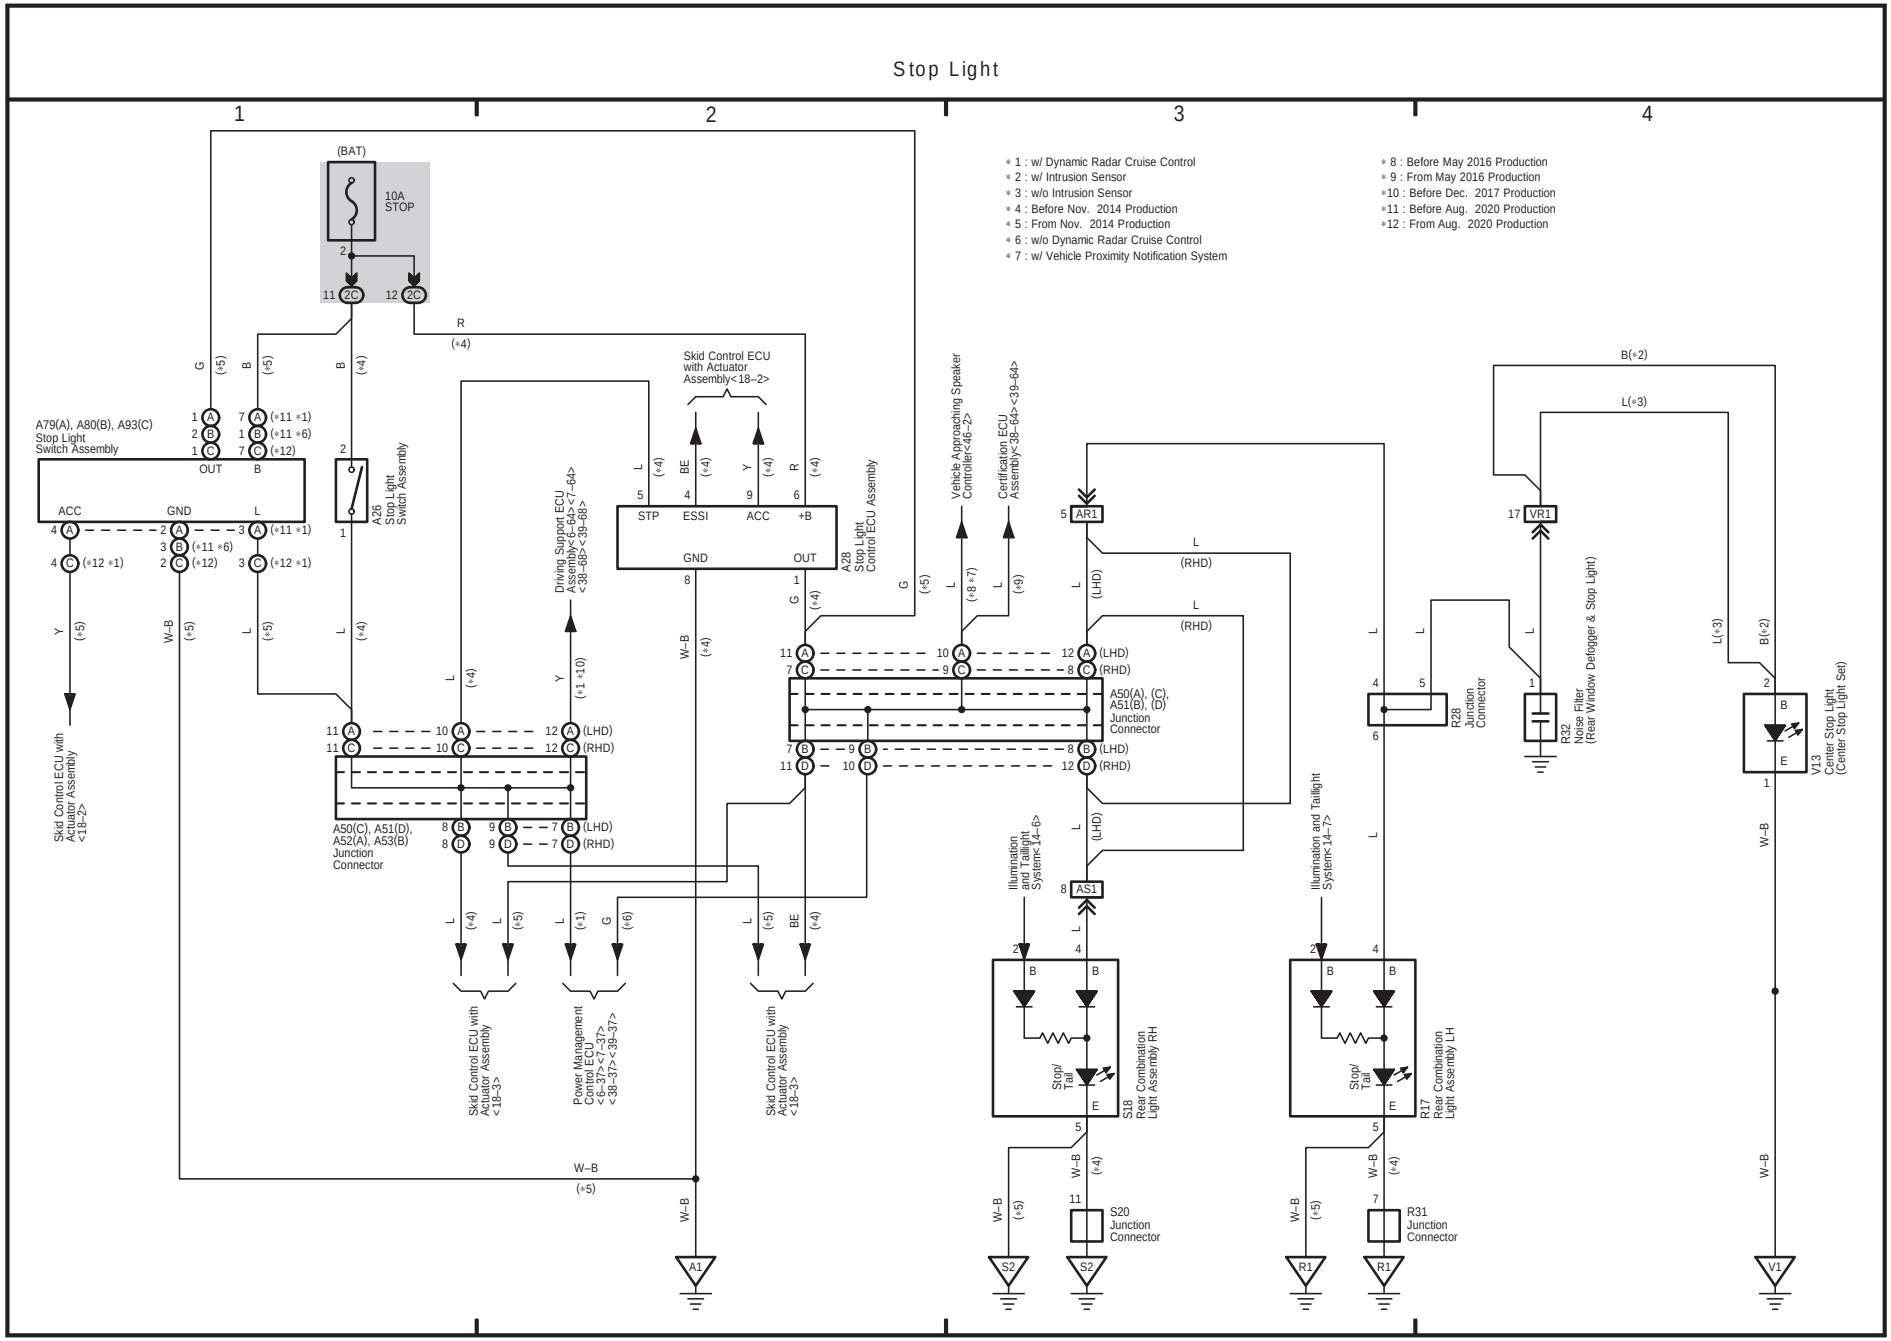

Stop Light
1
2
3
4
(BAT)
10A STOP
∗1 : w/ Dynamic Radar Cruise Control
∗2 : w/ Intrusion Sensor
∗3 : w/o Intrusion Sensor
∗4 : Before Nov. 2014 Production
∗5 : From Nov. 2014 Production
∗6 : w/o Dynamic Radar Cruise Control
∗7 : w/ Vehicle Proximity Notification System
∗8 : Before May 2016 Production
∗9 : From May 2016 Production
∗10 : Before Dec. 2017 Production
∗11 : Before Aug. 2020 Production
∗12 : From Aug. 2020 Production
A79(A), A80(B), A93(C) Stop Light Switch Assembly
A26 Stop Light Switch Assembly
Skid Control ECU with Actuator Assembly<18–2>
A28 Stop Light Control ECU Assembly
Driving Support ECU Assembly<6–64><7–64><38–68><39–68>
Vehicle Approaching Speaker Controller<46–2>
Certification ECU Assembly<38–64><39–64>
A50(A), (C), A51(B), (D) Junction Connector
A50(C), A51(D), A52(A), A53(B) Junction Connector
Illumination and Taillight System<14–6>
Illumination and Taillight System<14–7>
S18 Rear Combination Light Assembly RH
R17 Rear Combination Light Assembly LH
S20 Junction Connector
R31 Junction Connector
R28 Junction Connector
R32 Noise Filter (Rear Window Defogger & Stop Light)
V13 Center Stop Light (Center Stop Light Set)
Power Management Control ECU <6–37><7–37><38–37><39–37>