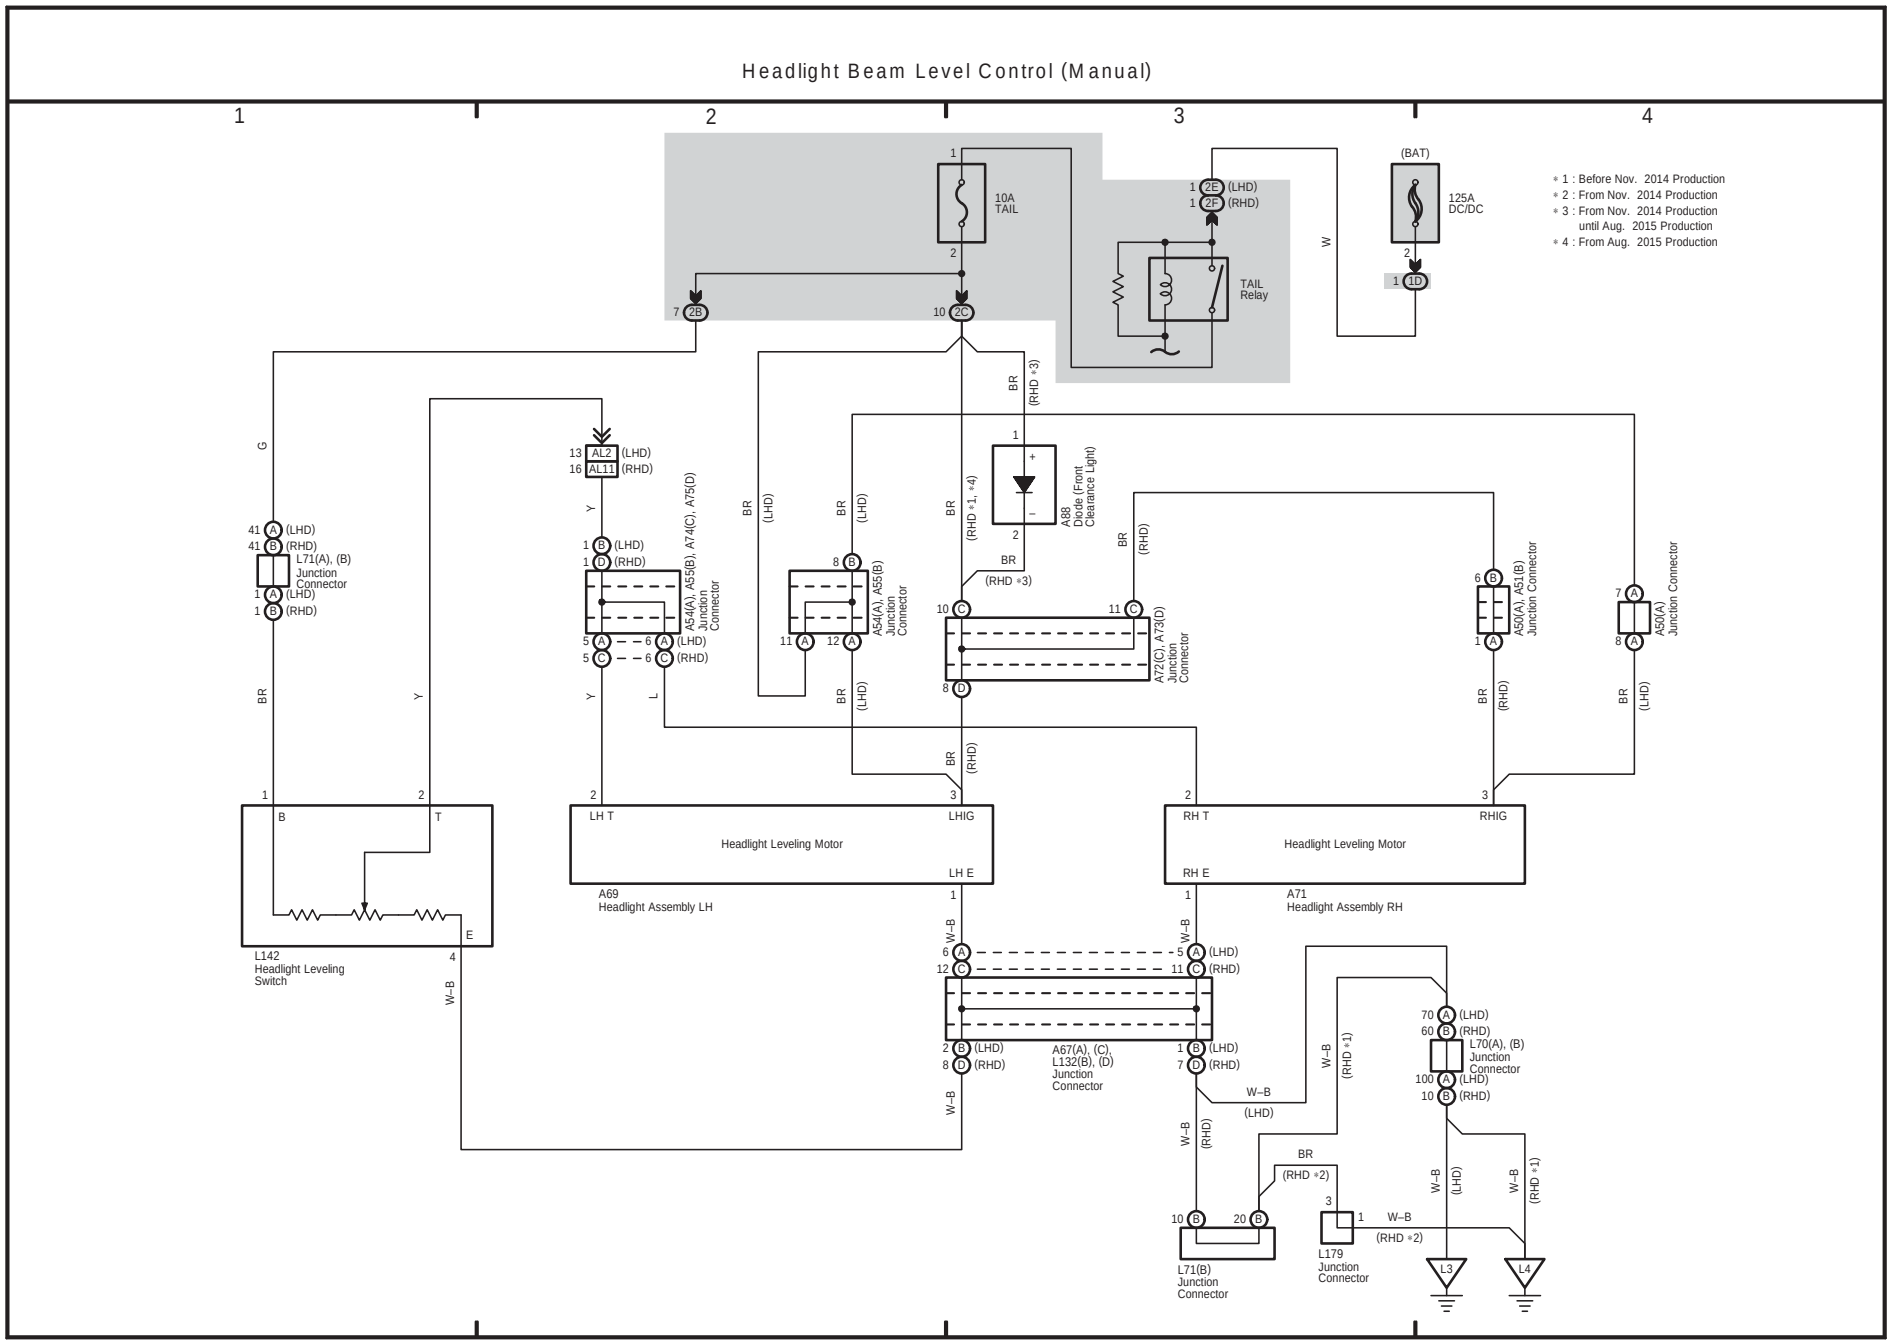

Headlight Beam Level Control (Manual)
1
2
3
4
10A TAIL
TAIL Relay
125A DC/DC
(BAT)
2E (LHD)
2F (RHD)
1D
2B
2C
∗1 : Before Nov. 2014 Production
∗2 : From Nov. 2014 Production
∗3 : From Nov. 2014 Production until Aug. 2015 Production
∗4 : From Aug. 2015 Production
AL2 (LHD)
AL11 (RHD)
A98 Diode (Front Clearance Light)
L71(A), (B) Junction Connector
A54(A), A55(B), A74(C), A75(D) Junction Connector
A54(A), A55(B) Junction Connector
A72(C), A73(D) Junction Connector
A50(A), A51(B) Junction Connector
A50(A) Junction Connector
L142 Headlight Leveling Switch
Headlight Leveling Motor
LH T
LHIG
LH E
RH T
RHIG
RH E
A69 Headlight Assembly LH
A71 Headlight Assembly RH
A67(A), (C), L132(B), (D) Junction Connector
L70(A), (B) Junction Connector
L71(B) Junction Connector
L179 Junction Connector
L3
L4