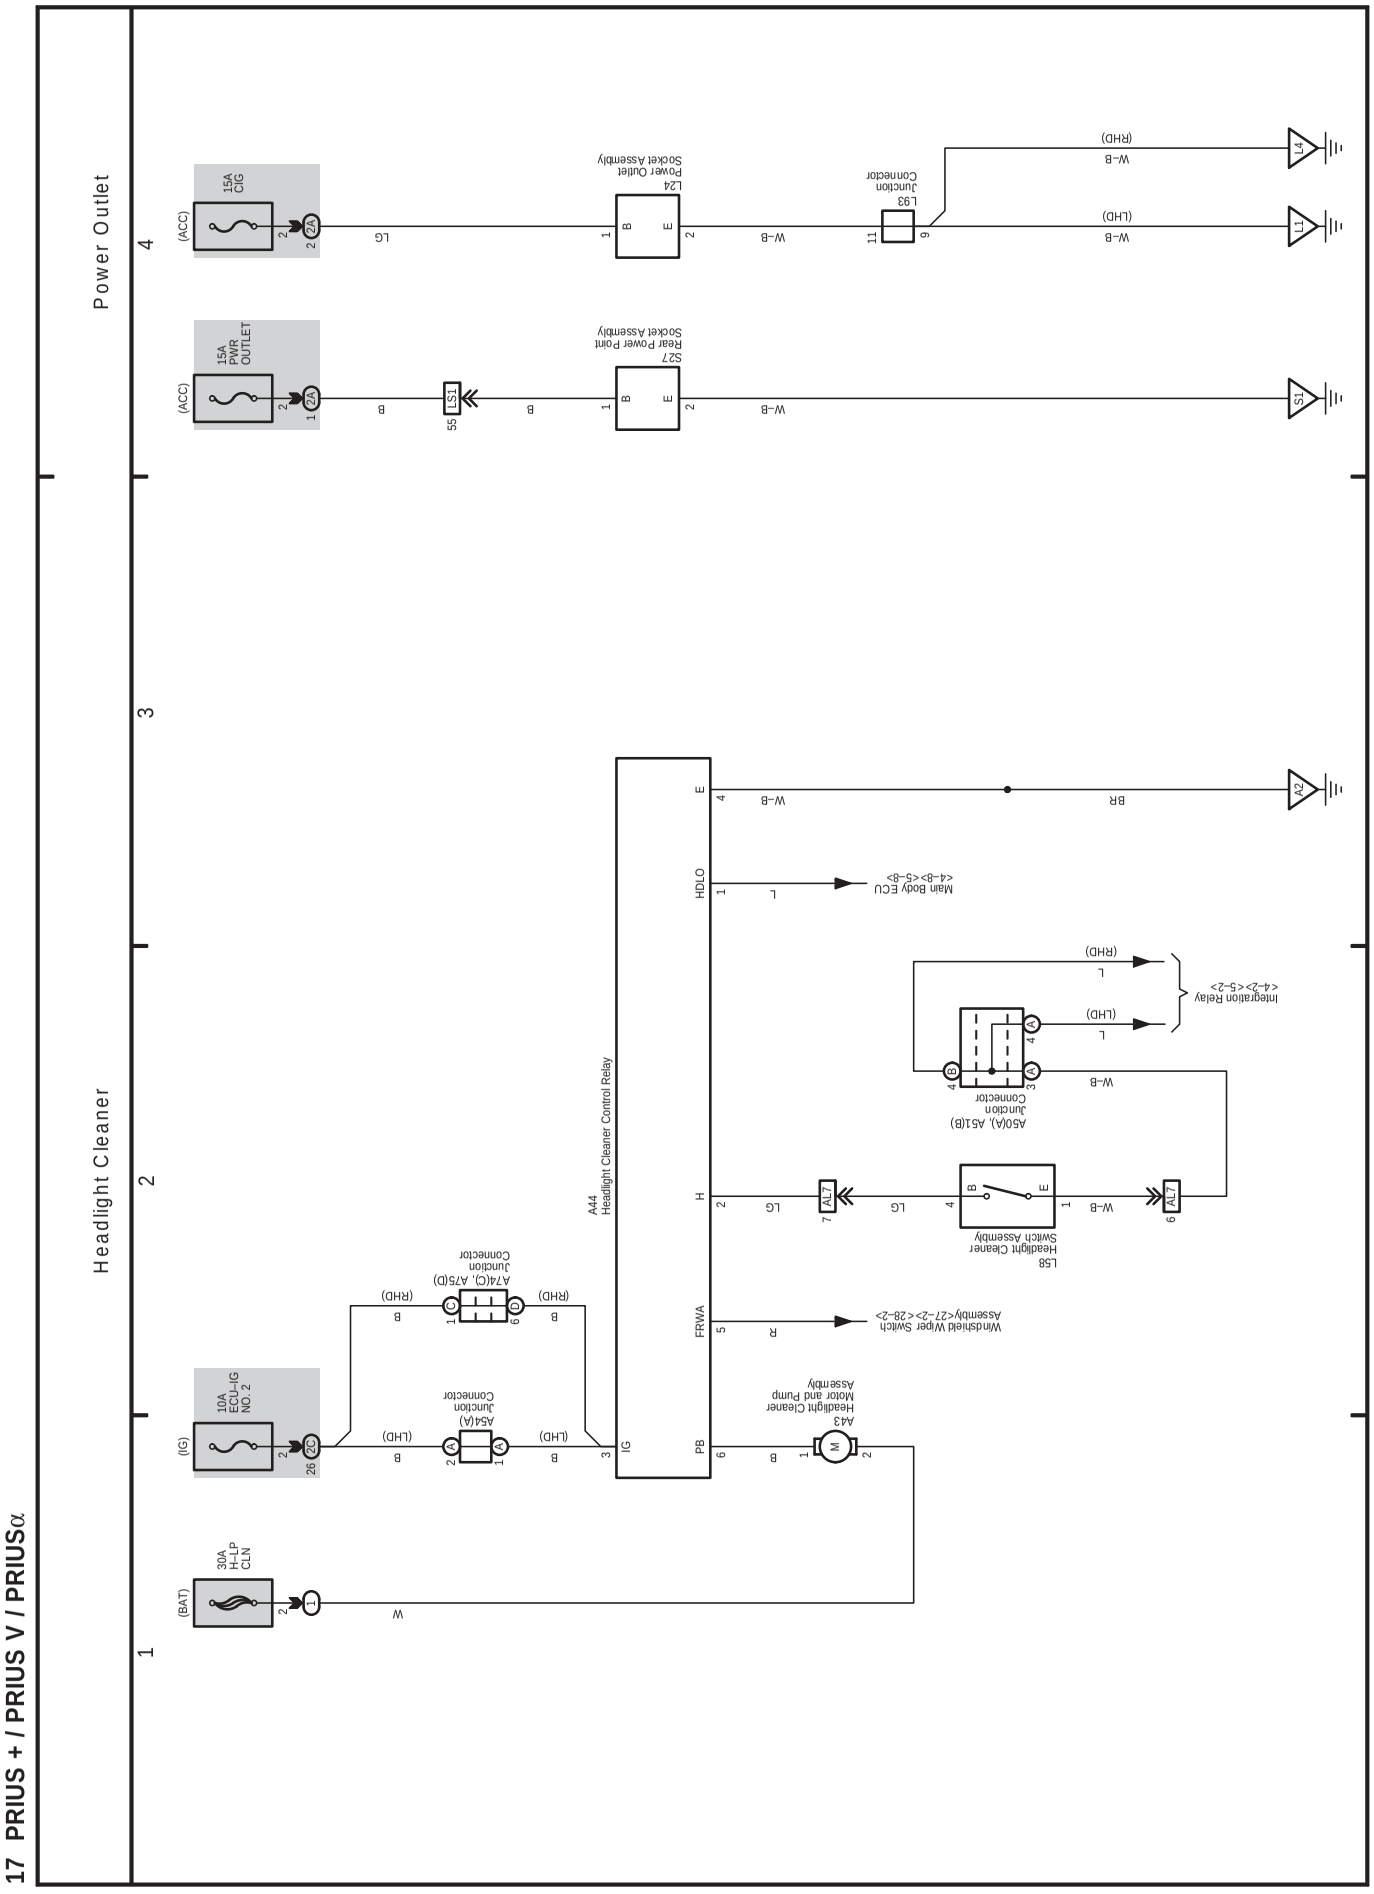

Power Outlet
Headlight Cleaner
1
2
3
4
15A CIG
(ACC)
2A
15A PWR OUTLET
10A ECU–IG NO. 2
(IG)
2C
26
30A H–LP CLN
(BAT)
L24 Power Outlet Socket Assembly
L93 Junction Connector
R27 Rear Power Point Socket Assembly
LS1
55
L4
L1
S1
A2
A44 Headlight Cleaner Control Relay
E
HDLO
H
FRWA
IG
PB
Main Body ECU <4–B><5–B>
Windshield Wiper Switch Assembly <27–2><28–2>
A43 Headlight Cleaner Motor and Pump Assembly
A54(A) Junction Connector
A74(C), A75(D) Junction Connector
A50(A), A51(B) Junction Connector
L58 Headlight Cleaner Switch Assembly
AL7
Integration Relay <4–2><5–2>
W–B
LG
L
BR
(RHD)
(LHD)