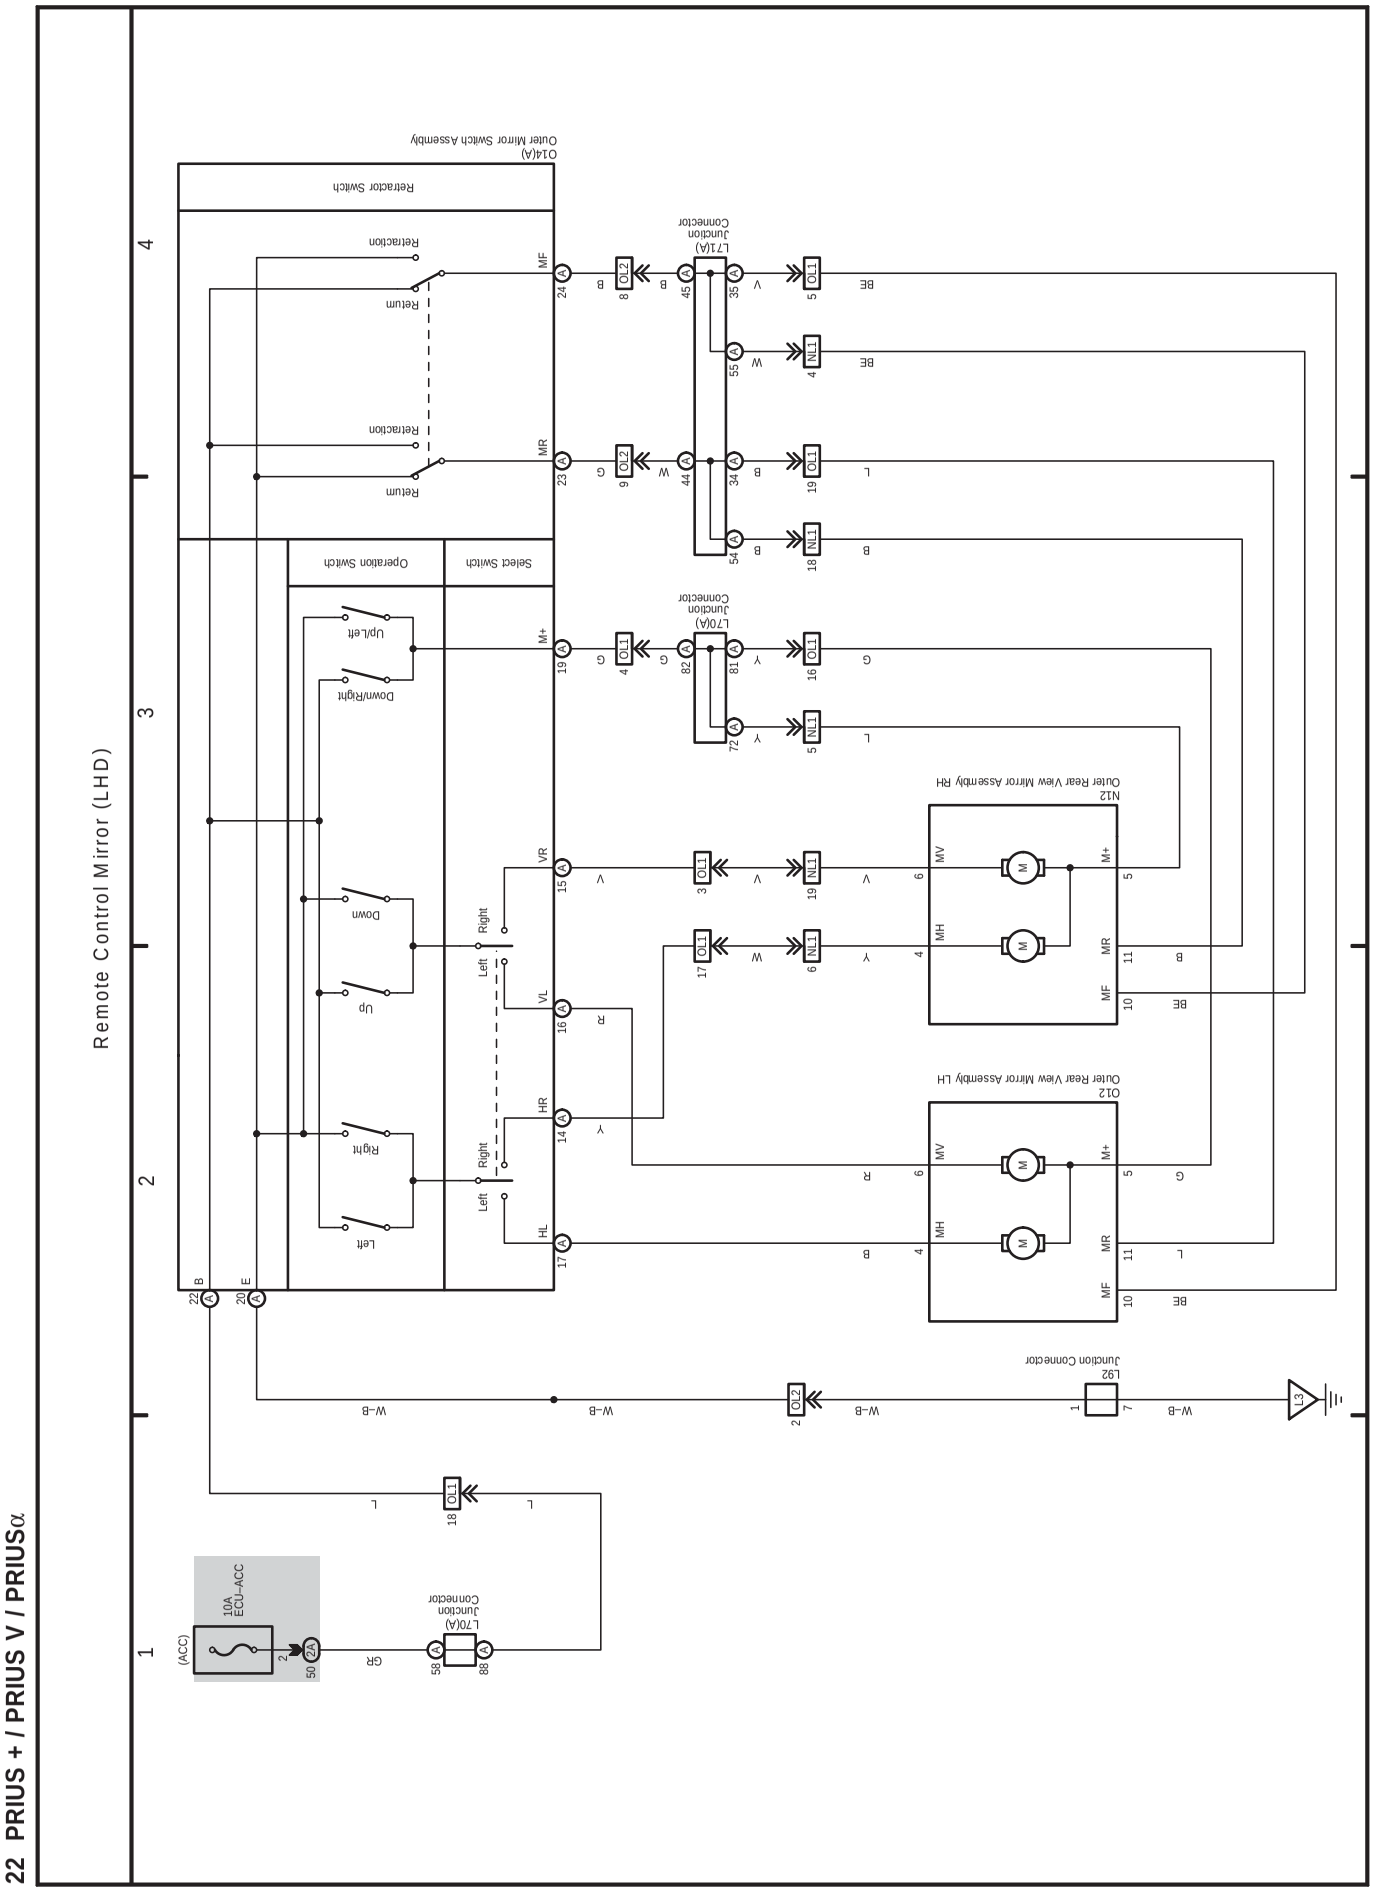

Remote Control Mirror (LHD)
Outer Mirror Switch Assembly
O14(A)
Retractor Switch
Operation Switch
Select Switch
Retraction
Return
Up/Left
Down/Right
Down
Up
Right
Left
Outer Rear View Mirror Assembly RH
N12
Outer Rear View Mirror Assembly LH
O12
Junction Connector
L71(A)
L70(A)
L92
10A
ECU-ACC
(ACC)
MF
MR
M+
VR
VL
HR
HL
MV
MH
M
OL1
OL2
NL1
B
E
W-B
GR
L
BE
G
R
Y
V
W