

(Cont. next page)


Power Seat (LHD)

∗4 : Except Lumbar Support Only

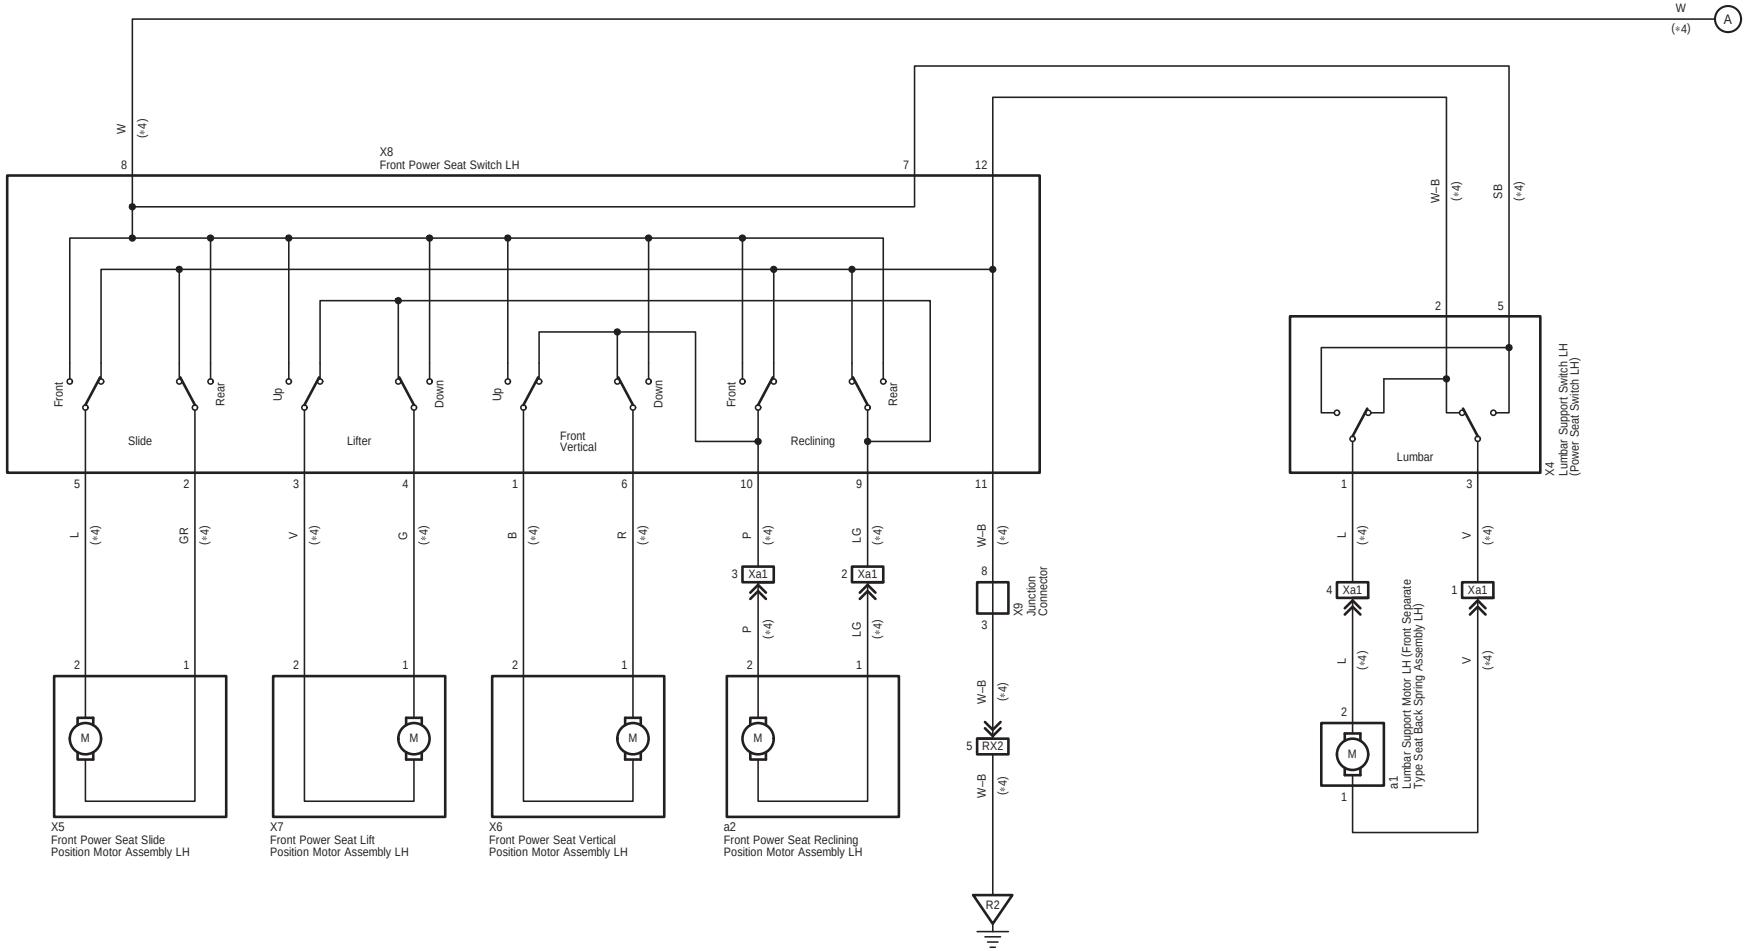

(Cont. next page)

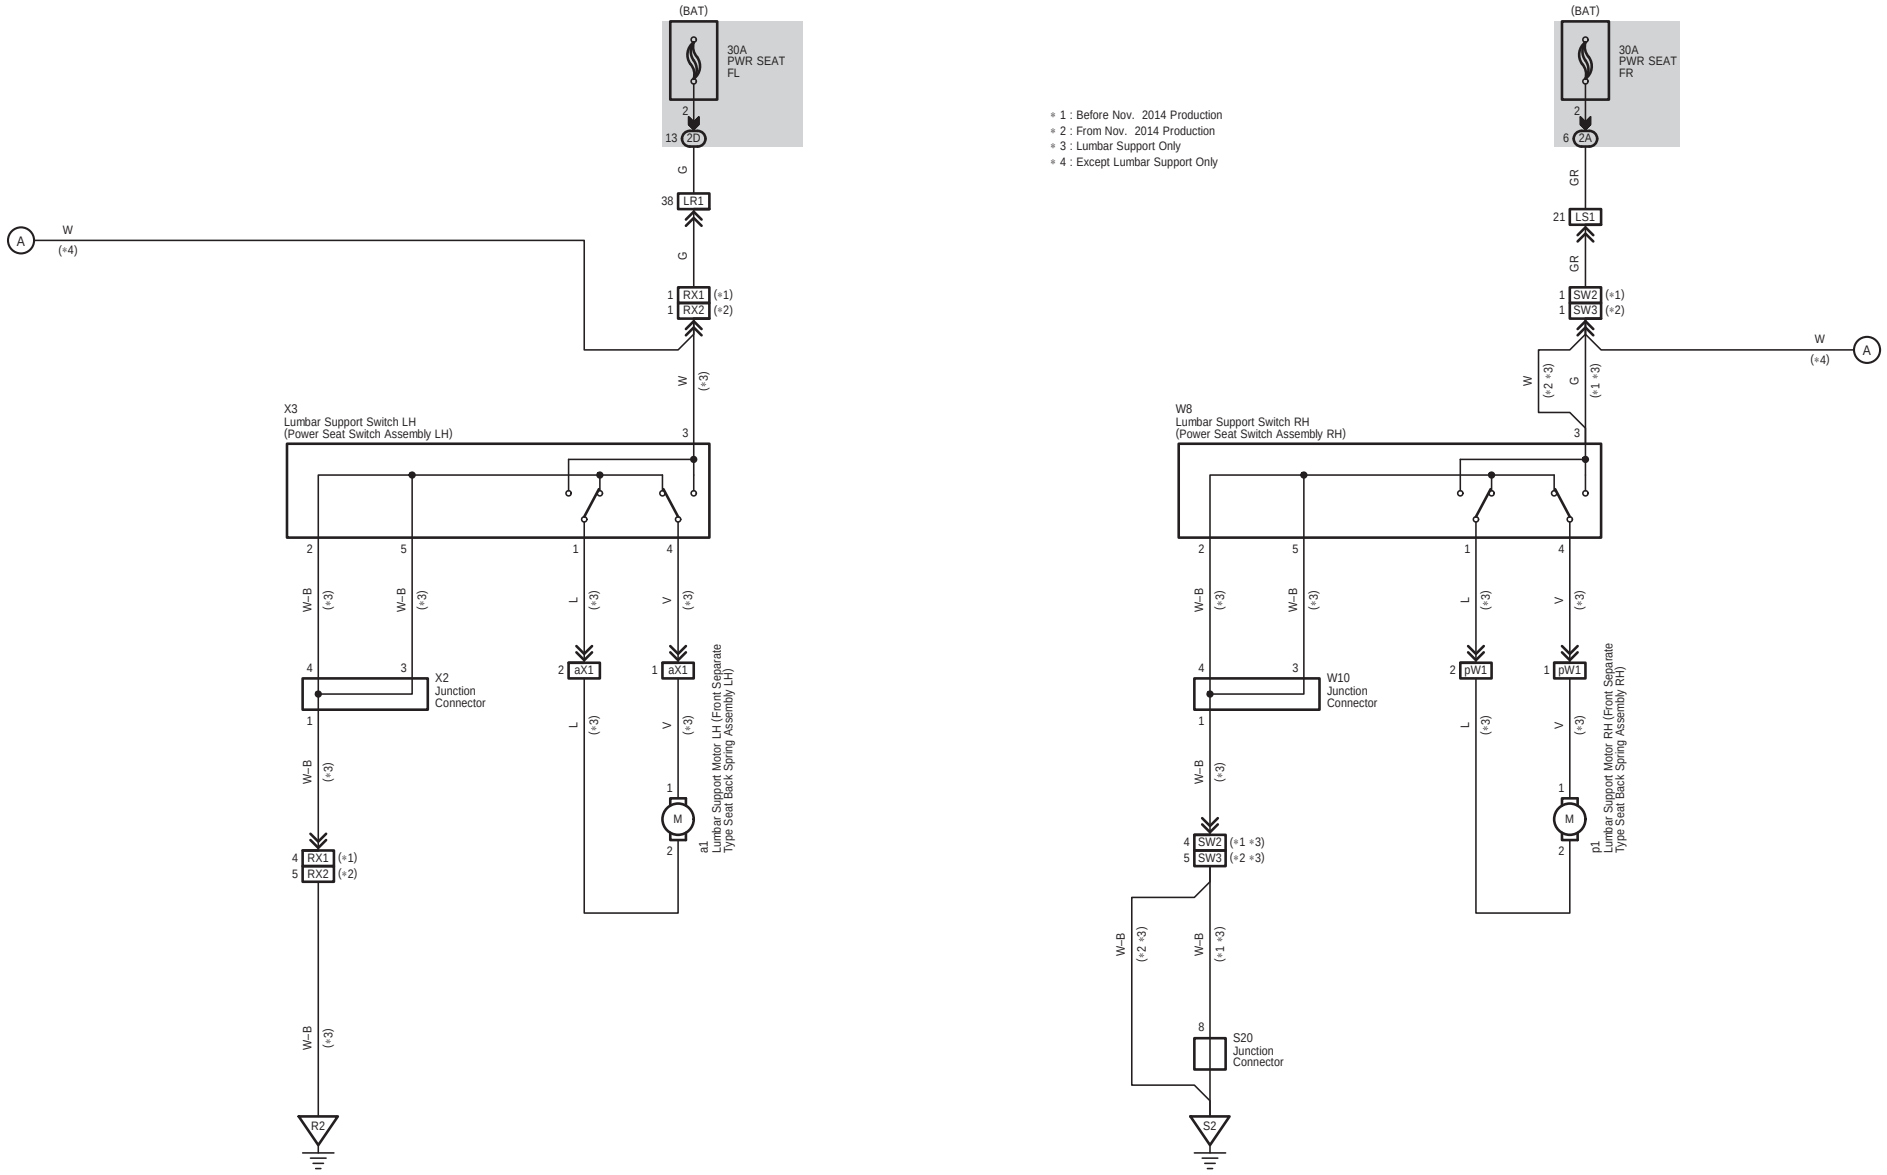

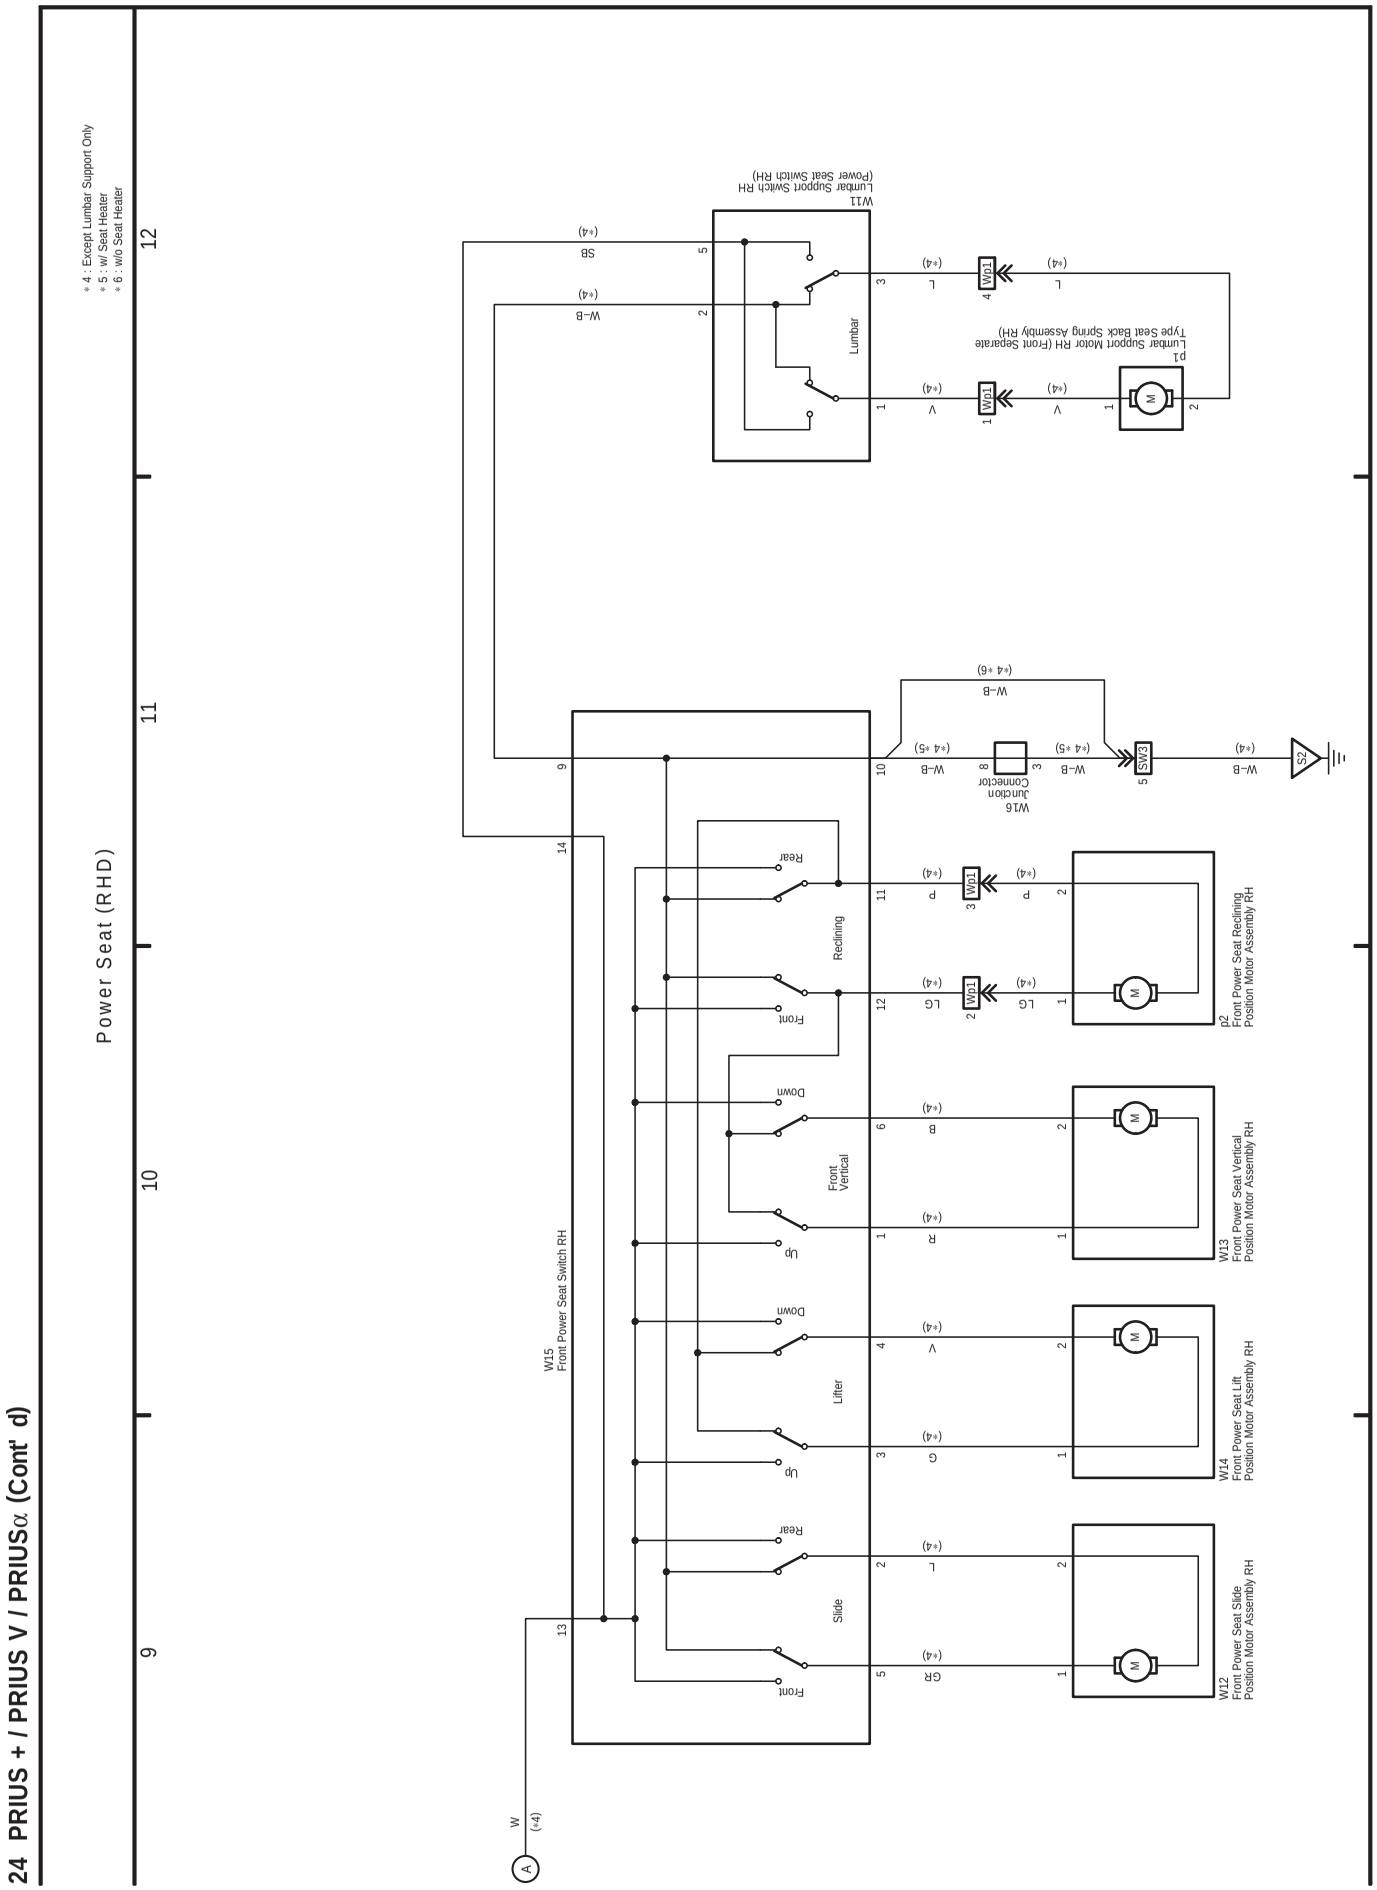
24 PRIUS + / PRIUS V / PRIUSα (Cont' d)
Power Seat (RHD)
9
10
11
12
* 4 : Except Lumbar Support Only
* 5 : w/ Seat Heater
* 6 : w/o Seat Heater
W11
Lumbar Support Switch RH
(Power Seat Switch RH)
Lumbar
P1
Lumbar Support Motor RH (Front Separate Type Seat Back Spring Assembly RH)
W16
Junction Connector
SW3
S2
W15
Front Power Seat Switch RH
Reclining
Front Vertical
Lifter
Slide
Up
Down
Front
Rear
P2
Front Power Seat Reclining Position Motor Assembly RH
W13
Front Power Seat Vertical Position Motor Assembly RH
W14
Front Power Seat Lift Position Motor Assembly RH
W12
Front Power Seat Slide Position Motor Assembly RH