
* 7:Before May 2016 Production
* 8:From May 2016 Production

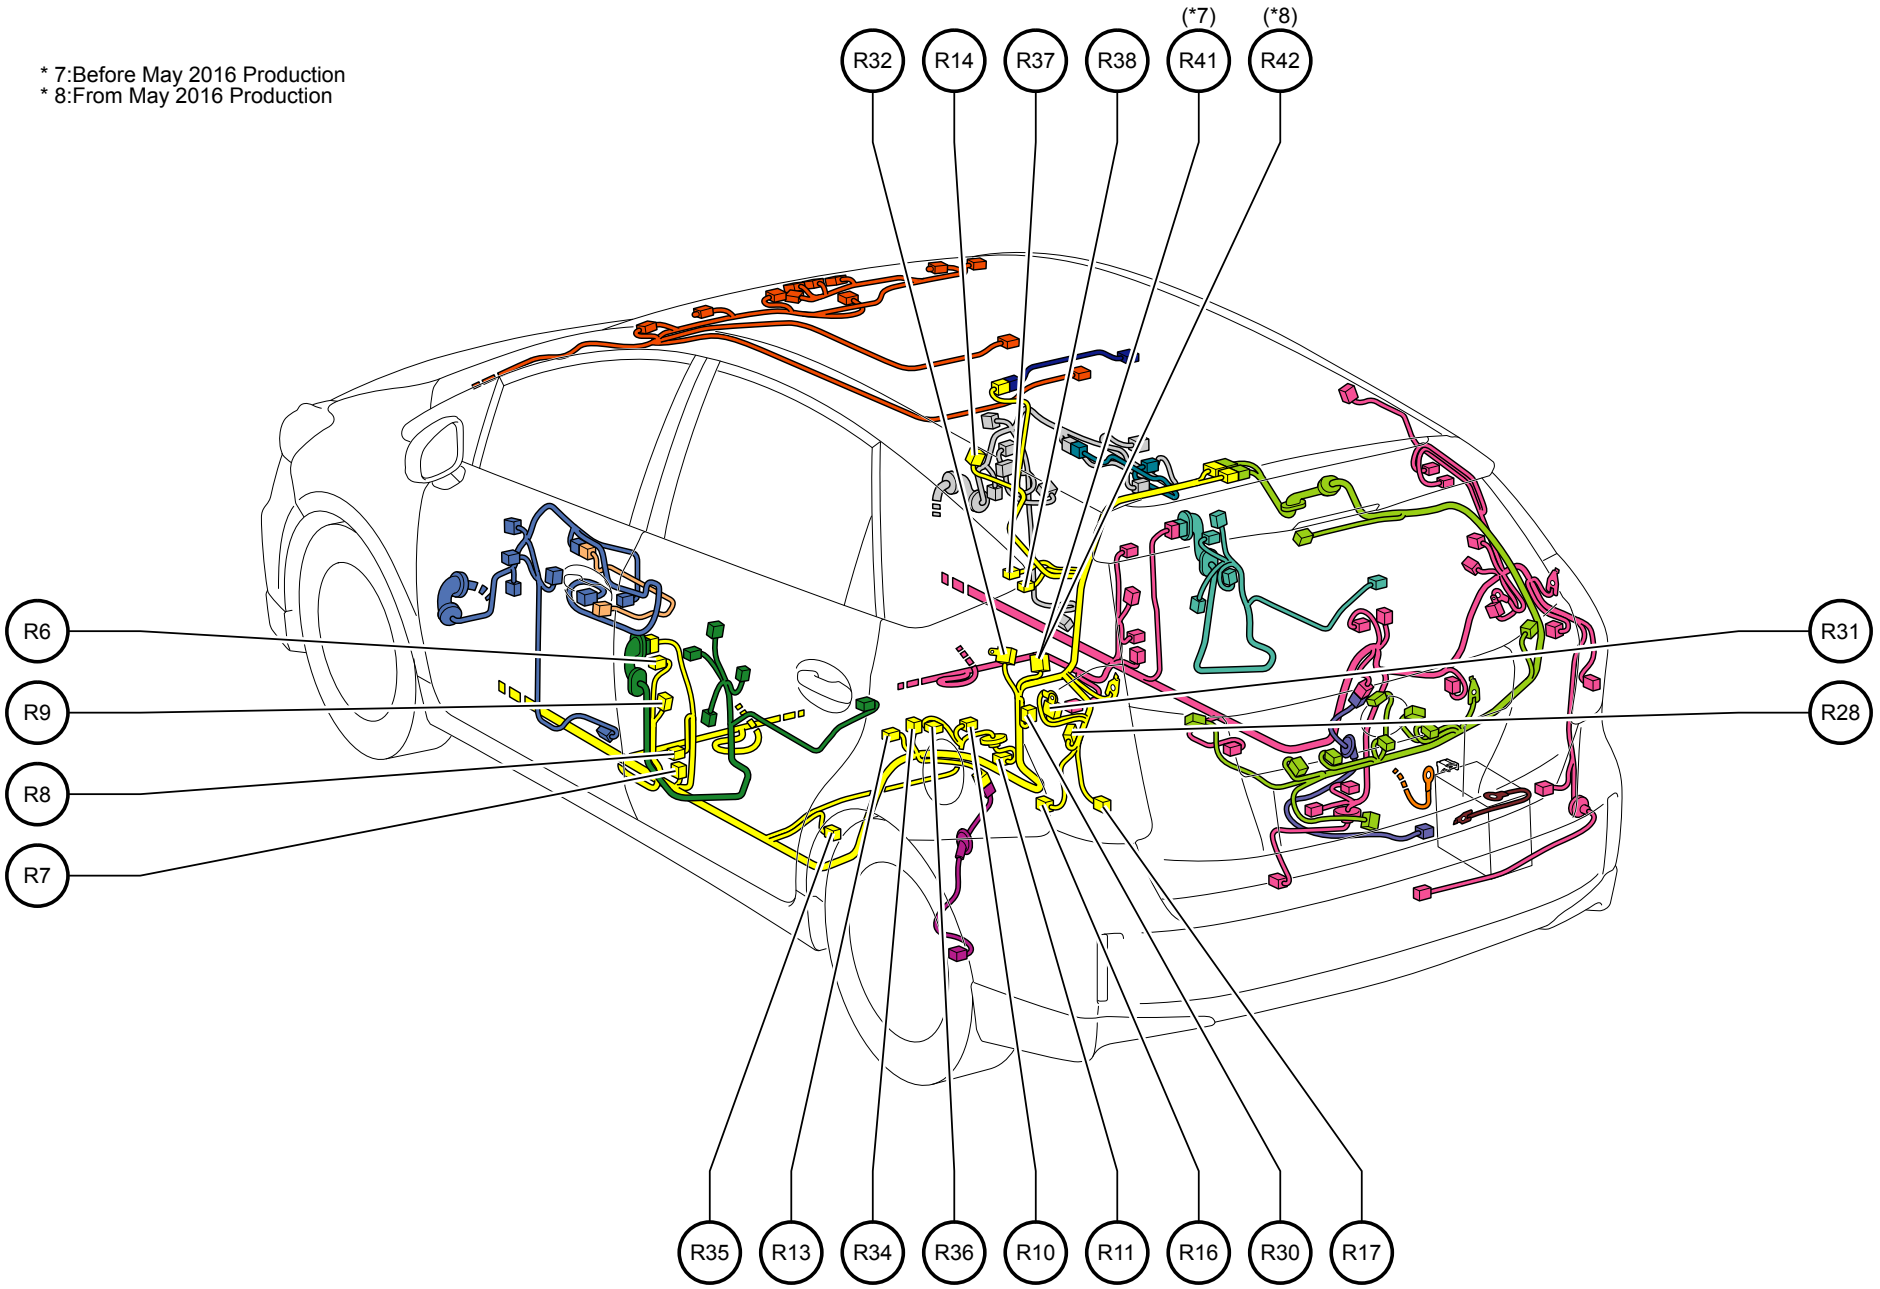


R 6 Front Door Courtesy Light Switch Assembly LH
R 7 Front Pretensioner LH (Front Seat Outer Belt Assembly LH)
R 8 Front Pre-Crash Seat Belt Motor LH (Front Seat Outer Belt Assembly LH)
R 9 Side Airbag Sensor Assembly LH
R 10 No. 3 Indoor Electrical Key Antenna Assembly
R 11 Fuel Sender Gage Assembly
R 13 Rear Door Courtesy Light Switch Assembly LH
R 14 Curtain Shield Airbag Assembly LH
R 16 No. 2 Room Light Assembly
R 17 Rear Combination Light Assembly LH
R 28 Junction Connector
R 30 Diode (Back Door Courtesy Light)
R 31 Junction Connector
R 32 Noise Filter (Rear Window Defogger & Stop Light)
R 34 No. 2 Side Airbag Sensor Assembly LH
R 35 Rear Seat 3 Point Type Belt Assembly LH
R 36 Rear Seat Lap Type Belt Assembly Center
R 37 Glass Breakage Sensor LH (Quarter Window Assembly LH)
R 38 Glass Breakage Sensor LH (Quarter Window Assembly LH)
R 41 Tire Pressure Warning ECU (Tire Pressure Monitor ECU)
R 42 Tire Pressure Warning ECU and Receiver (Door Control and Tire Pressure Monitoring System Receiver Assembly)


R 6
Black




R 7
Black




R 8
White



R 9
Yellow

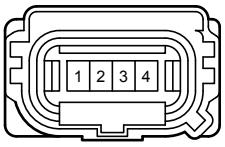

R 10
White

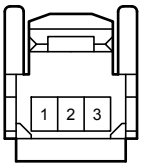


R 11
White




R 13
Black




R 14
Black

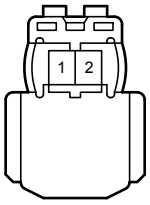


R 16
White



R 17
White

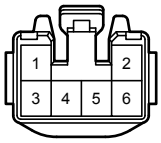


R 28
Black

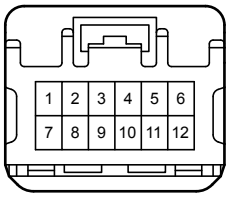


R 30
Black




R 31
White

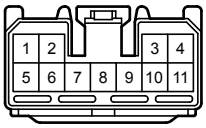


R 32
White




R 34
Yellow

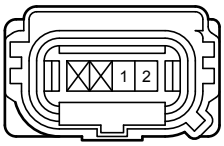

R 35
Black

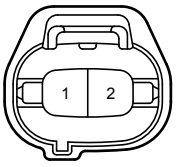

R 36
Gray

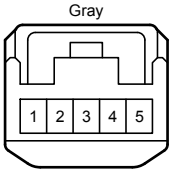


R 37
White



R 38
White



R 41
Black

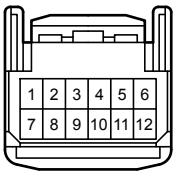

R 42
White

