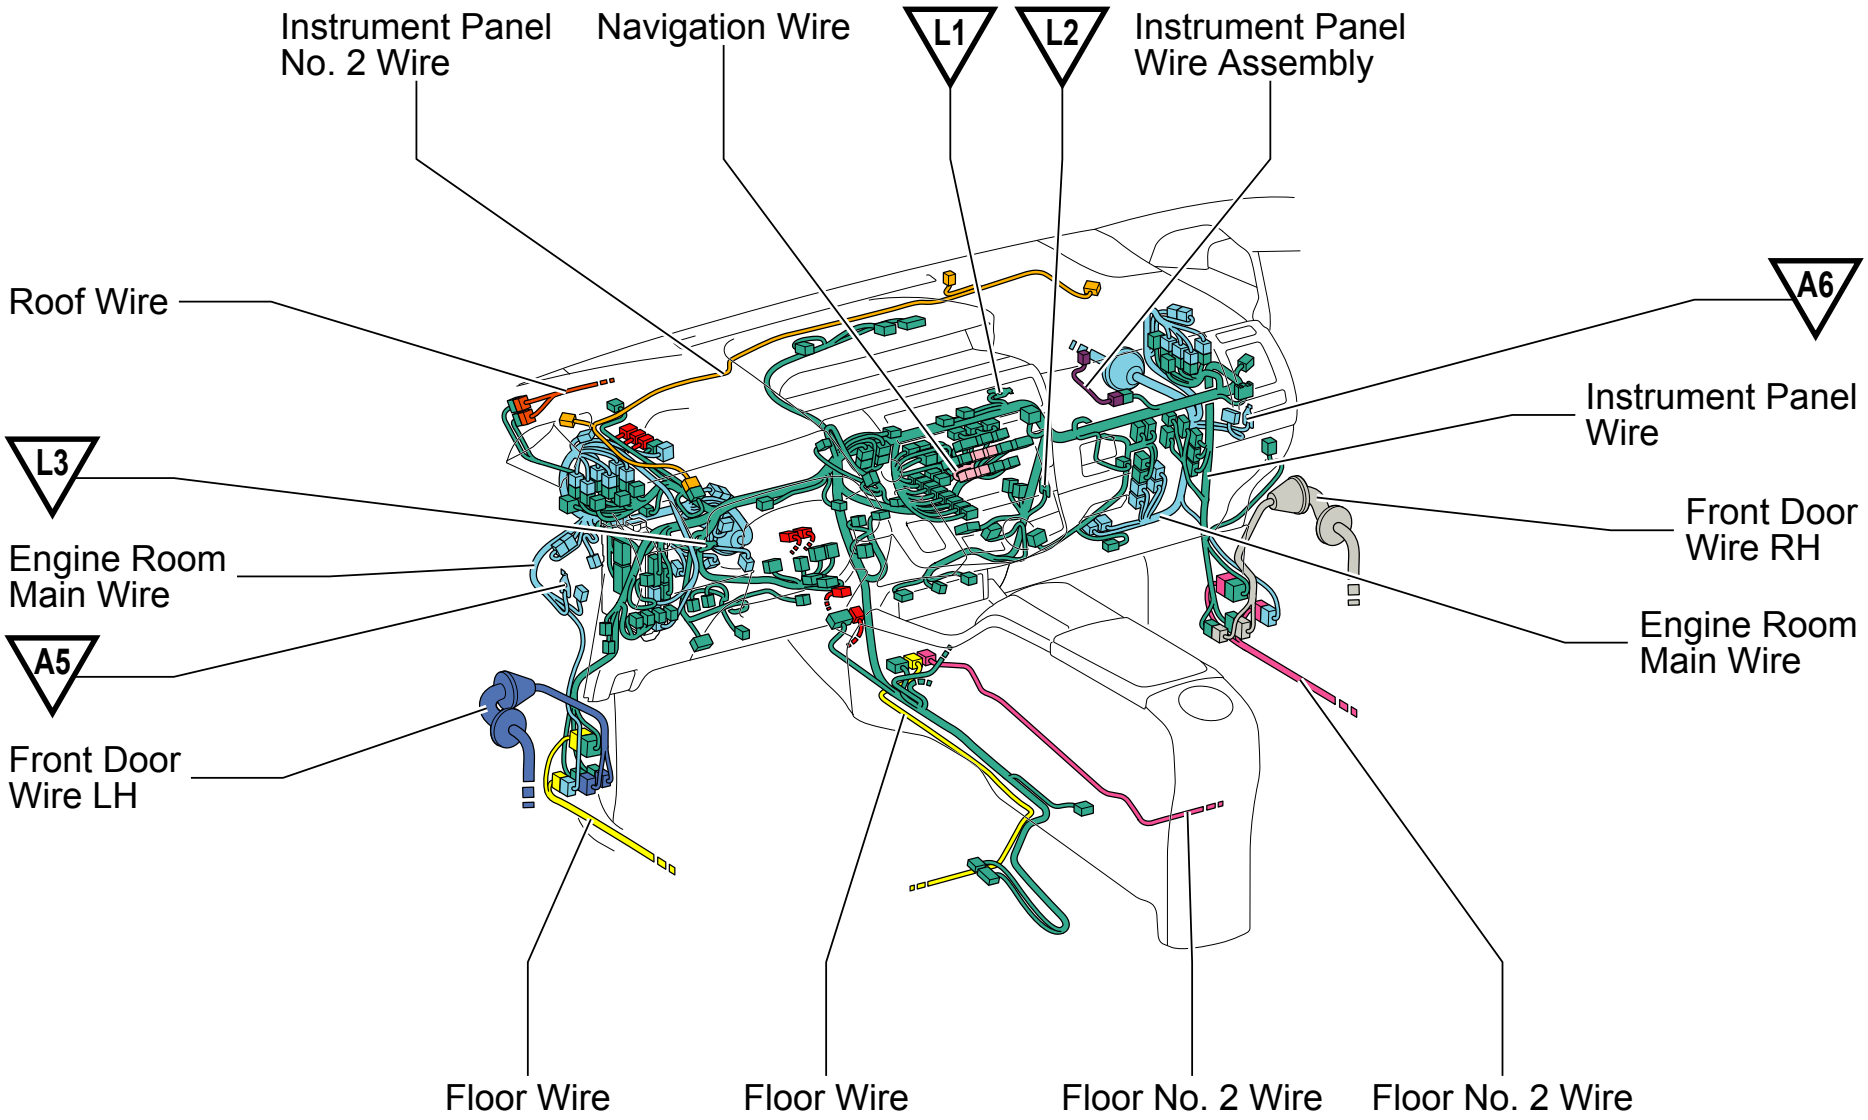

Instrument Panel No. 2 Wire
Navigation Wire
L1
L2
Instrument Panel Wire Assembly
Roof Wire
A6
Instrument Panel Wire
L3
Front Door Wire RH
Engine Room Main Wire
Engine Room Main Wire
A5
Front Door Wire LH
Floor Wire
Floor Wire
Floor No. 2 Wire
Floor No. 2 Wire