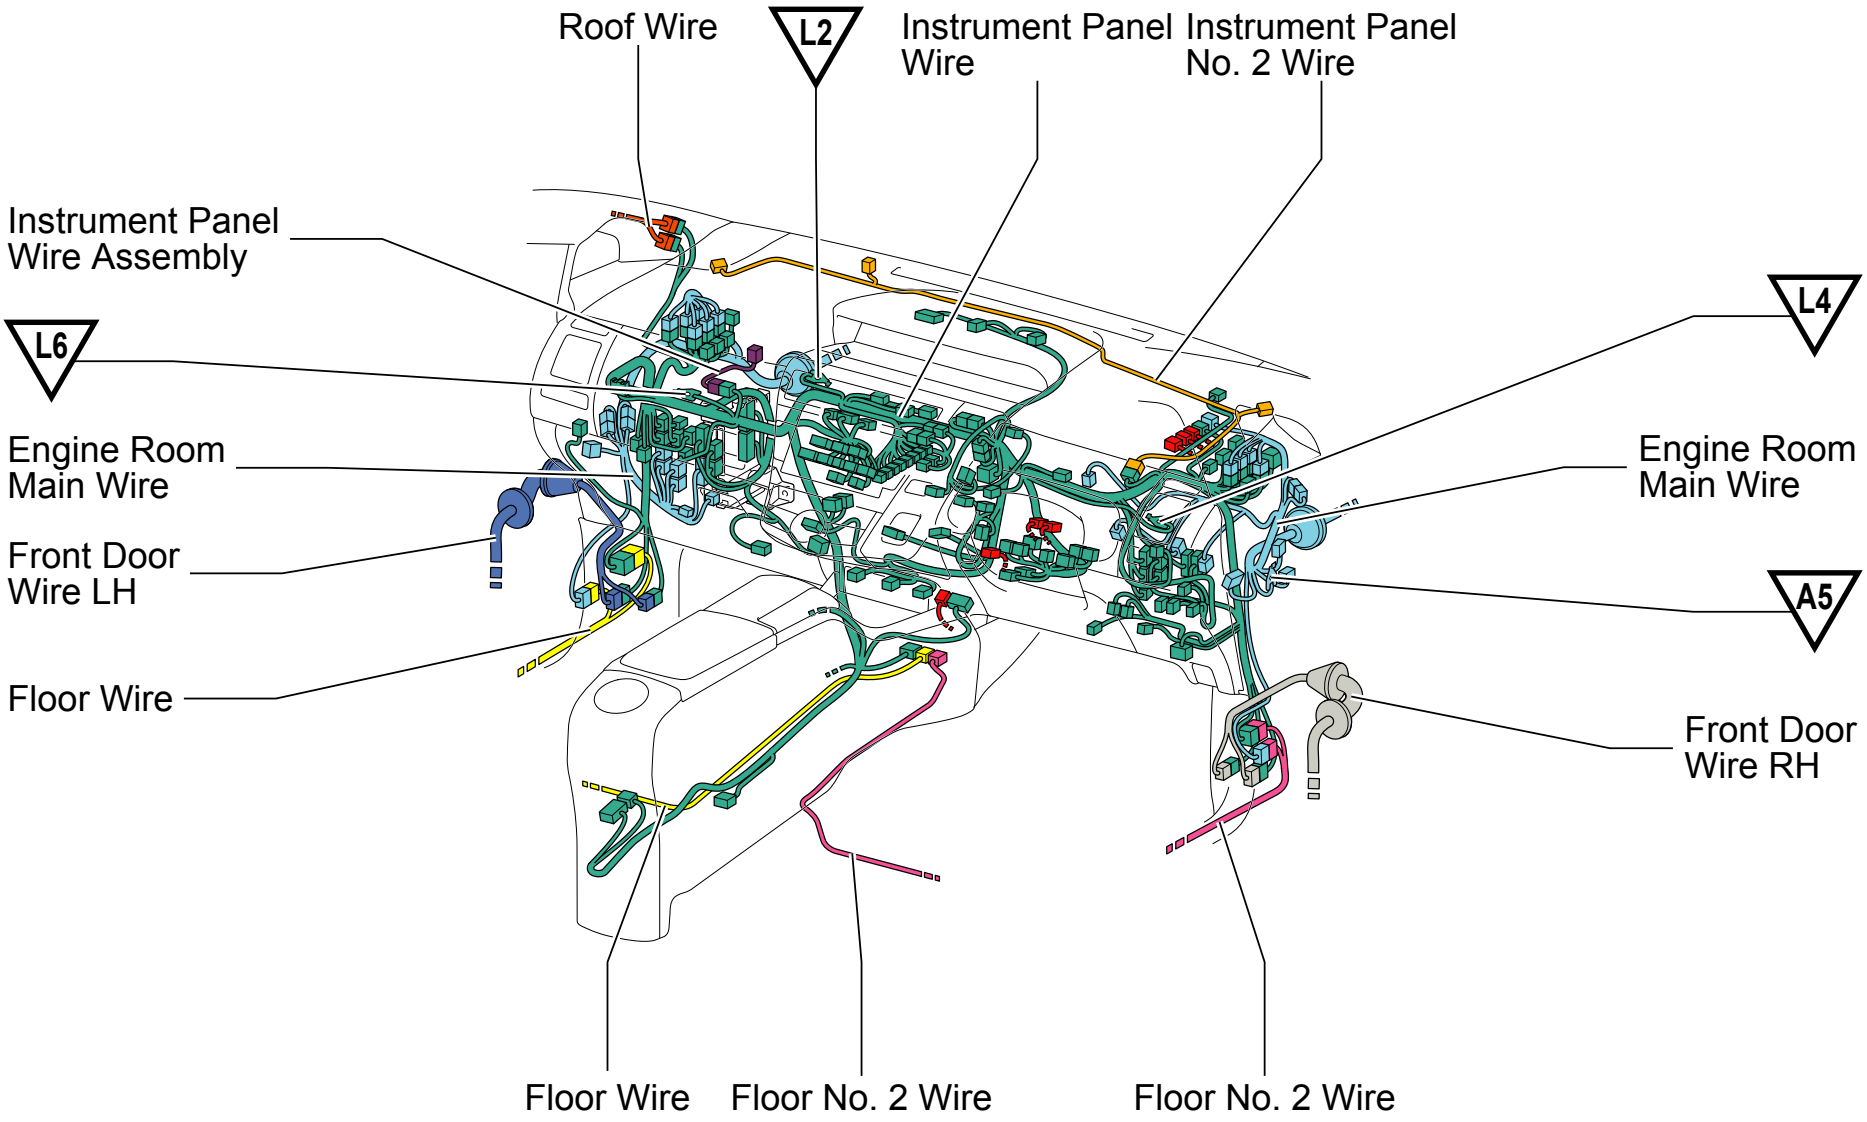

Roof Wire
L2
Instrument Panel Wire
Instrument Panel No. 2 Wire
Instrument Panel Wire Assembly
L6
Engine Room Main Wire
Front Door Wire LH
Floor Wire
L4
Engine Room Main Wire
A5
Front Door Wire RH
Floor Wire
Floor No. 2 Wire
Floor No. 2 Wire