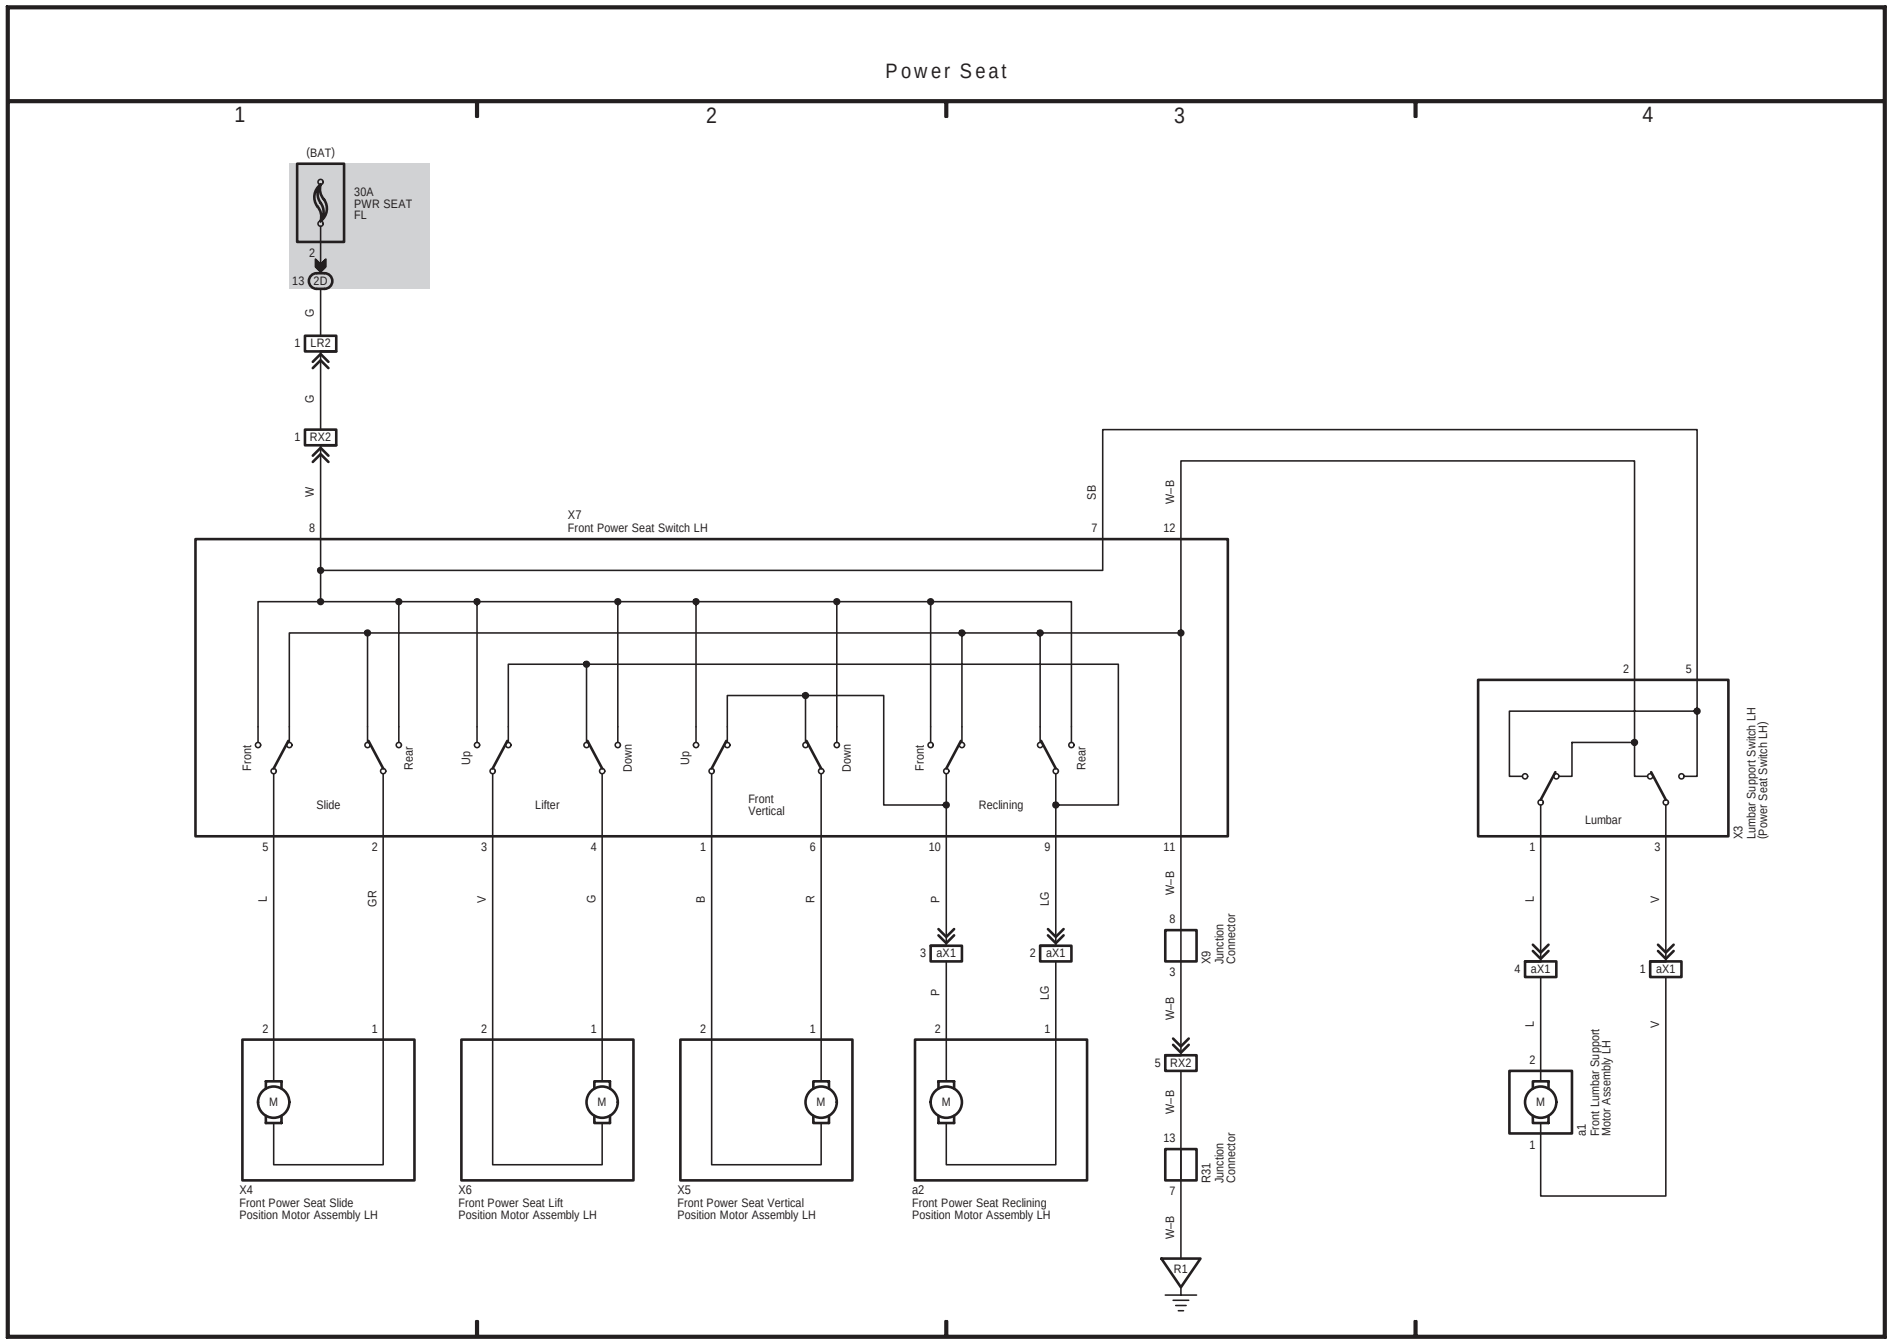

Power Seat
1
2
3
4
(BAT)
30A
PWR SEAT
FL
2
13 2D
G
1 LR2
G
1 RX2
W
8
X7
Front Power Seat Switch LH
SB
7
W–B
12
Front
Slide
Rear
Up
Lifter
Down
Up
Front
Vertical
Down
Front
Reclining
Rear
5
2
3
4
1
6
10
9
11
L
GR
V
G
B
R
P
LG
W–B
3 aX1
2 aX1
P
LG
8
X9
Junction
Connector
3
W–B
5 RX2
W–B
13
R31
Junction
Connector
7
W–B
R1
2
5
Lumbar
X3
Lumbar Support Switch LH
(Power Seat Switch LH)
1
3
L
V
4 aX1
1 aX1
L
V
2
1
a1
Front Lumbar Support
Motor Assembly LH
M
X4
Front Power Seat Slide
Position Motor Assembly LH
X6
Front Power Seat Lift
Position Motor Assembly LH
X5
Front Power Seat Vertical
Position Motor Assembly LH
a2
Front Power Seat Reclining
Position Motor Assembly LH