




(BAT)
(IG)
7. 5A
ECU–B
10A
IGN
W1
Rear In Weight Detection
Sensor Sub–Assembly
W2(A), W3(B)
Occupant Detection ECU
L16(A), R1(B), S1(C)
Center Airbag Sensor Assembly
W4
Front In Weight Detection
Sensor Sub–Assembly
R4
Front Seat Inner
Belt Assembly LH
Buckle Switch
L95
Junction
Connector
S20
Junction
Connector
LBE+
LBE–
CANH
CANL
FSR+
FSR–
LS1
SW1
S1



W7
Rear Out Weight Detection
Sensor Sub–Assembly
1
2
3
V
B
BR
6 A
10 A
4 A
W2(A), W3(B)
Occupant Detection ECU
12 A
8 A
2 A
9 B
5 B
W
L
LG
G
P
1
2
3
1
2
W6
Front Out Weight Detection
Sensor Sub–Assembly
Buckle Switch
W5
Front Seat Inner
Belt Assembly RH
A58
Skid Control ECU with Actuator Assembly
CA1L
CA1H
RR+
RR–
RL+
RL–
FL+
FL–
FR+
FR–
38
37
22
9
20
7
31
32
18
5
L
LG
W
B
W
B
R
G
P
L
2 AL3
3 AL3
Rear Speed
Sensors
Front Speed
Sensors
W
V
V
W
7
18
21
10
L94
Junction
Connector
12
1
W
P
P
W


(IG)
10A
IGN
23
2A
L
2
L87
Junction
Connector
3
L
5
LI2
L
10
IM1
L
6
M2
Passenger Seat
Belt Warning
Light Assembly
IG+
PBEW
3
W
2
IM1
W
4
LI2
W
(IG)
10A
GAUGE
31
2A
L
(BAT)
7. 5A
ECU–B
2
1
Y
18
2C
37
2A
R
1
L129
Junction
Connector
2
R
19
A
18
A
L27(A)
Combination Meter Assembly
IG+
B
Display
Buzzer
I/F
Driver
Driver
CPU
I/F
CAN IC
PBLT
CANH
CANL
ES
21
A
10
A
11
A
30
A
Y
P
W
34
3A
83
3A
BR
W
P
W
L2


A 58
Gray

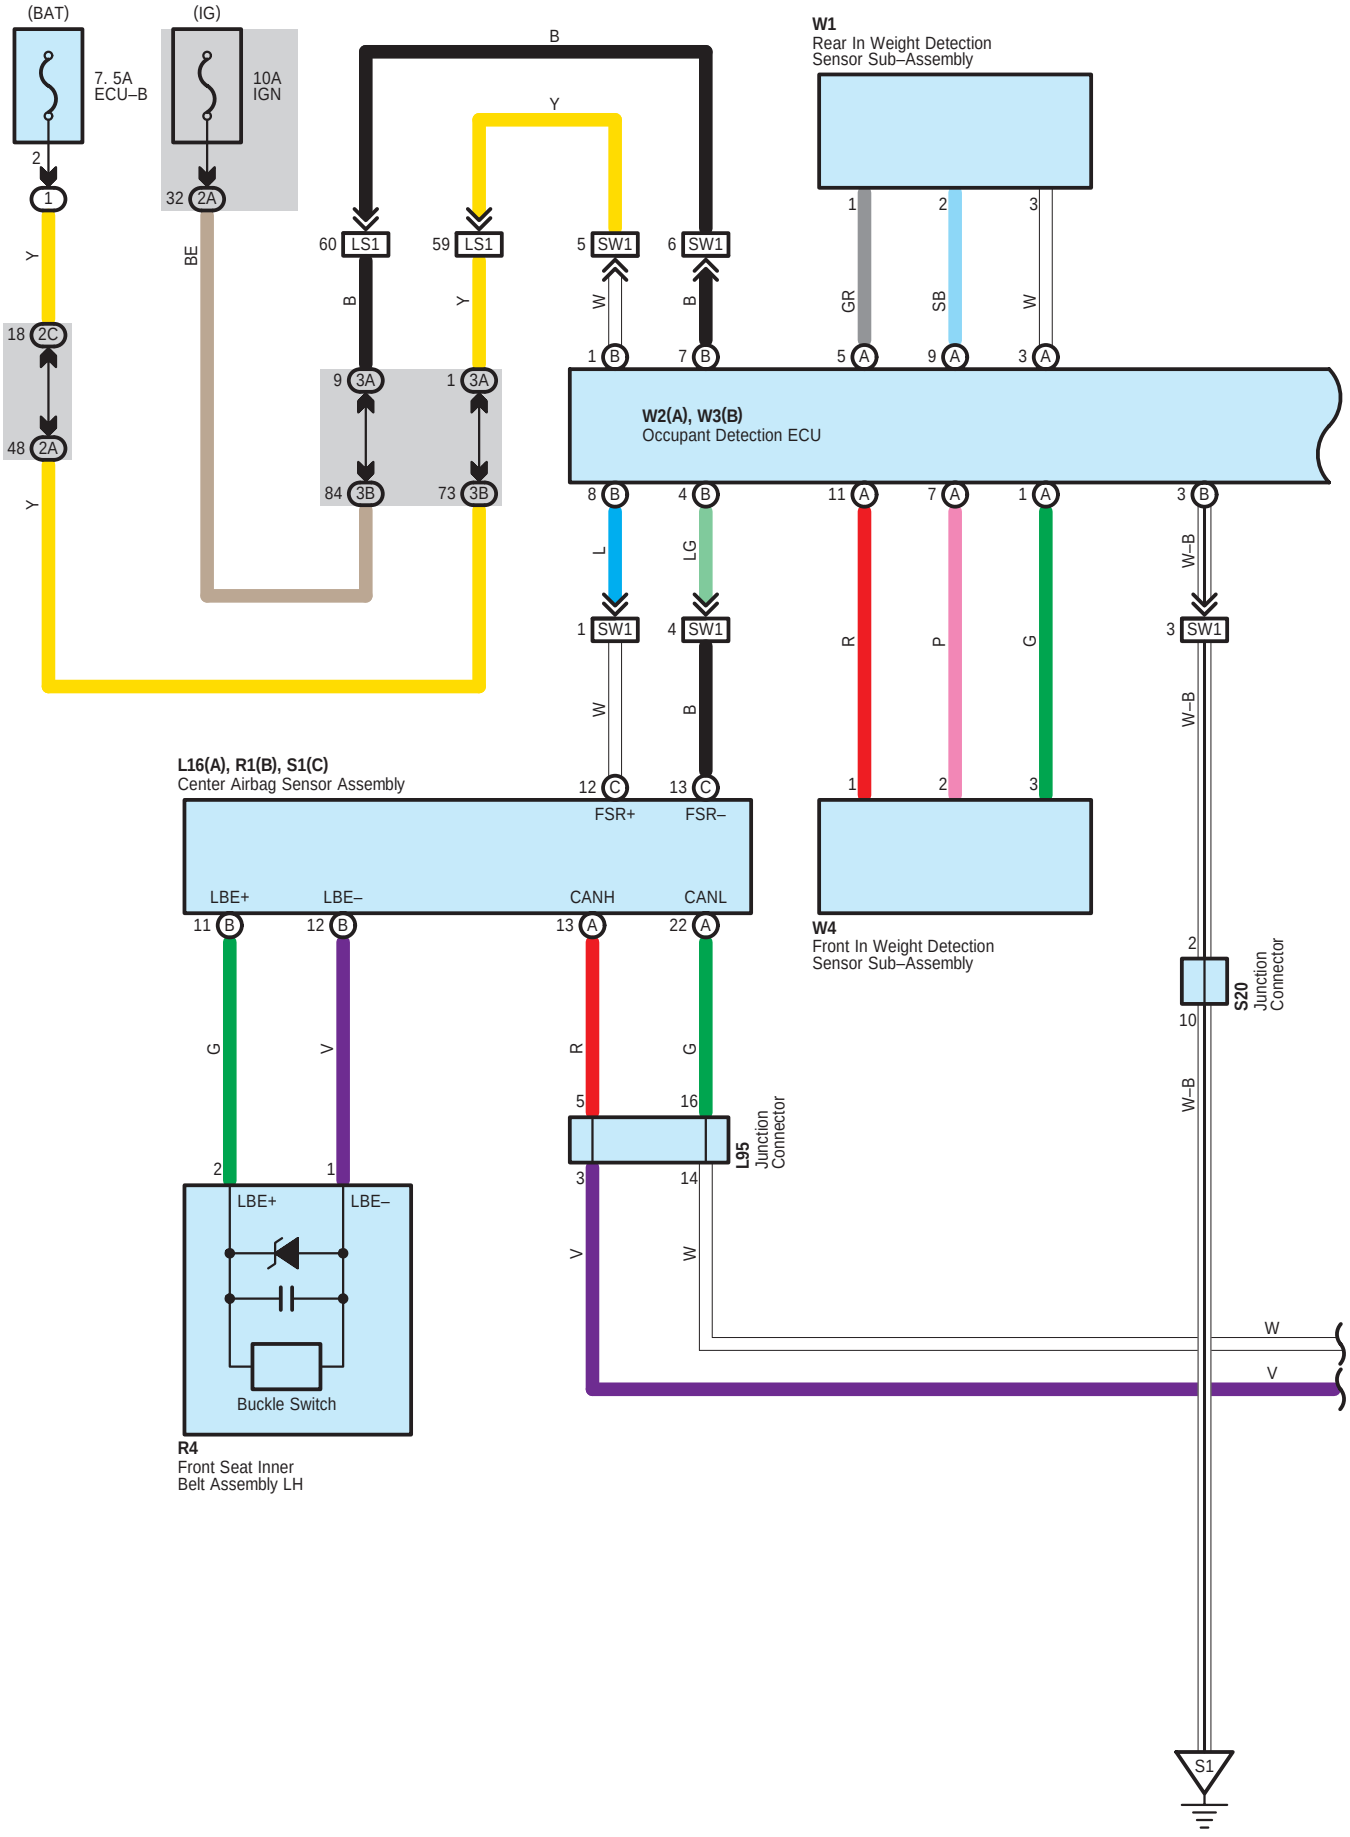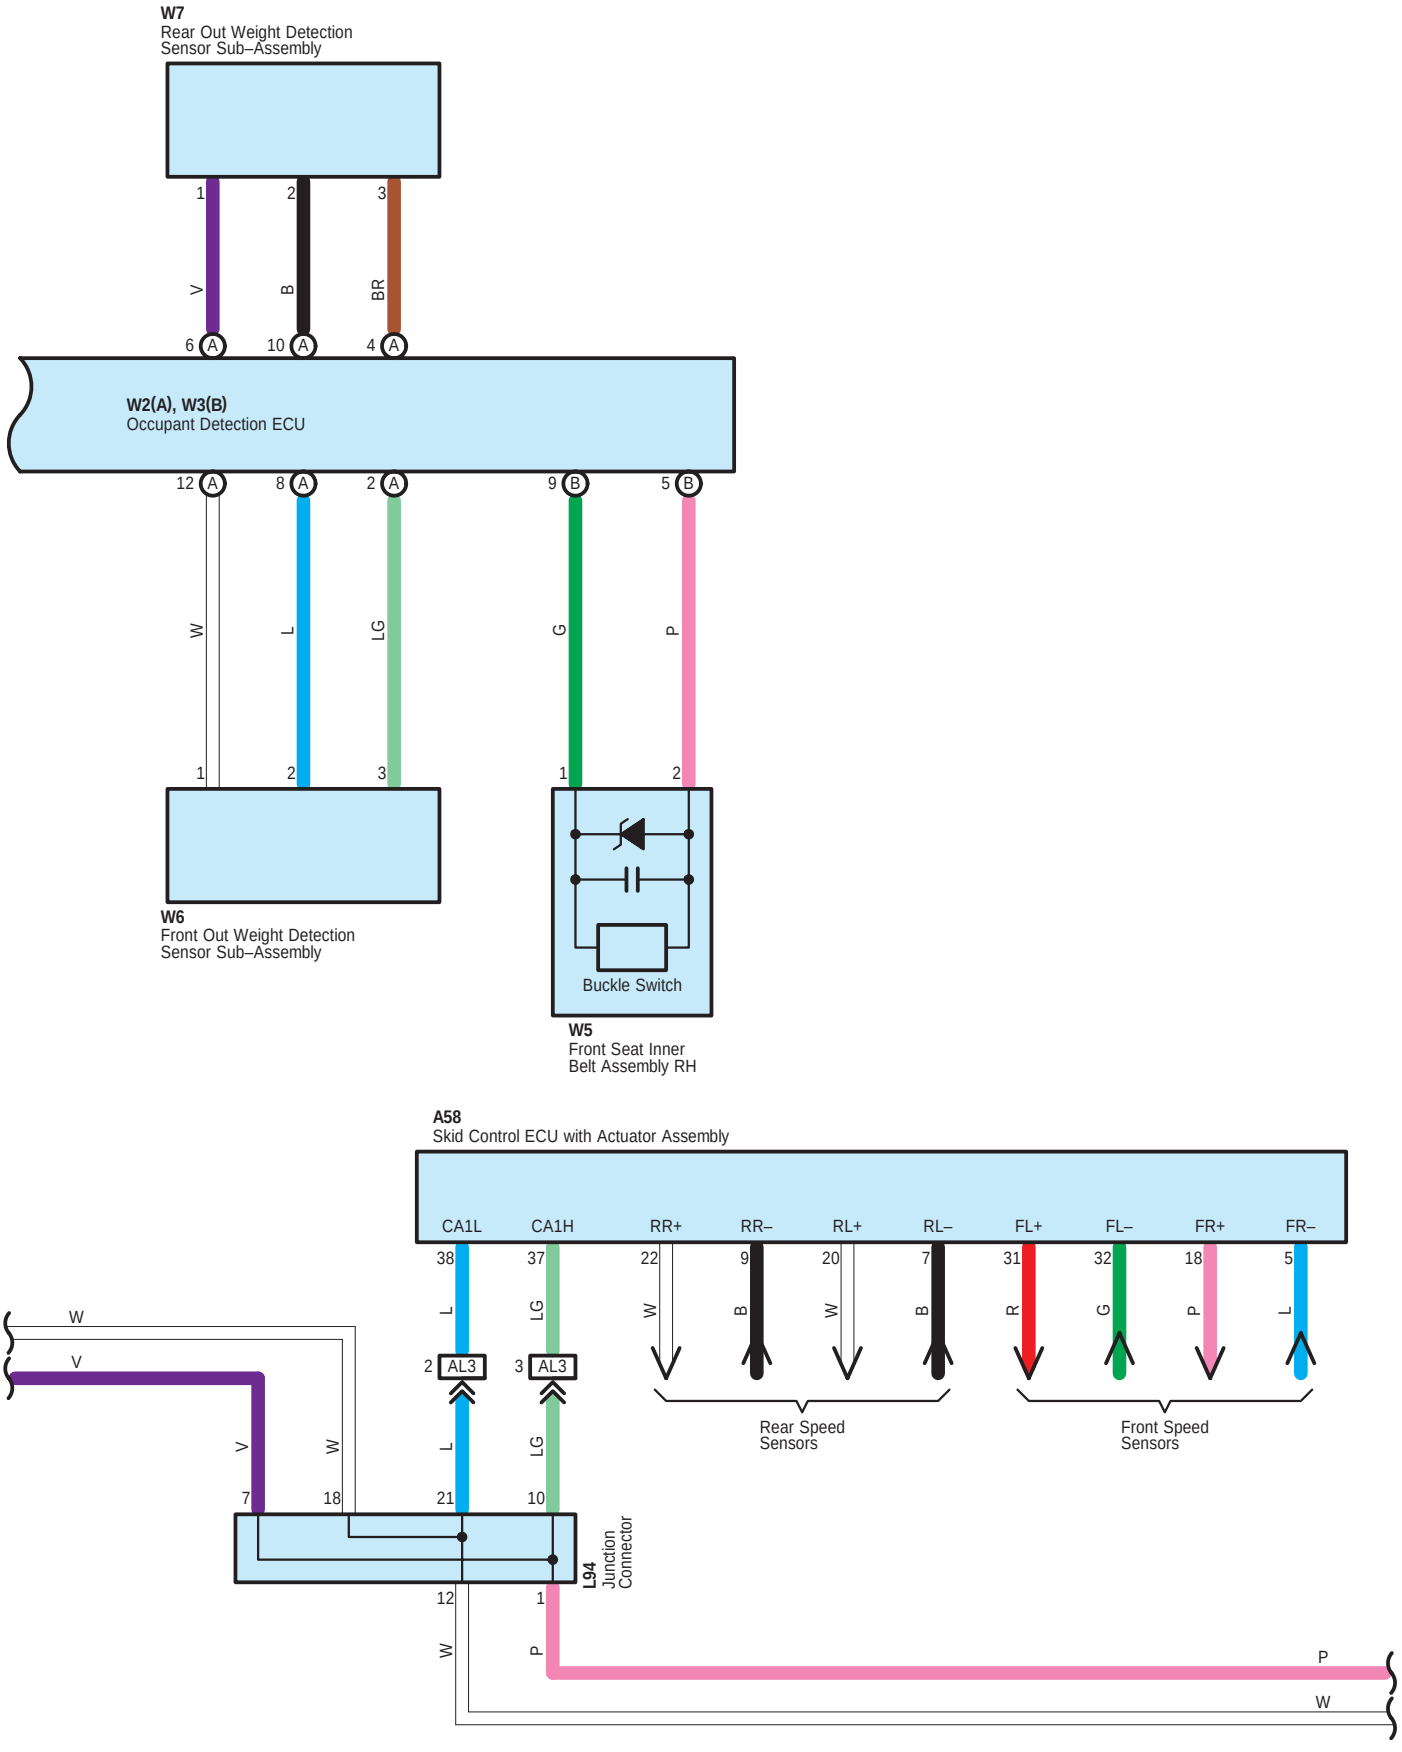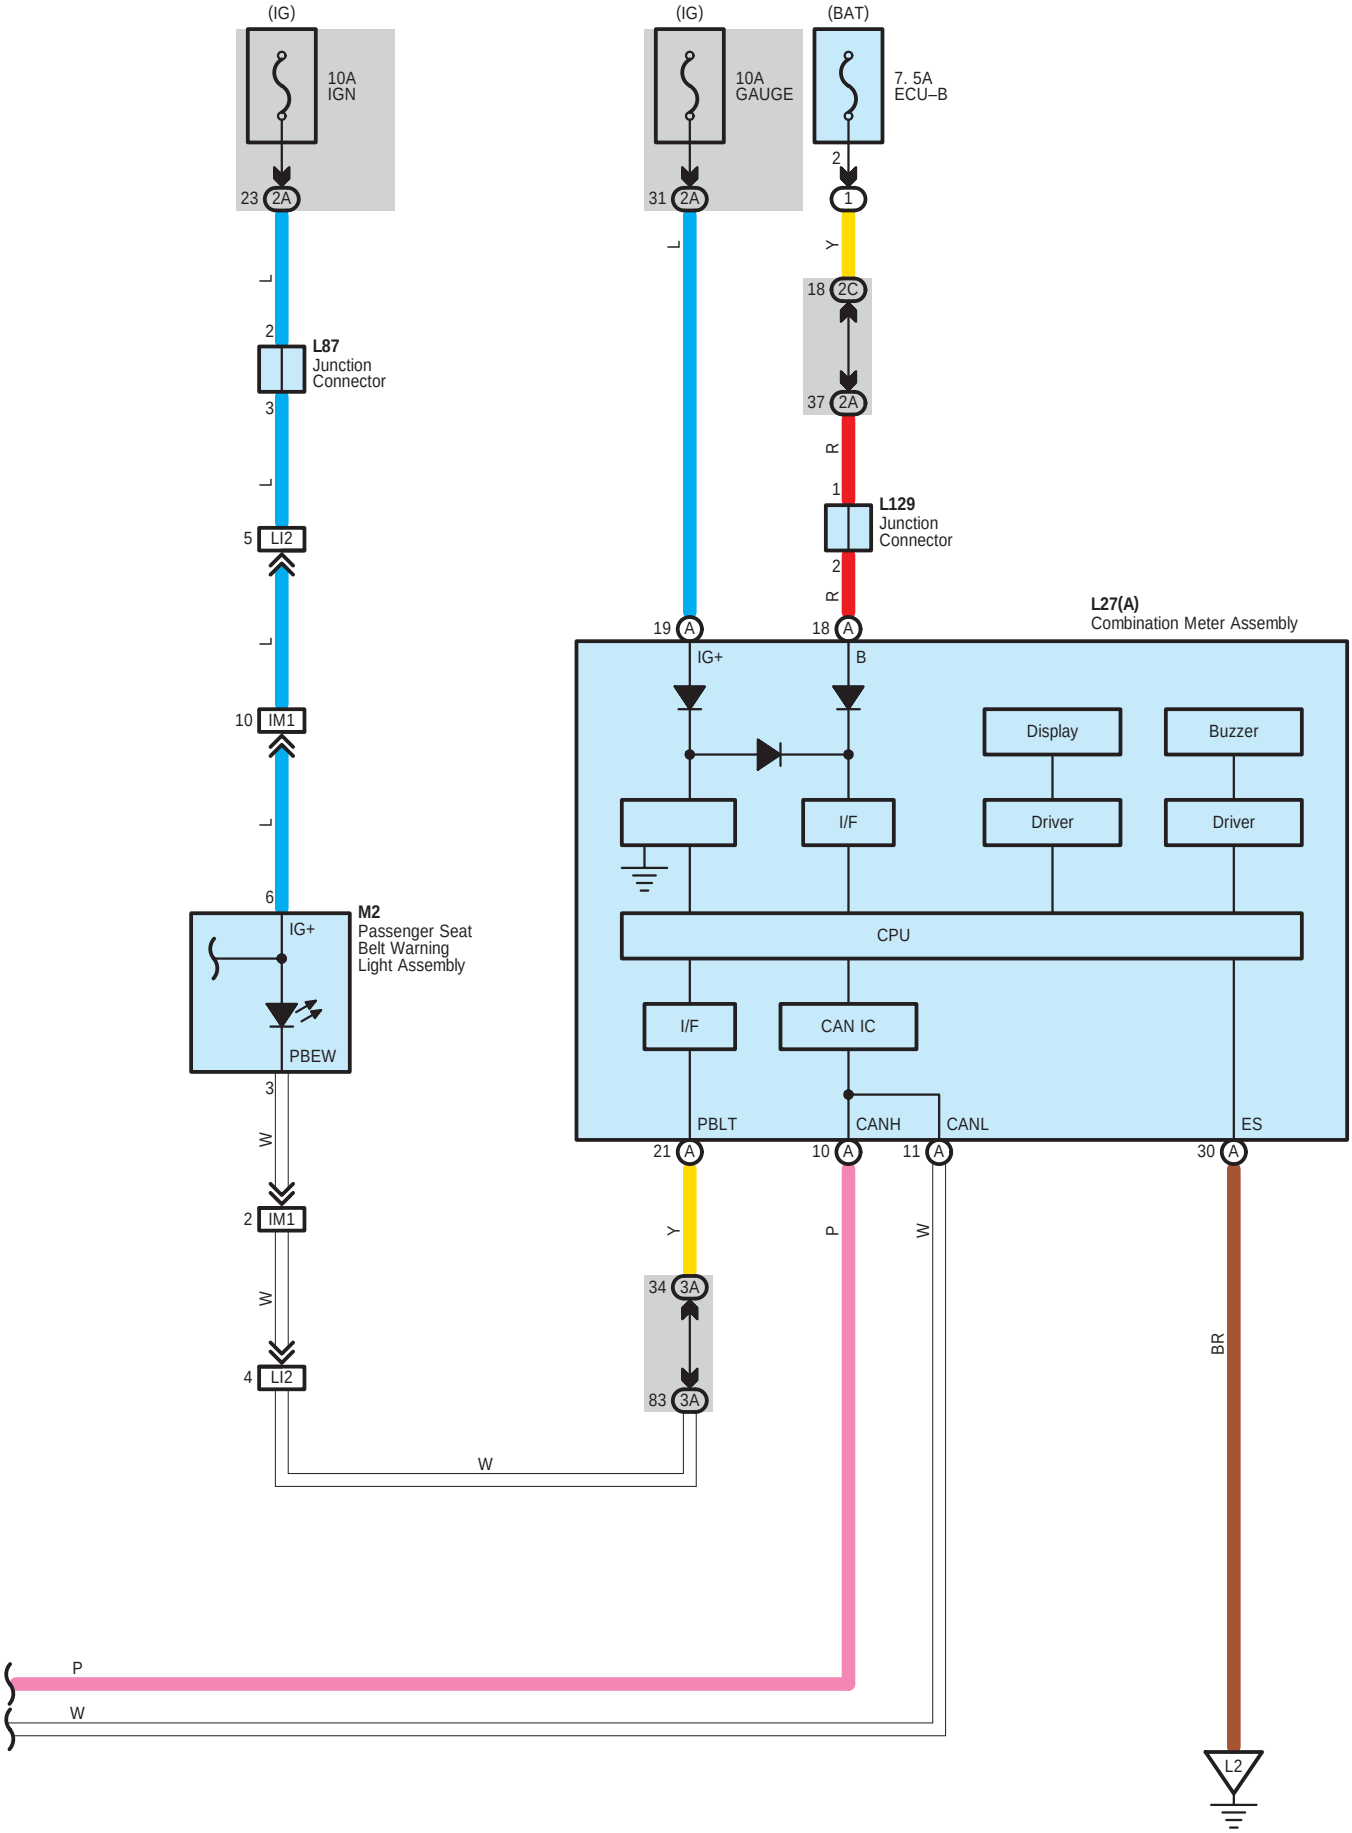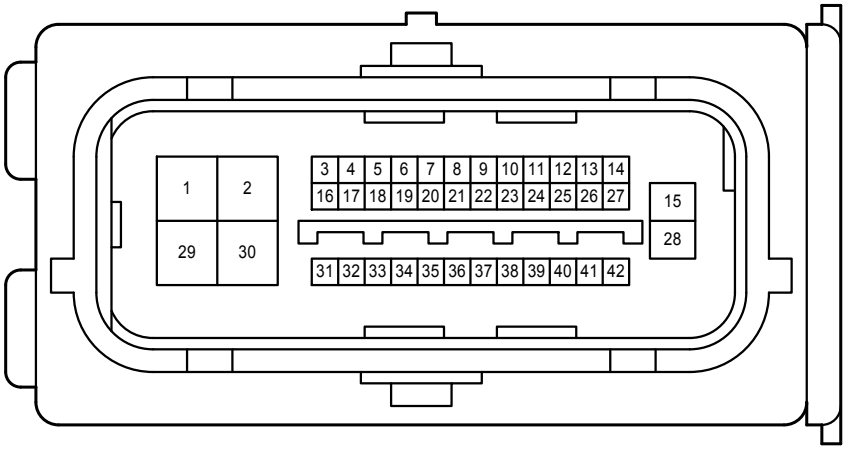


L 16
Yellow

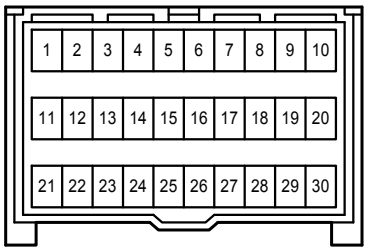


L 27
White

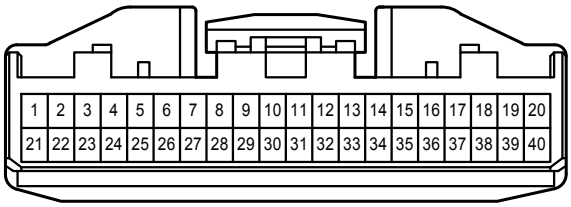


L 87
Black

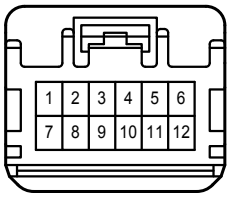


L 94
White

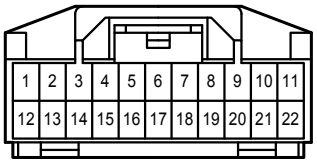


L 95
White

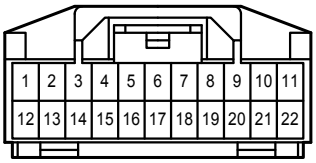


L129
Gray

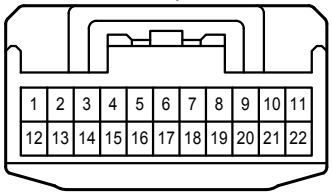

M 2
White




R 1
Yellow

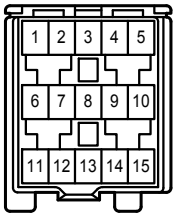


R 4
White




S 1
Yellow

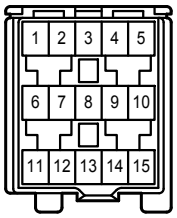


S 20
White

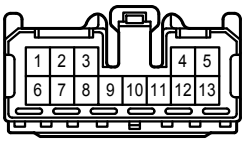


W 1
Gray

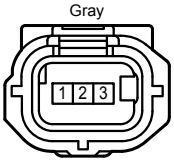


W 2
Gray

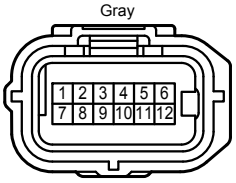

W 3
Black

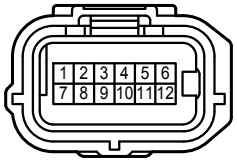


W 4
Black

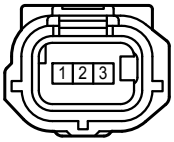


W 5
Gray




W 6
Gray

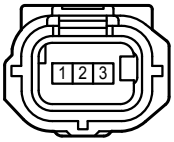


W 7
Black

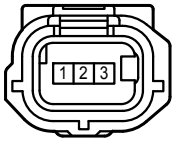


2A
White

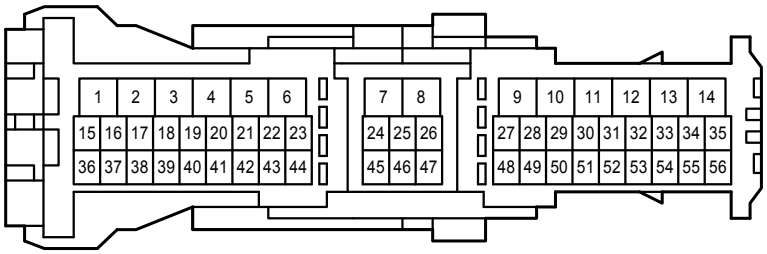


2C
White

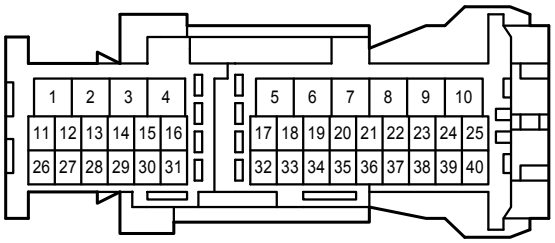


3A
White

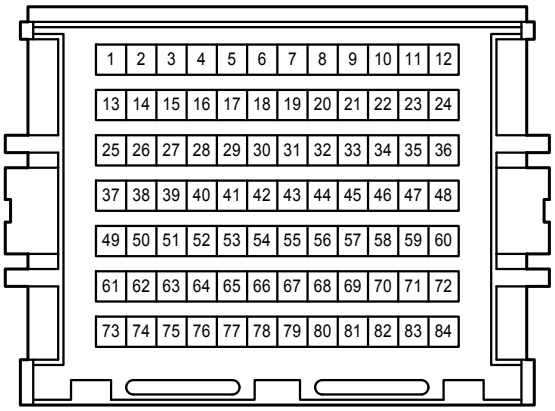


3B
White

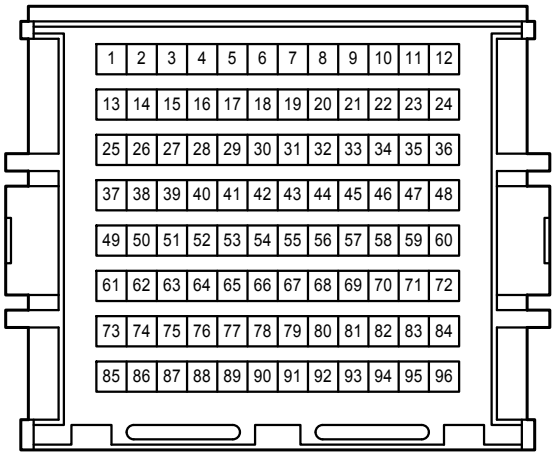


AL3
White

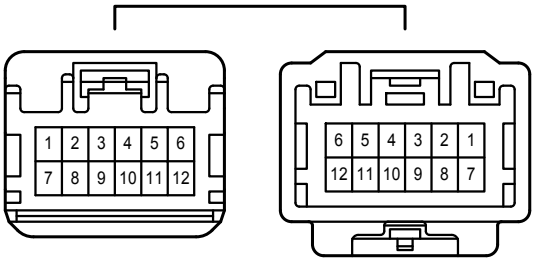


IM1
White

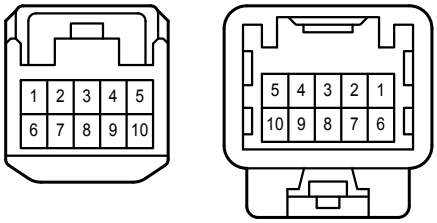

LI2
White

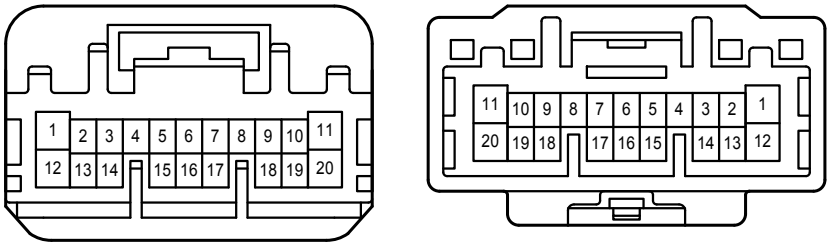

LS1
White

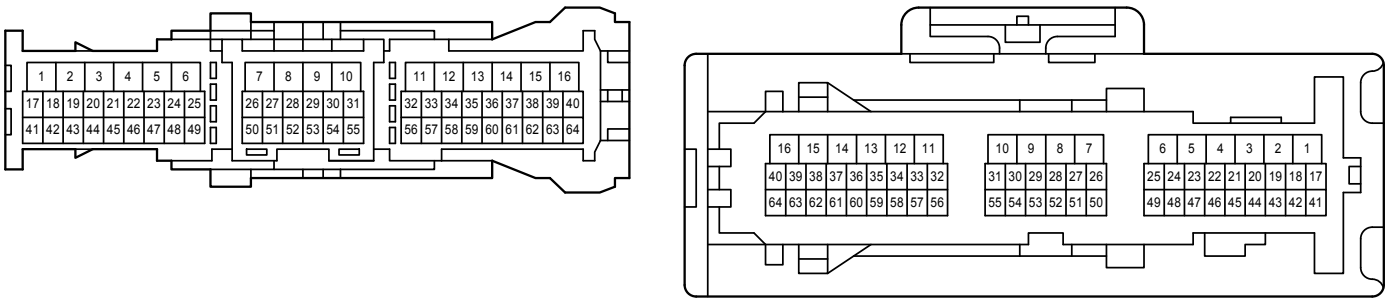

SW1
Gray

