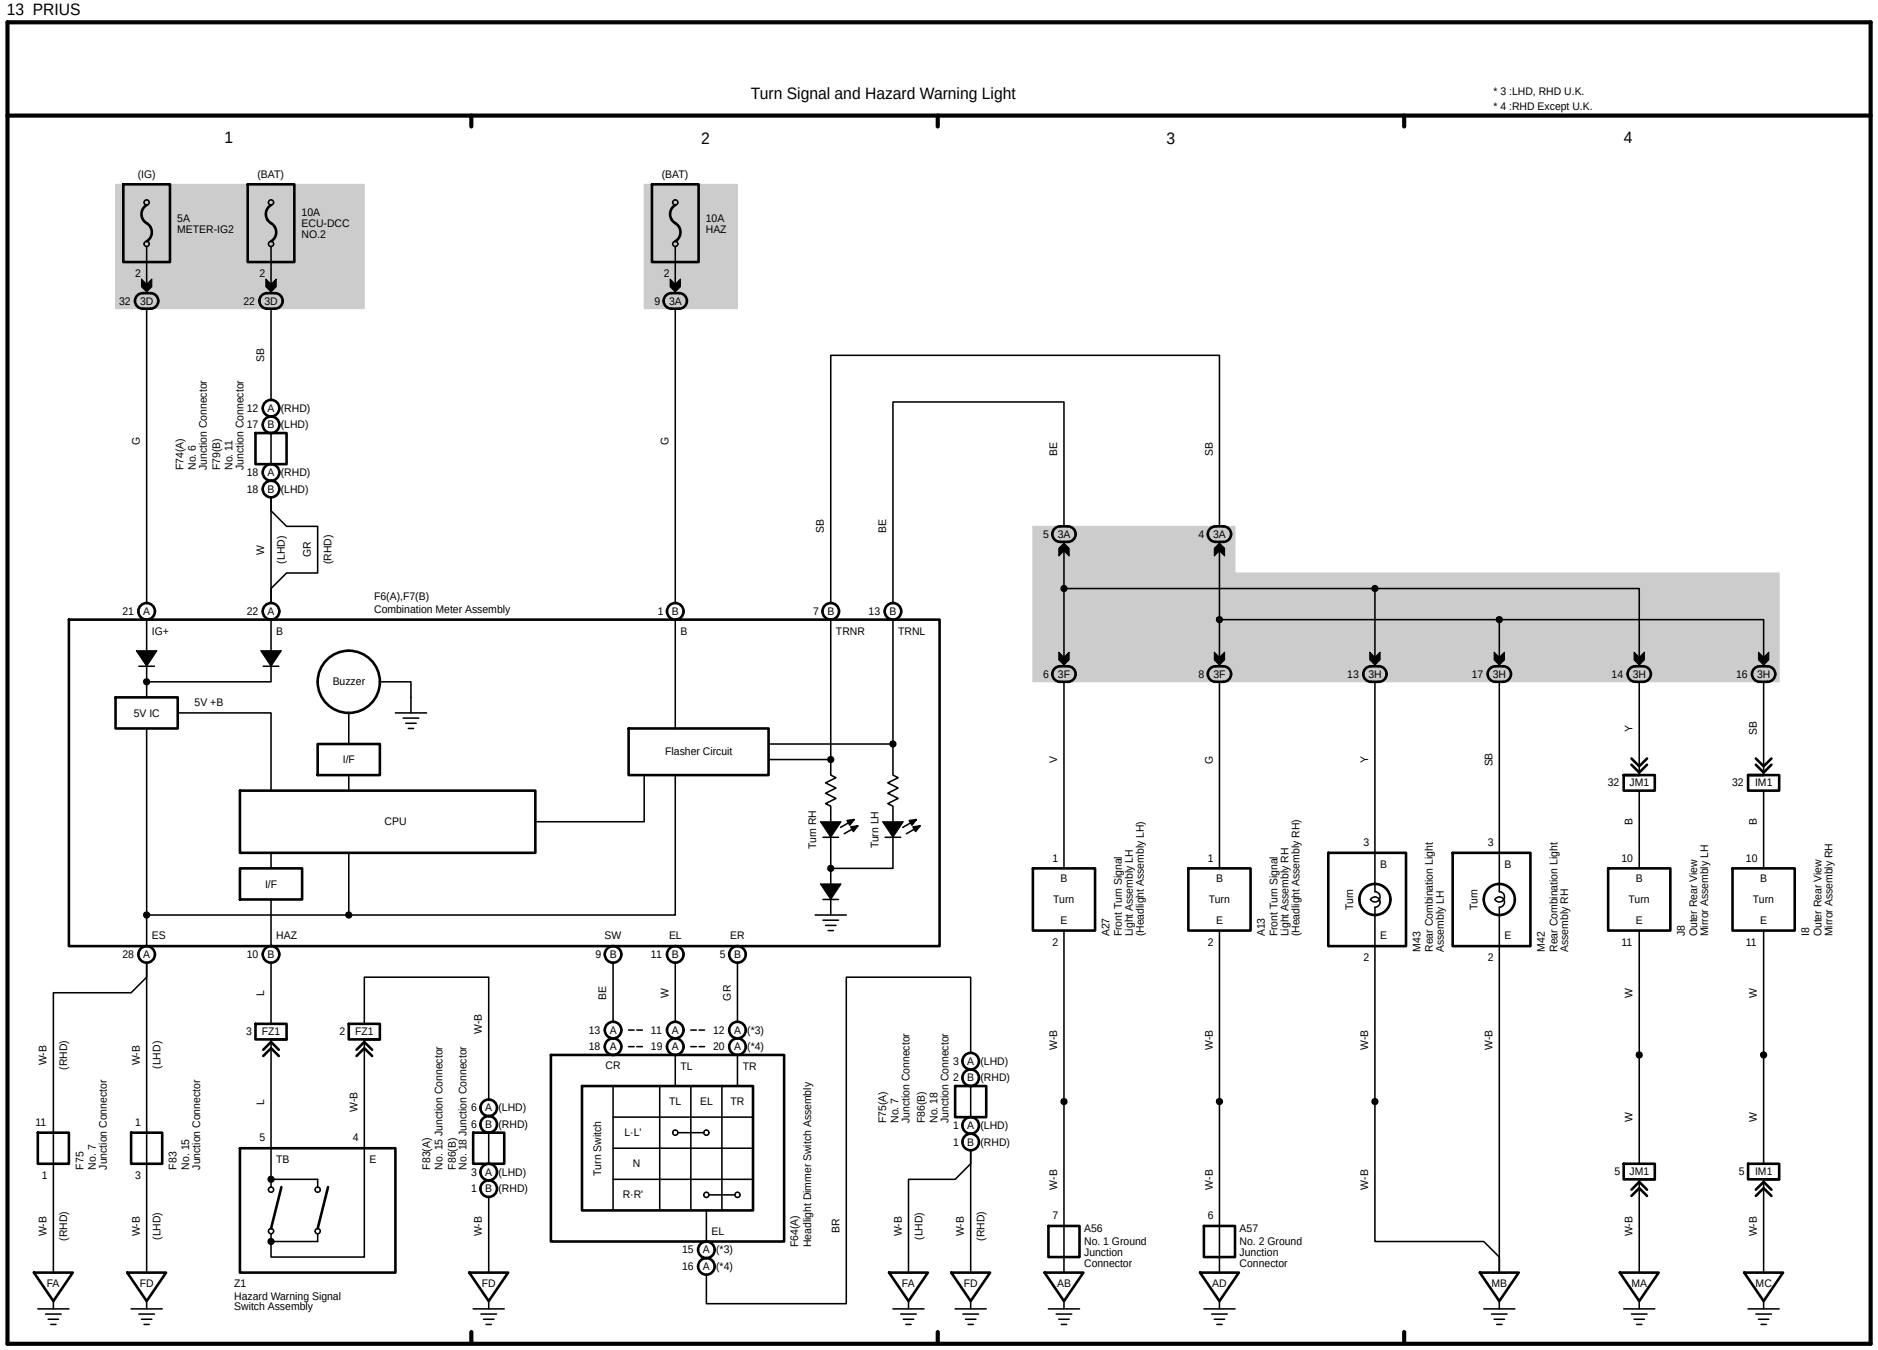

Turn Signal and Hazard Warning Light
* 3 :LHD, RHD U.K.
* 4 :RHD Except U.K.
1
2
3
4
(IG)
(BAT)
5A METER-IG2
10A ECU-DCC NO.2
10A HAZ
F74(A) No. 6 Junction Connector
F79(B) No. 11 Junction Connector
F6(A),F7(B) Combination Meter Assembly
IG+
B
TRNR
TRNL
Buzzer
5V IC
5V +B
I/F
Flasher Circuit
CPU
Turn RH
Turn LH
ES
HAZ
SW
EL
ER
Turn Switch
L·L'
N
R·R'
TL
TR
CR
TB
E
Z1
Hazard Warning Signal Switch Assembly
F75 No. 7 Junction Connector
F83 No. 15 Junction Connector
F83(A) No. 15 Junction Connector
F88(B) No. 18 Junction Connector
F75(A) No. 7 Junction Connector
F86(B) No. 13 Junction Connector
F64(A) Headlight Dimmer Switch Assembly
A27 Front Turn Signal Light Assembly LH (Headlight Assembly LH)
A13 Front Turn Signal Light Assembly RH (Headlight Assembly RH)
M43 Rear Combination Light Assembly LH
M42 Rear Combination Light Assembly RH
J8 Outer Rear View Mirror Assembly LH
I8 Outer Rear View Mirror Assembly RH
A56 No. 1 Ground Junction Connector
A57 No. 2 Ground Junction Connector
FA
FD
AB
AD
MB
MA
MC