

(Cont. next page)

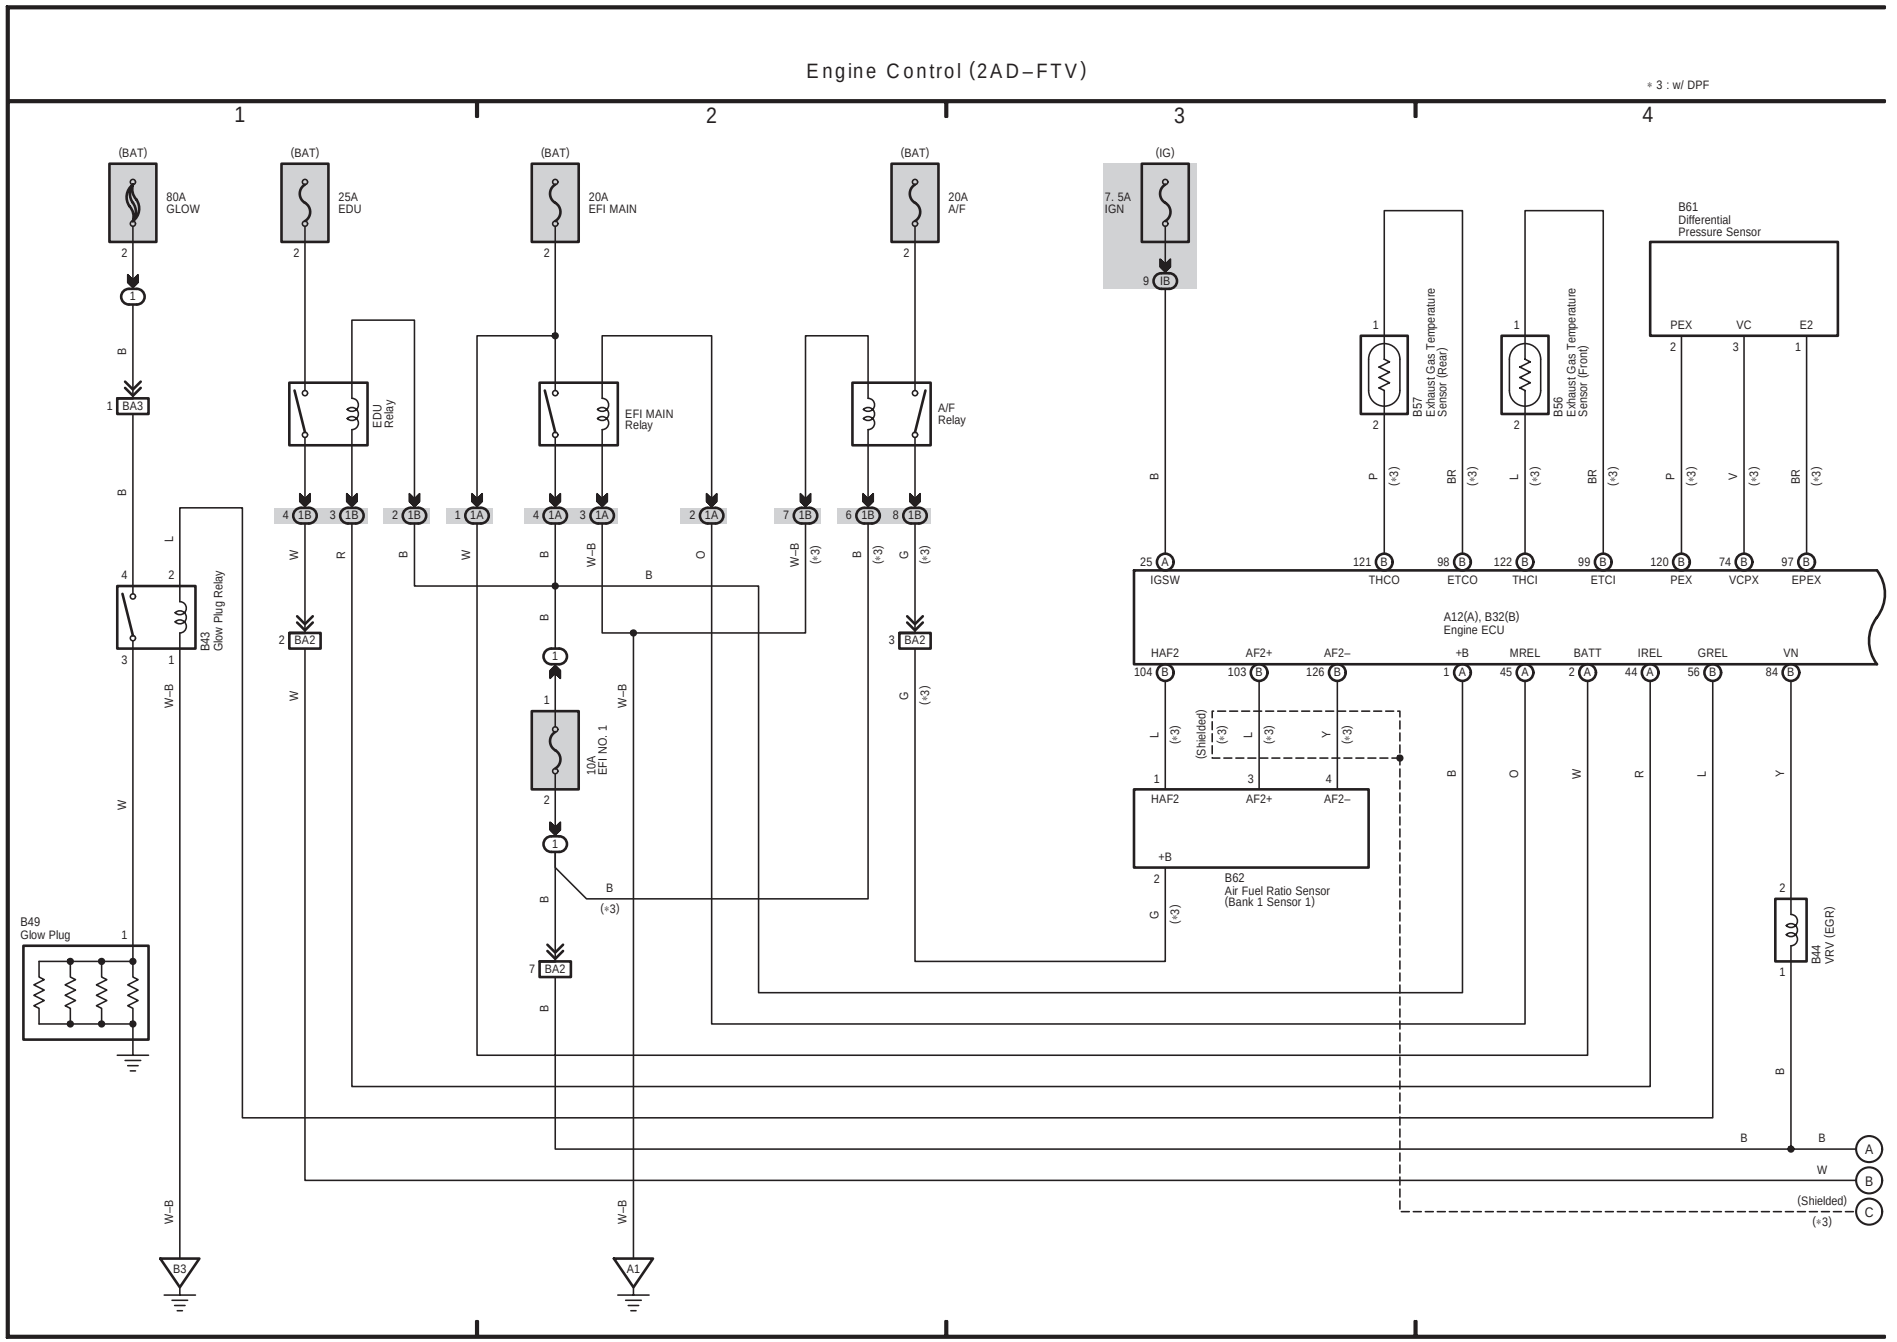


(Cont. next page)


Engine Control (2AD–FTV)

* 1 : w/ Entry & Start System
* 3 : w/ DPF

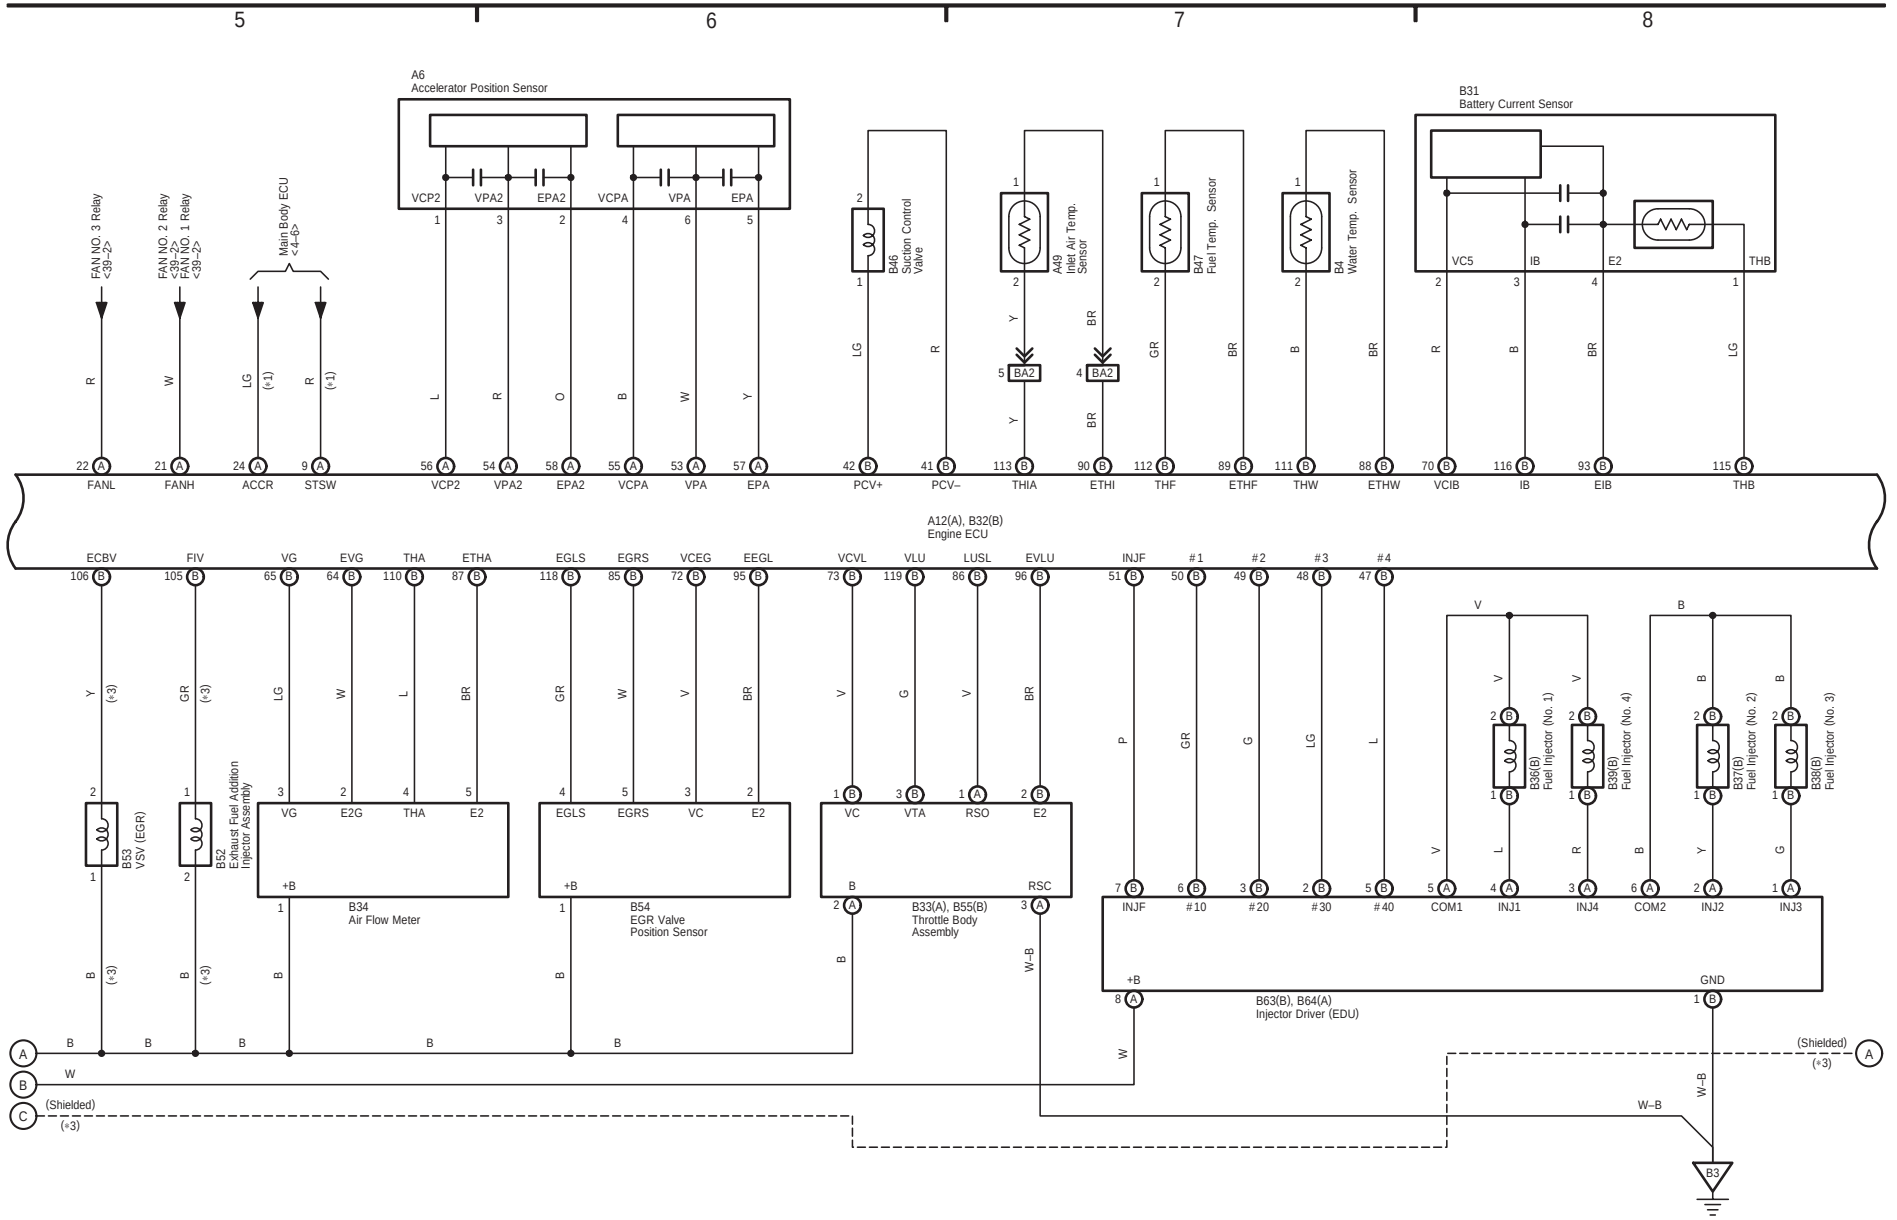

(Cont. next page)

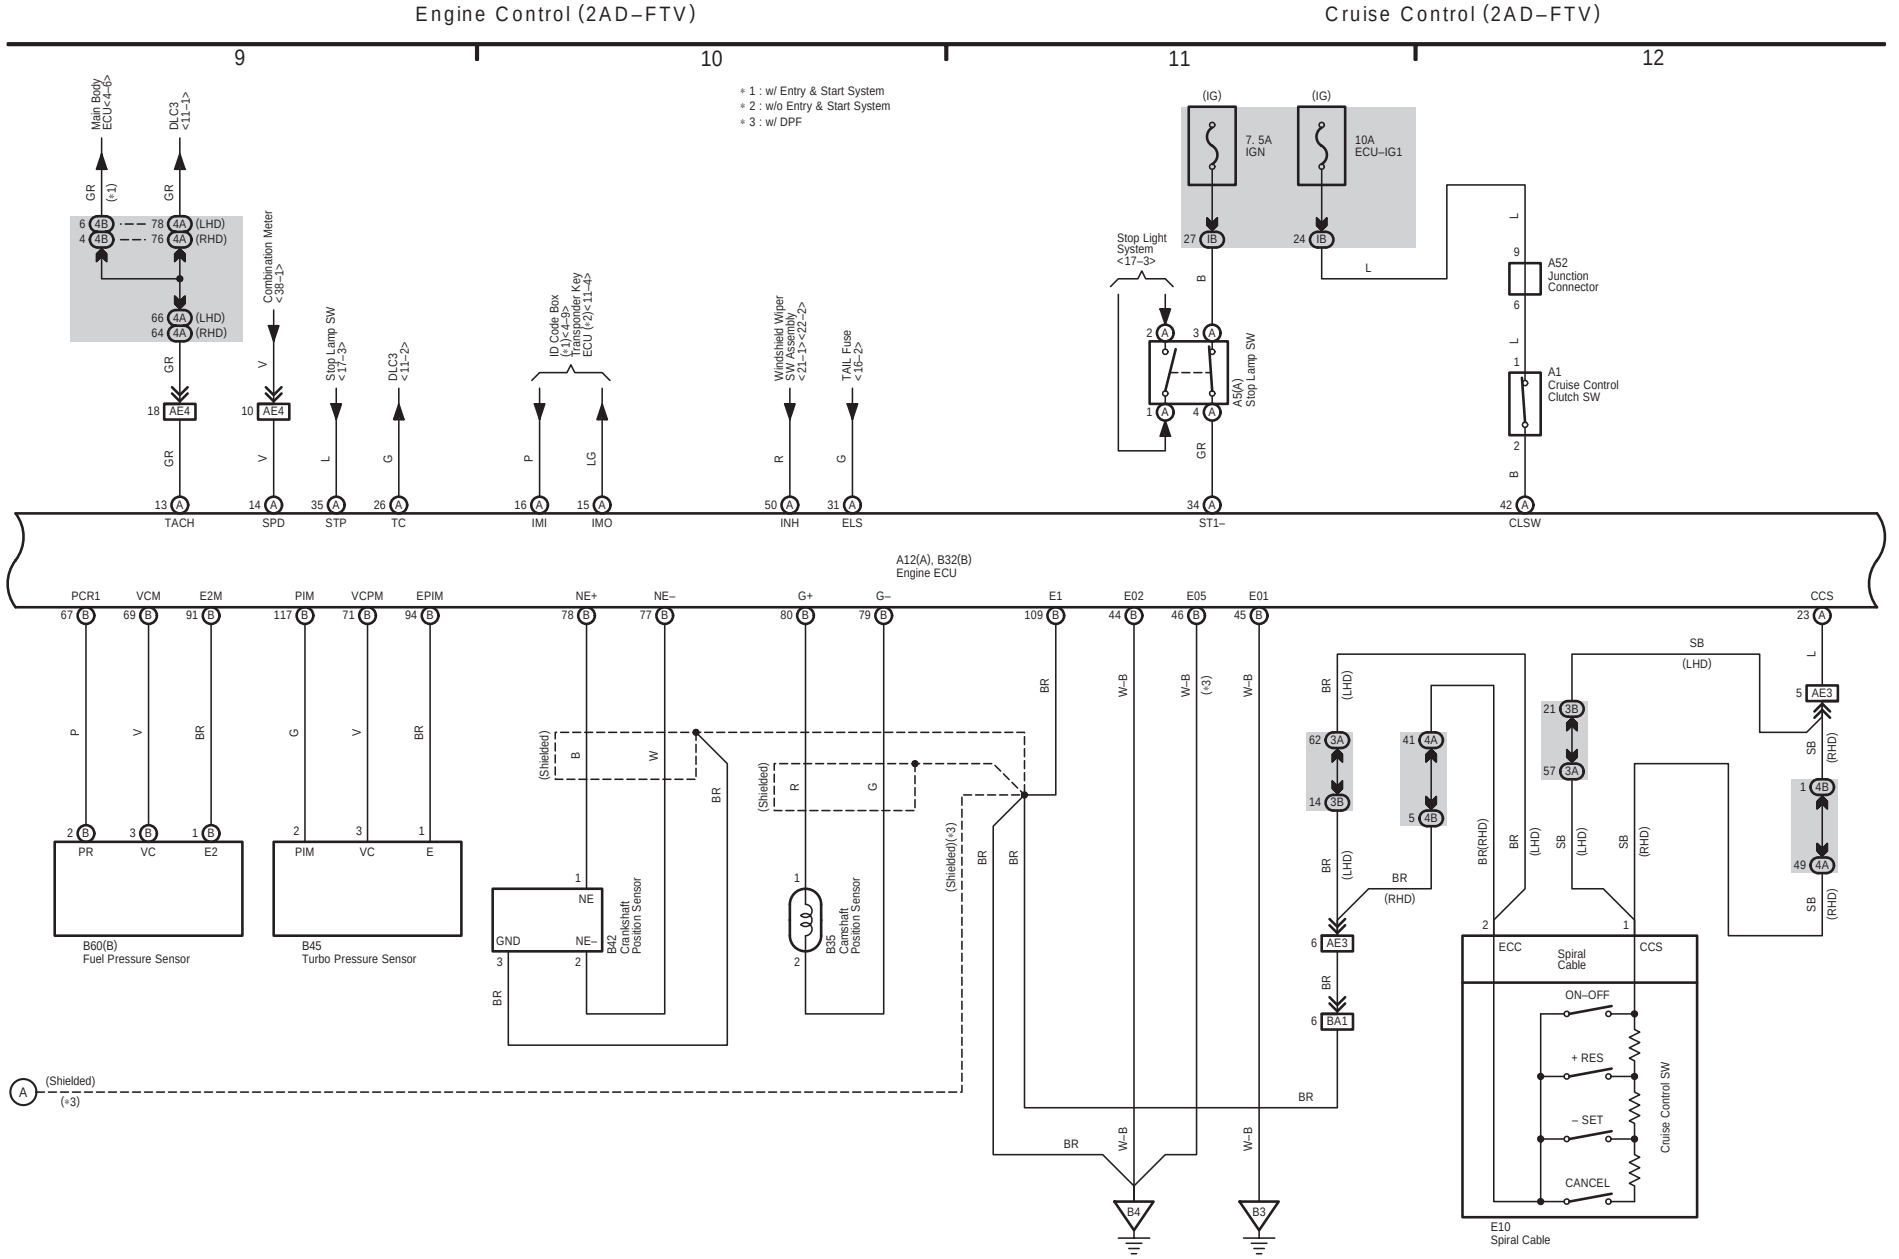

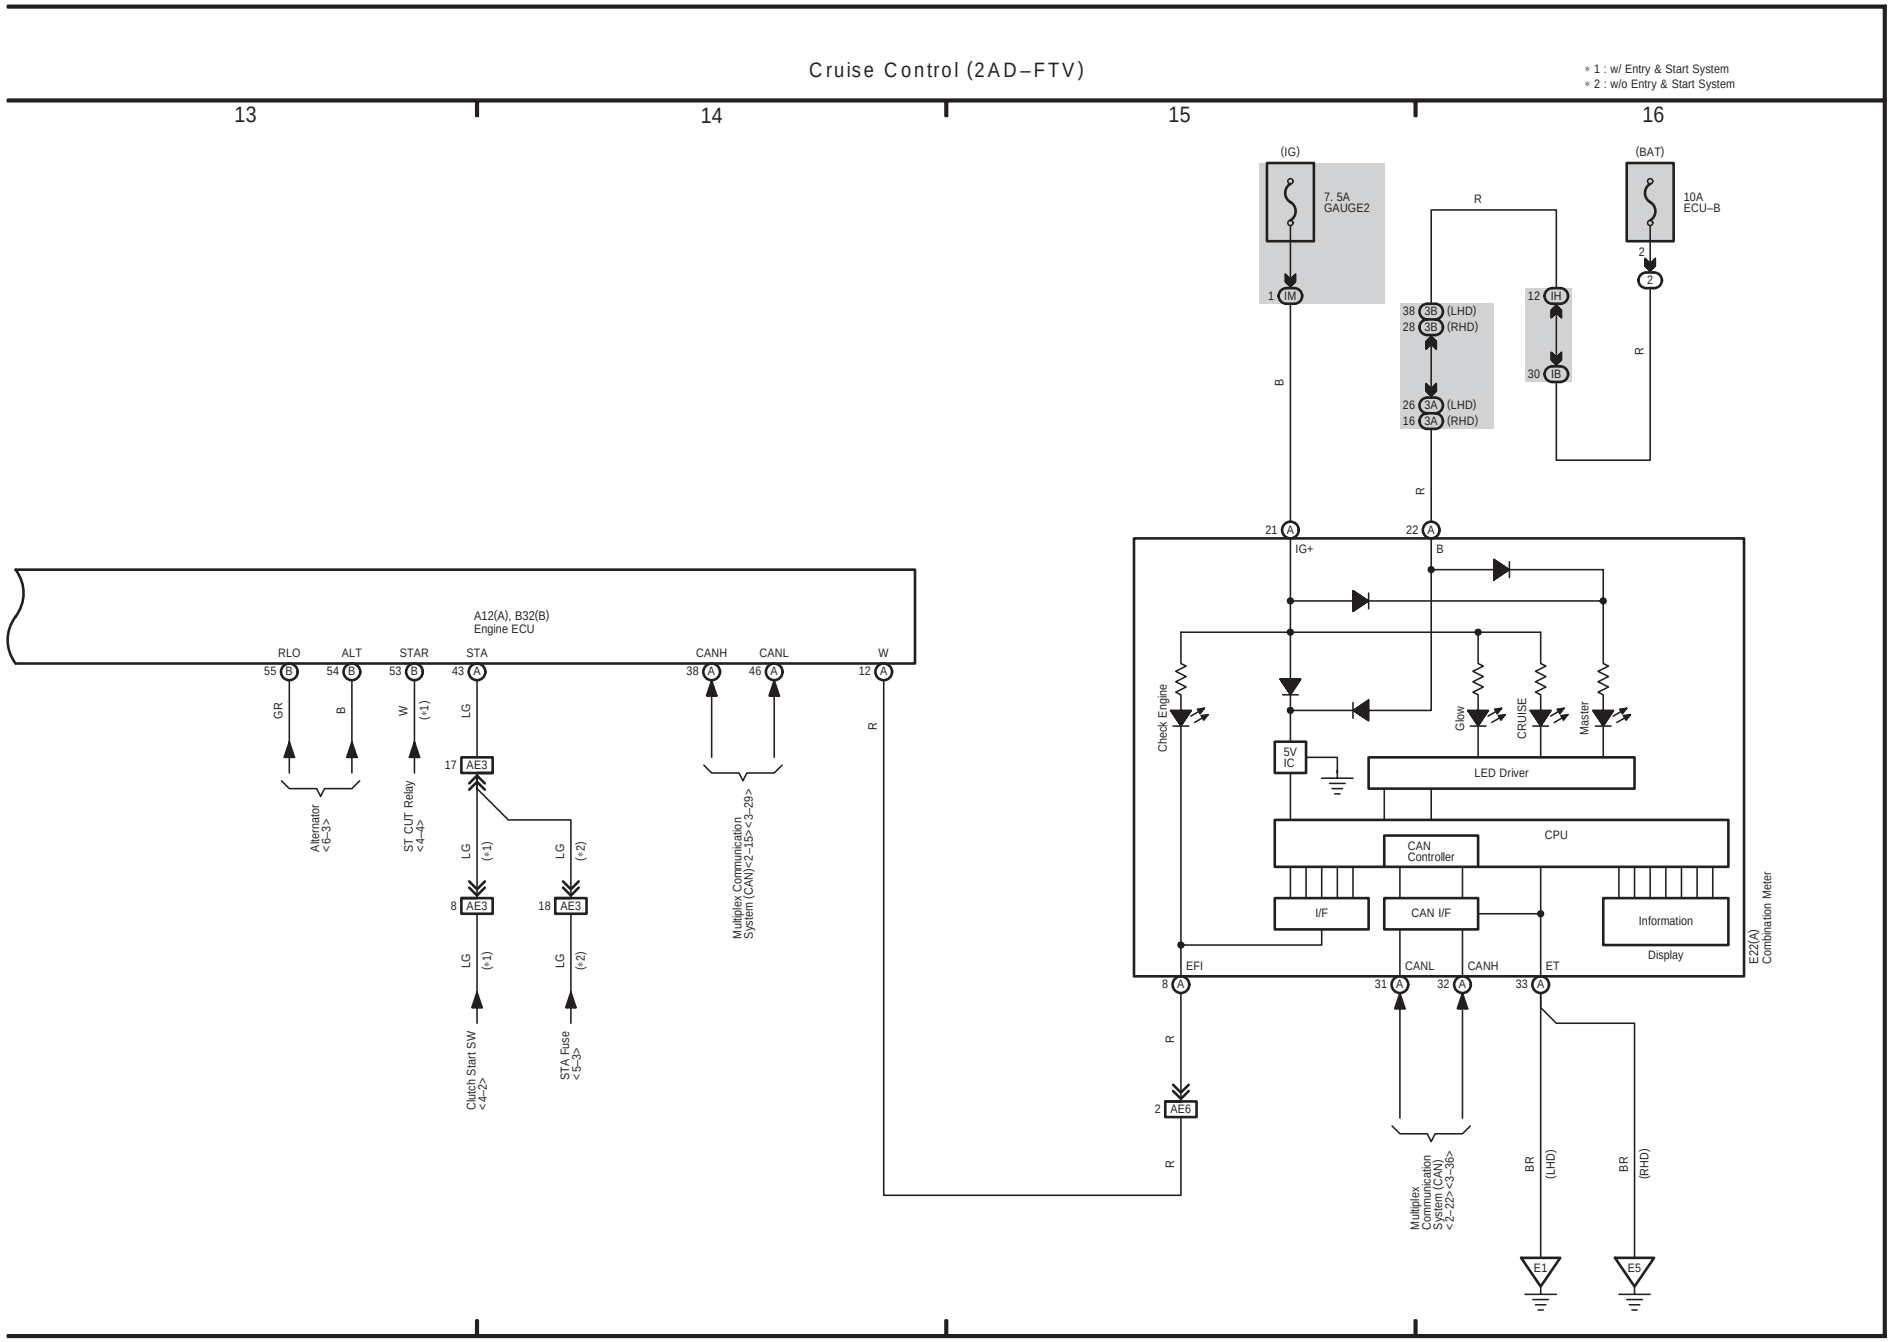
Cruise Control (2AD–FTV)
* 1 : w/ Entry & Start System
* 2 : w/o Entry & Start System
13
14
15
16
(IG)
7. 5A
GAUGE2
(BAT)
10A
ECU–B
A12(A), B32(B)
Engine ECU
RLO
ALT
STAR
STA
CANH
CANL
W
Alternator
<6–3>
ST CUT Relay
<4–4>
Clutch Start SW
<4–2>
STA Fuse
<5–3>
Multiplex Communication System (CAN)
<2–15><3–29>
IG+
B
Check Engine
Glow
CRUISE
Master
5V
IC
LED Driver
CPU
CAN
Controller
I/F
CAN I/F
Information
Display
EFI
CANL
CANH
ET
E22(A)
Combination Meter
Multiplex Communication System (CAN)
<2–22><3–36>
BR
(LHD)
BR
(RHD)
E1
E5