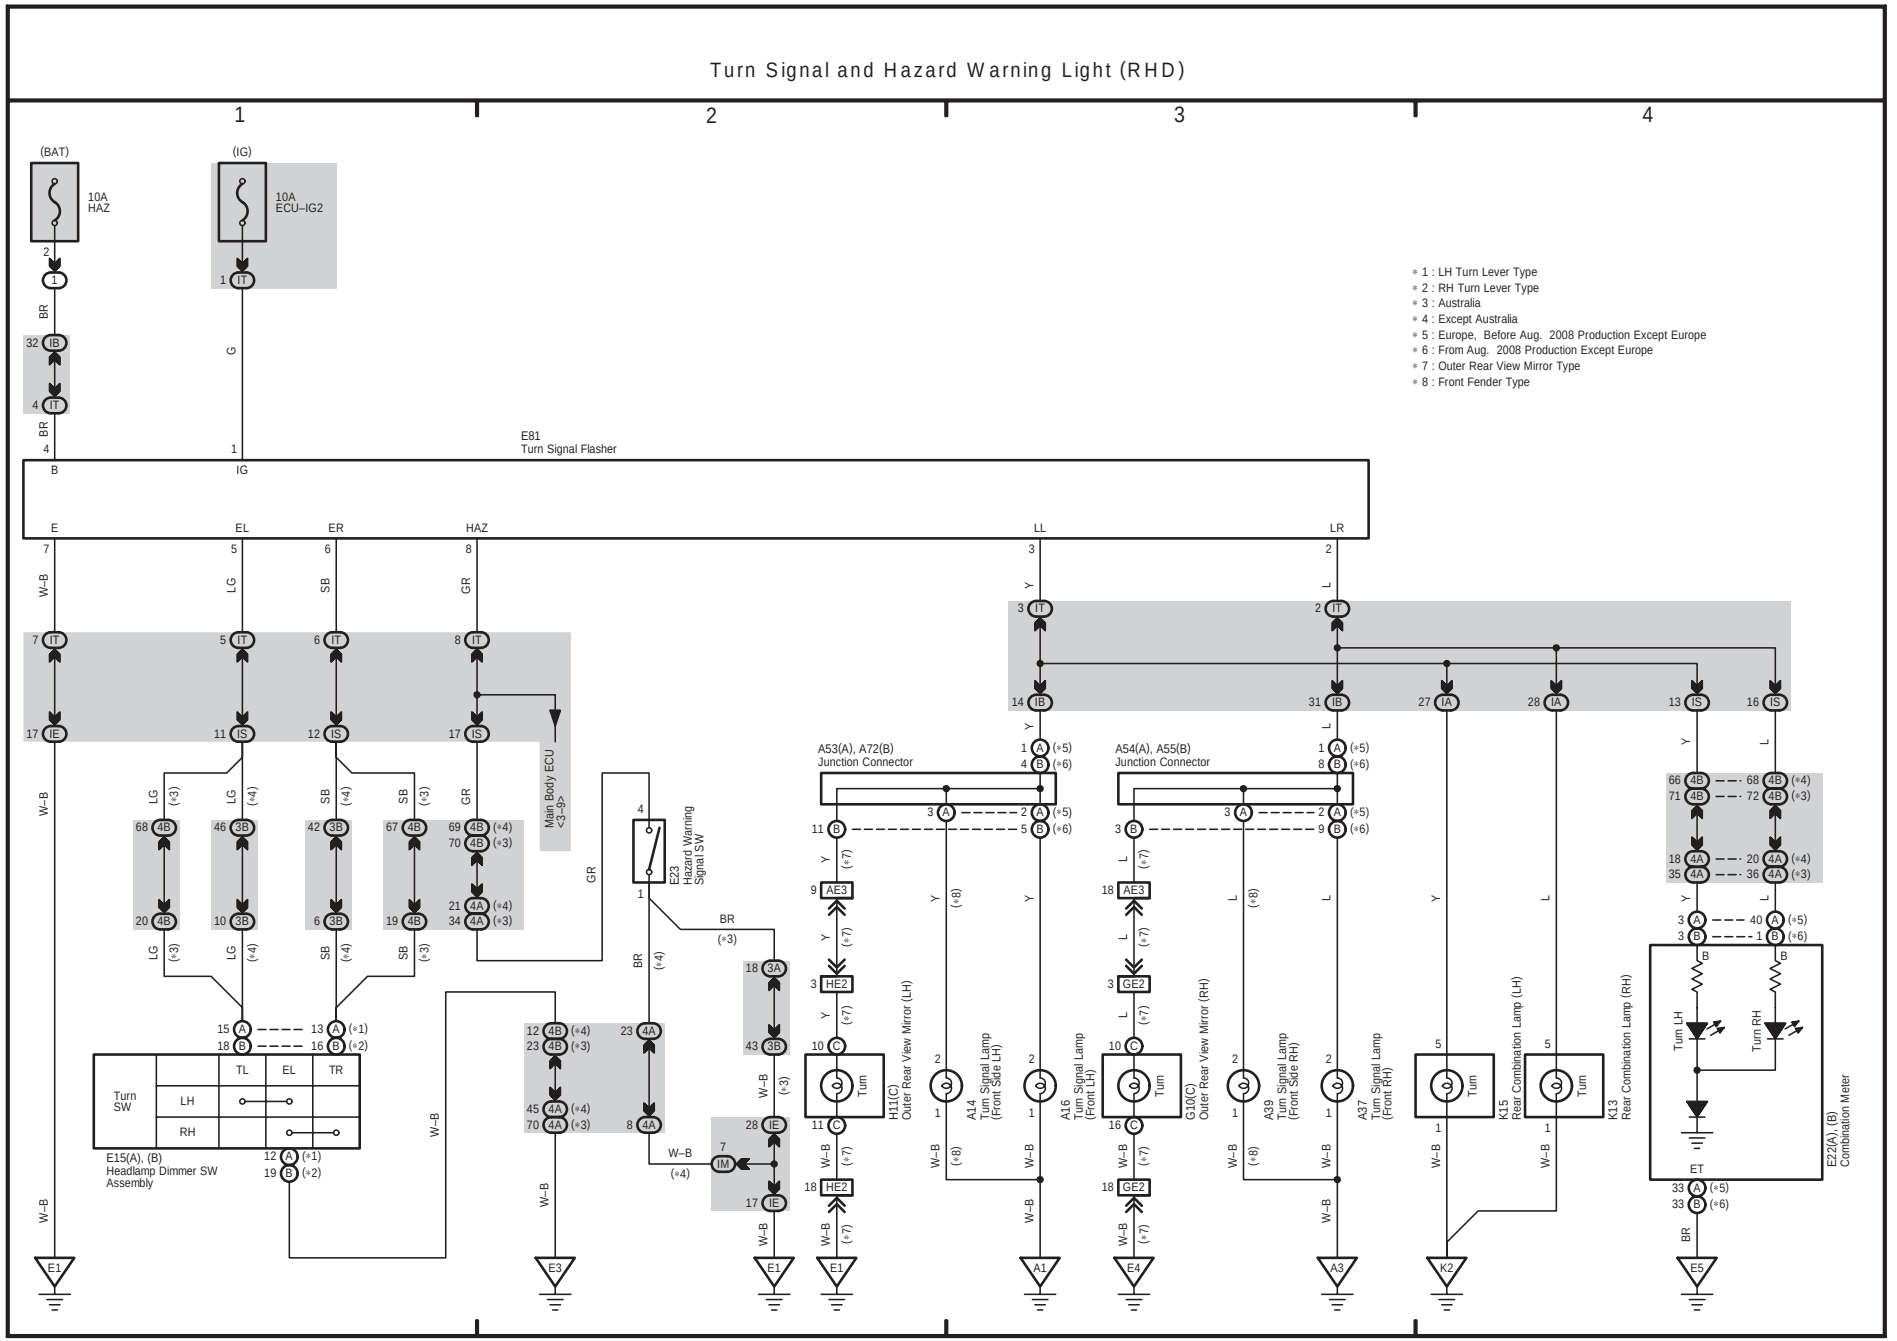

Turn Signal and Hazard Warning Light (RHD)
1
2
3
4
(BAT)
(IG)
10A
HAZ
10A
ECU–IG2
E81
Turn Signal Flasher
B
IG
E
EL
ER
HAZ
LL
LR
W–B
LG
SB
GR
BR
G
Y
L
Main Body ECU
<3–9>
E23
Hazard Warning
Signal SW
A53(A), A72(B)
Junction Connector
A54(A), A55(B)
Junction Connector
H11(C)
Outer Rear View Mirror (LH)
G10(C)
Outer Rear View Mirror (RH)
A14
Turn Signal Lamp
(Front Side LH)
A16
Turn Signal Lamp
(Front LH)
A39
Turn Signal Lamp
(Front Side RH)
A37
Turn Signal Lamp
(Front RH)
K15
Rear Combination Lamp (LH)
K13
Rear Combination Lamp (RH)
E22(A), (B)
Combination Meter
Turn LH
Turn RH
ET
Turn
SW
LH
RH
TL
EL
TR
E15(A), (B)
Headlamp Dimmer SW
Assembly
E1
E3
A1
E4
A3
K2
E5
∗ 1 : LH Turn Lever Type
∗ 2 : RH Turn Lever Type
∗ 3 : Australia
∗ 4 : Except Australia
∗ 5 : Europe, Before Aug. 2008 Production Except Europe
∗ 6 : From Aug. 2008 Production Except Europe
∗ 7 : Outer Rear View Mirror Type
∗ 8 : Front Fender Type