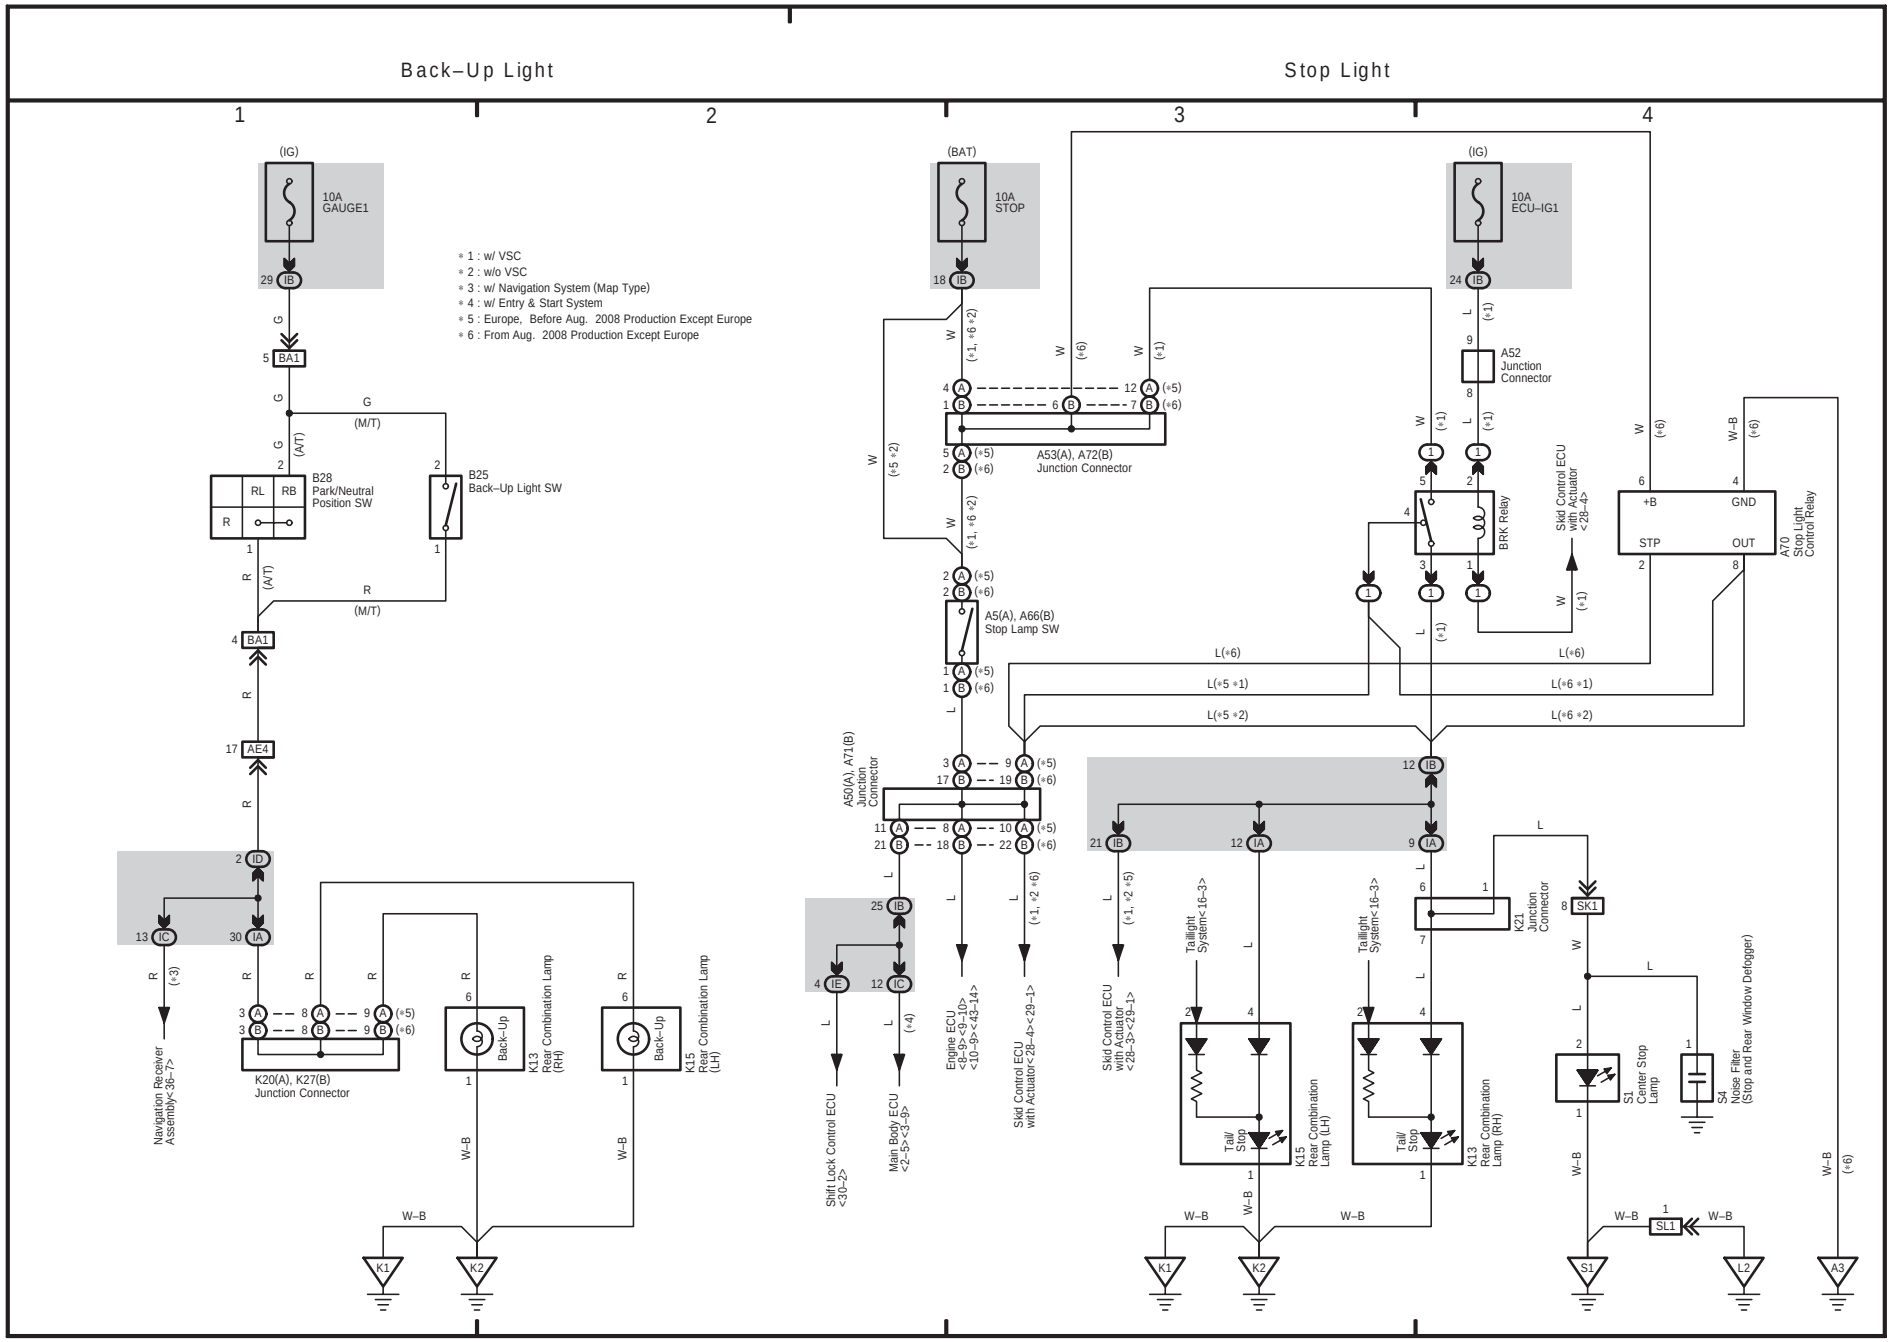

Back–Up Light
Stop Light
1
2
3
4
(IG)
10A GAUGE1
29 IB
5 BA1
B28 Park/Neutral Position SW
RL RB R
B25 Back–Up Light SW
4 BA1
17 AE4
2 ID
13 IC
30 IA
Navigation Receiver Assembly<36–7>
K20(A), K27(B) Junction Connector
K13 Rear Combination Lamp (RH)
K15 Rear Combination Lamp (LH)
Back–Up
W–B
K1
K2
(BAT)
10A STOP
18 IB
(IG)
10A ECU–IG1
24 IB
A52 Junction Connector
A53(A), A72(B) Junction Connector
A5(A), A66(B) Stop Lamp SW
BRK Relay
Skid Control ECU with Actuator <28–4>
A70 Stop Light Control Relay
+B GND STP OUT
A50(A), A71(B) Junction Connector
25 IB
4 IE
12 IC
Shift Lock Control ECU <30–2>
Main Body ECU <2–5><3–5>
Engine ECU <10–1><10–9><43–14>
Skid Control ECU with Actuator<28–4><29–1>
12 IB
21 IB
12 IA
9 IA
Skid Control ECU with Actuator <28–3><29–1>
Taillight System<16–3>
Tail/ Stop
K21 Junction Connector
8 SK1
S1 Center Stop Lamp
S4 Noise Filter (Stop and Rear Window Defogger)
SL1
S1
L2
A3
∗1 : w/ VSC
∗2 : w/o VSC
∗3 : w/ Navigation System (Map Type)
∗4 : w/ Entry & Start System
∗5 : Europe, Before Aug. 2008 Production Except Europe
∗6 : From Aug. 2008 Production Except Europe