

(Cont. next page)

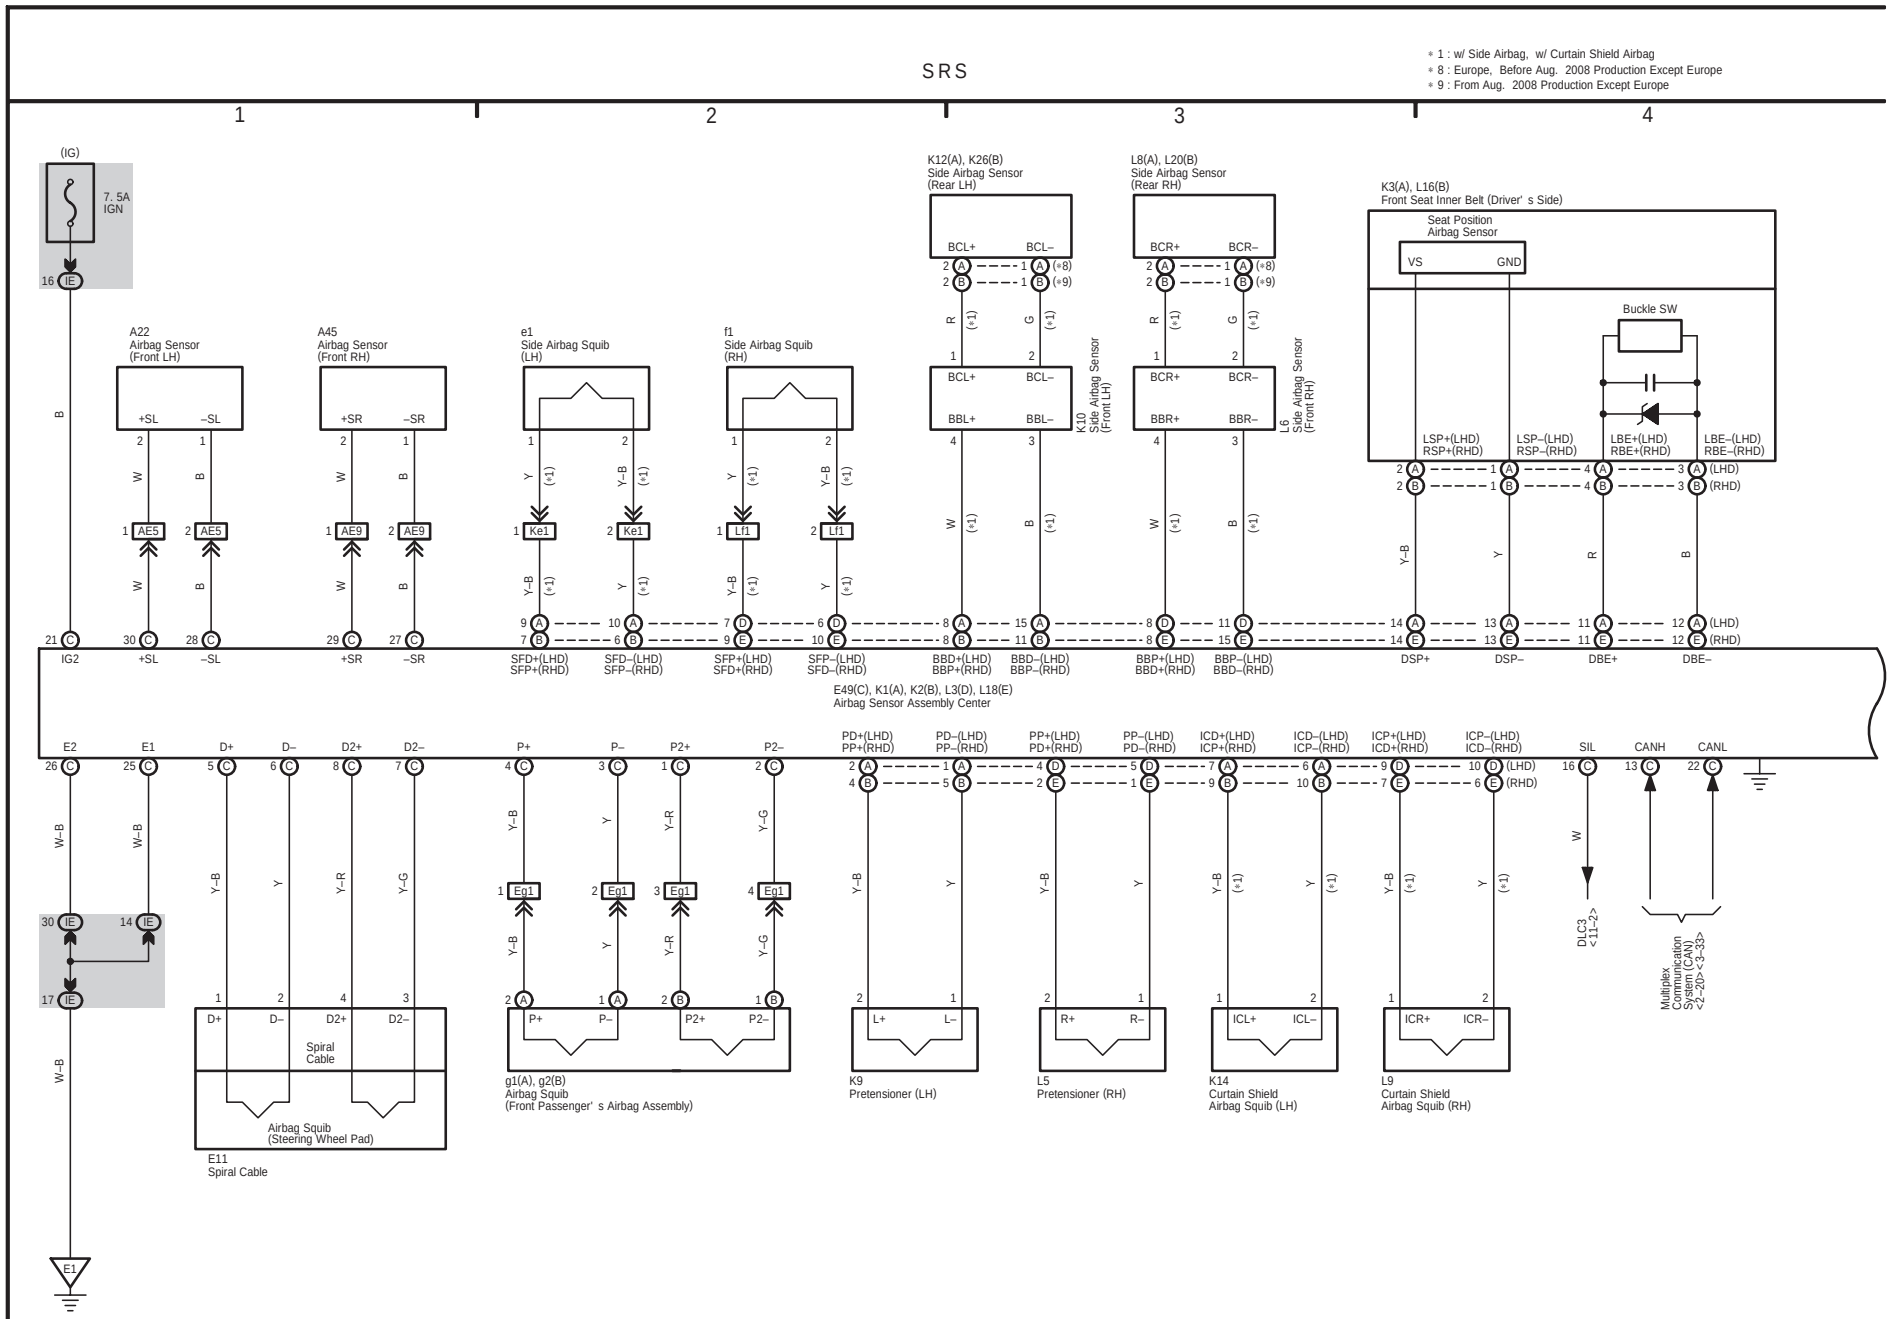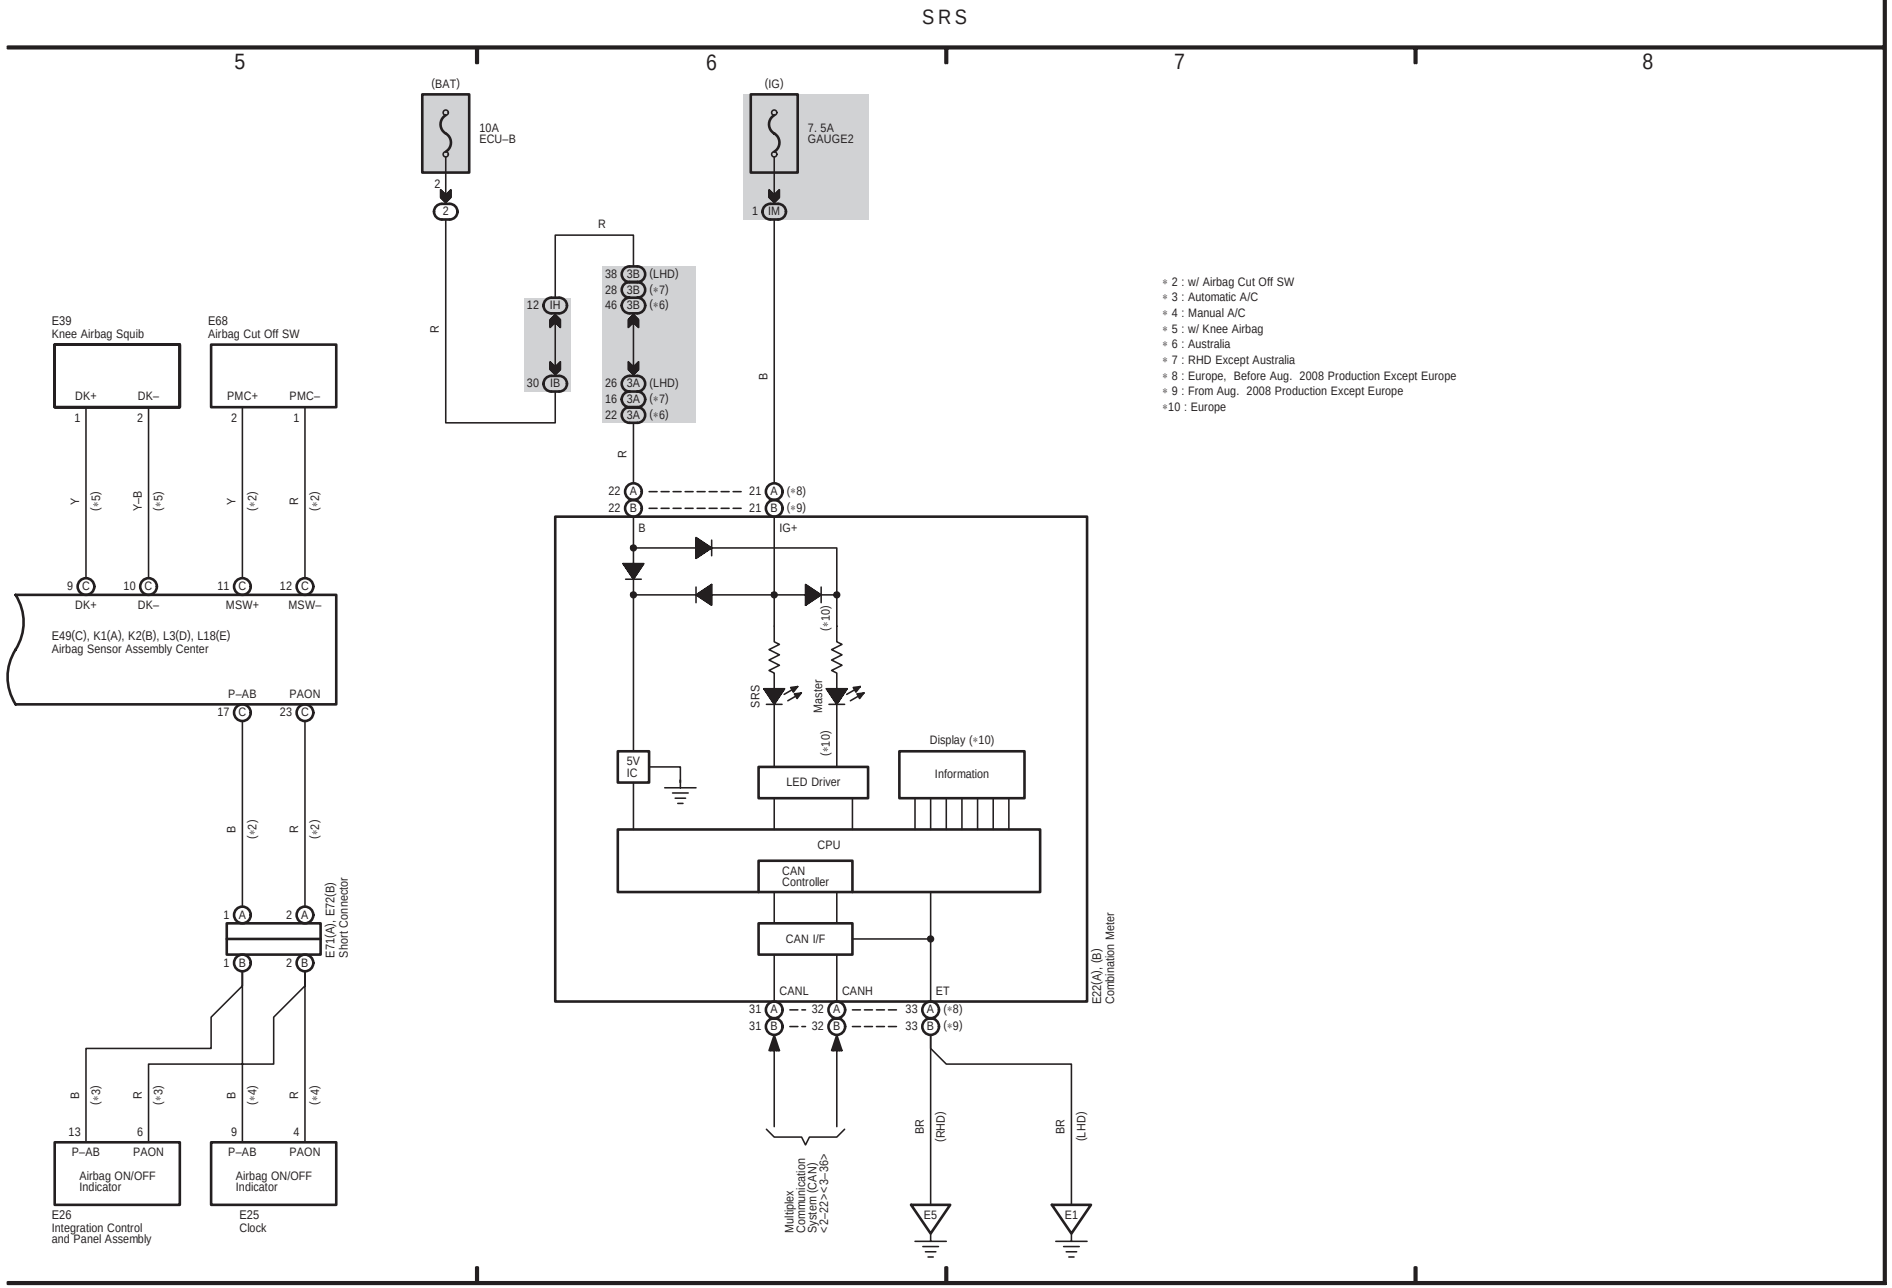


SRS
5
6
7
8
(BAT)
10A
ECU–B
2
2
(IG)
7. 5A
GAUGE2
1
IM
R
R
12
IH
30
IB
38
3B
(LHD)
28
3B
(*7)
46
3B
(*6)
26
3A
(LHD)
16
3A
(*7)
22
3A
(*6)
B
R
22
A
21
A
(*8)
22
B
21
B
(*9)
B
IG+
E39
Knee Airbag Squib
DK+
DK–
1
2
Y
(*5)
Y–B
(*5)
9
C
10
C
DK+
DK–
E68
Airbag Cut Off SW
PMC+
PMC–
2
1
Y
(*2)
R
(*2)
11
C
12
C
MSW+
MSW–
E49(C), K1(A), K2(B), L3(D), L18(E)
Airbag Sensor Assembly Center
P–AB
PAON
17
C
23
C
B
(*2)
R
(*2)
1
A
2
A
E71(A), E72(B)
Short Connector
1
B
2
B
B
(*3)
R
(*3)
B
(*4)
R
(*4)
13
6
9
4
P–AB
PAON
Airbag ON/OFF
Indicator
P–AB
PAON
Airbag ON/OFF
Indicator
E26
Integration Control
and Panel Assembly
E25
Clock
(*10)
SRS
Master
(*10)
Display (*10)
5V
IC
LED Driver
Information
CPU
CAN
Controller
CAN I/F
CANL
CANH
ET
31
A
32
A
33
A
(*8)
31
B
32
B
33
B
(*9)
E22(A), (B)
Combination Meter
Multiplex
Communication
System (CAN)
<2–22><3–36>
BR
(RHD)
BR
(LHD)
E5
E1
* 2 : w/ Airbag Cut Off SW
* 3 : Automatic A/C
* 4 : Manual A/C
* 5 : w/ Knee Airbag
* 6 : Australia
* 7 : RHD Except Australia
* 8 : Europe, Before Aug. 2008 Production Except Europe
* 9 : From Aug. 2008 Production Except Europe
*10 : Europe