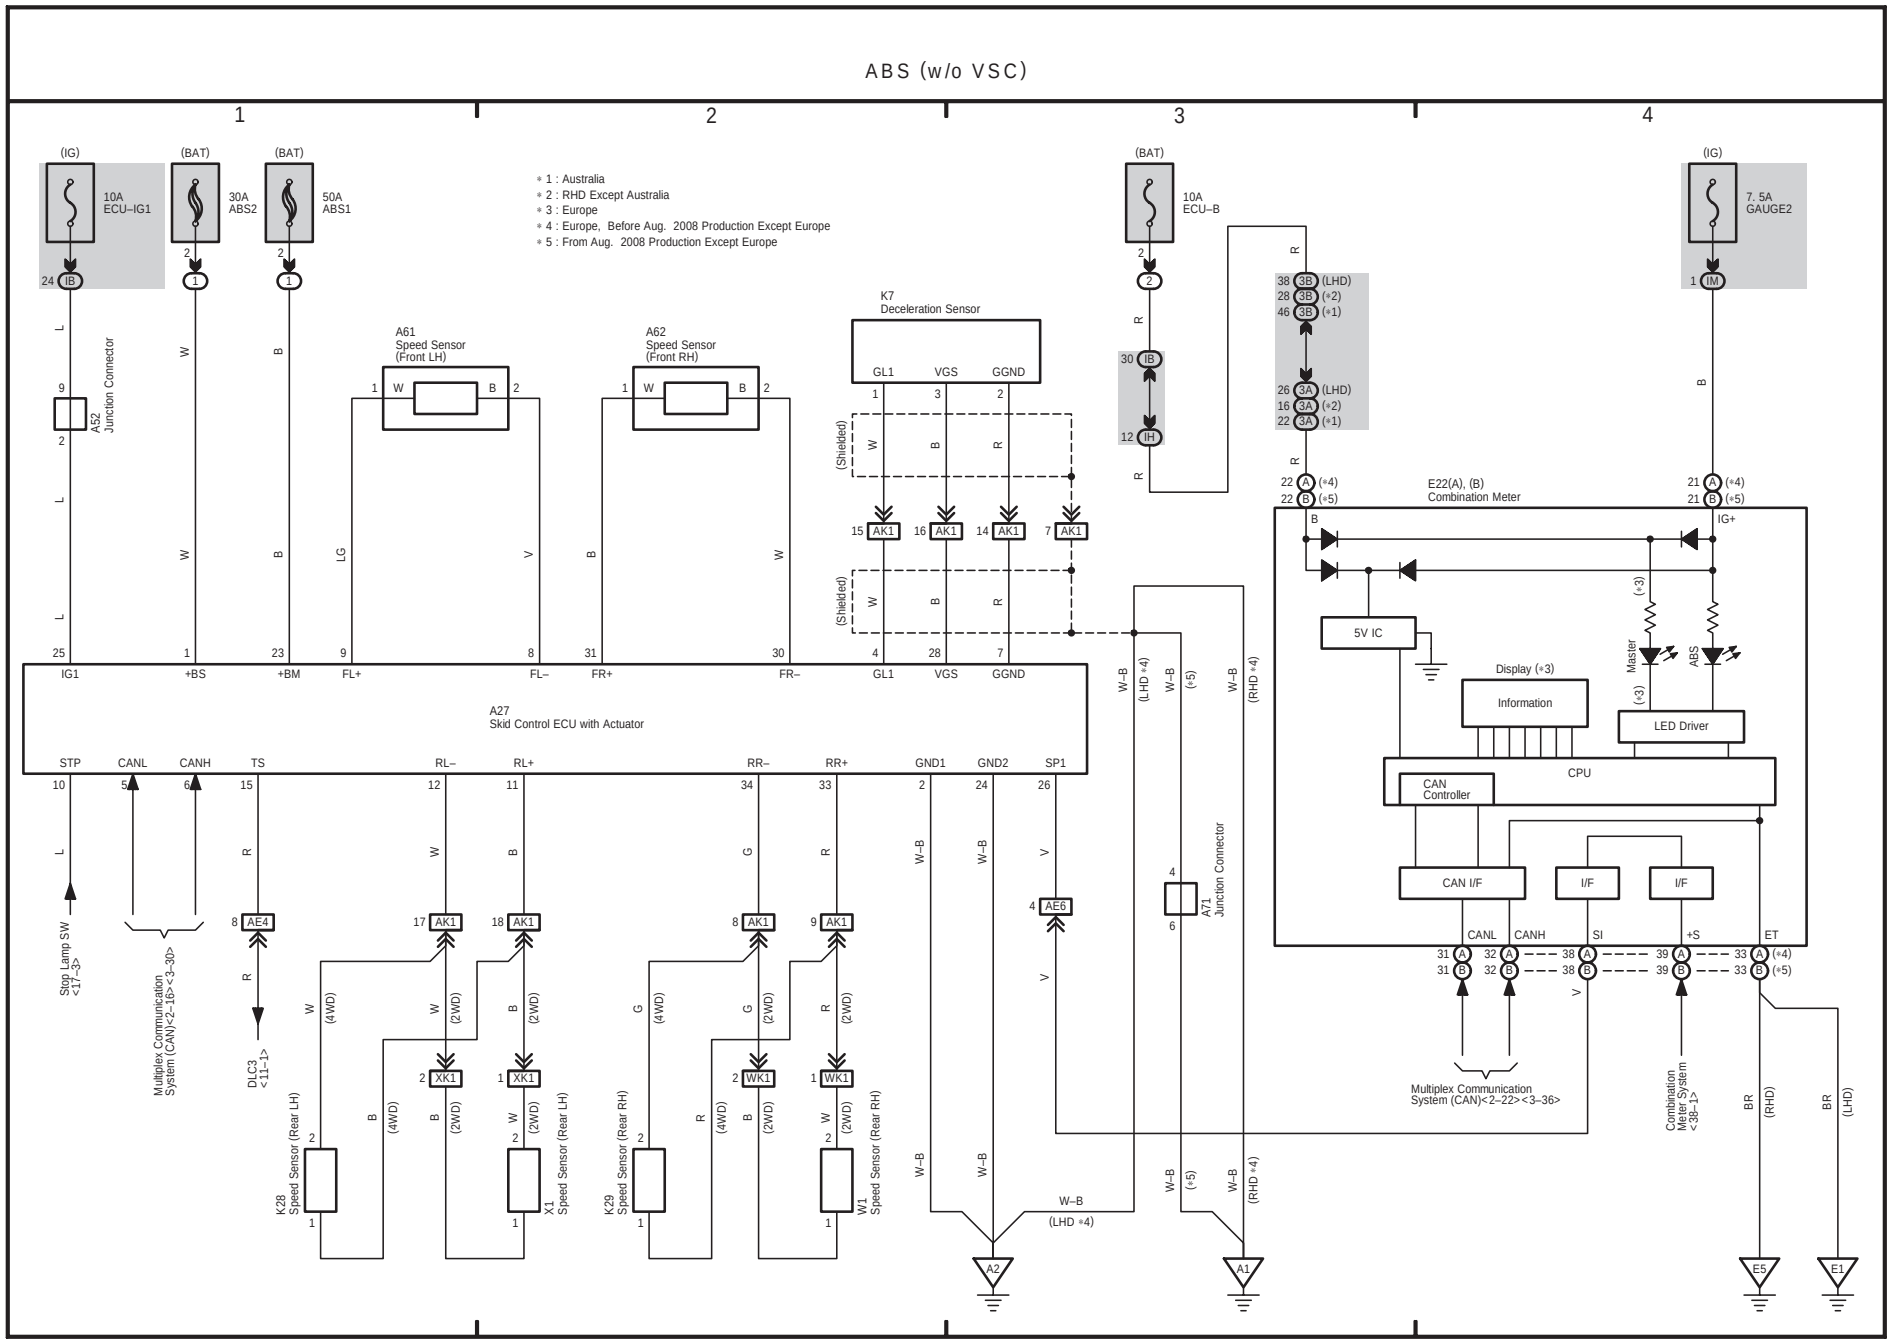

ABS (w/o VSC)
1
2
3
4
* 1 : Australia
* 2 : RHD Except Australia
* 3 : Europe
* 4 : Europe, Before Aug. 2008 Production Except Europe
* 5 : From Aug. 2008 Production Except Europe
(IG)
10A ECU–IG1
(BAT)
30A ABS2
(BAT)
50A ABS1
(BAT)
10A ECU–B
(IG)
7. 5A GAUGE2
A52 Junction Connector
A61 Speed Sensor (Front LH)
A62 Speed Sensor (Front RH)
K7 Deceleration Sensor
GL1
VGS
GGND
(Shielded)
E22(A), (B) Combination Meter
5V IC
Display (*3)
Information
LED Driver
Master
ABS
CPU
CAN Controller
CAN I/F
I/F
I/F
CANL
CANH
SI
+S
ET
IG+
A27 Skid Control ECU with Actuator
IG1
+BS
+BM
FL+
FL–
FR+
FR–
STP
CANL
CANH
TS
RL–
RL+
RR–
RR+
GND1
GND2
SP1
A71 Junction Connector
Stop Lamp SW <17–3>
Multiplex Communication System (CAN)<2–16><3–30>
DLC3 <11–1>
K28 Speed Sensor (Rear LH)
X1 Speed Sensor (Rear LH)
K29 Speed Sensor (Rear RH)
W1 Speed Sensor (Rear RH)
Multiplex Communication System (CAN)<2–22><3–36>
Combination Meter System <38–1>
W–B (LHD *4)
W–B (*5)
W–B (RHD *4)
W–B (LHD *4)
A2
A1
E5
E1