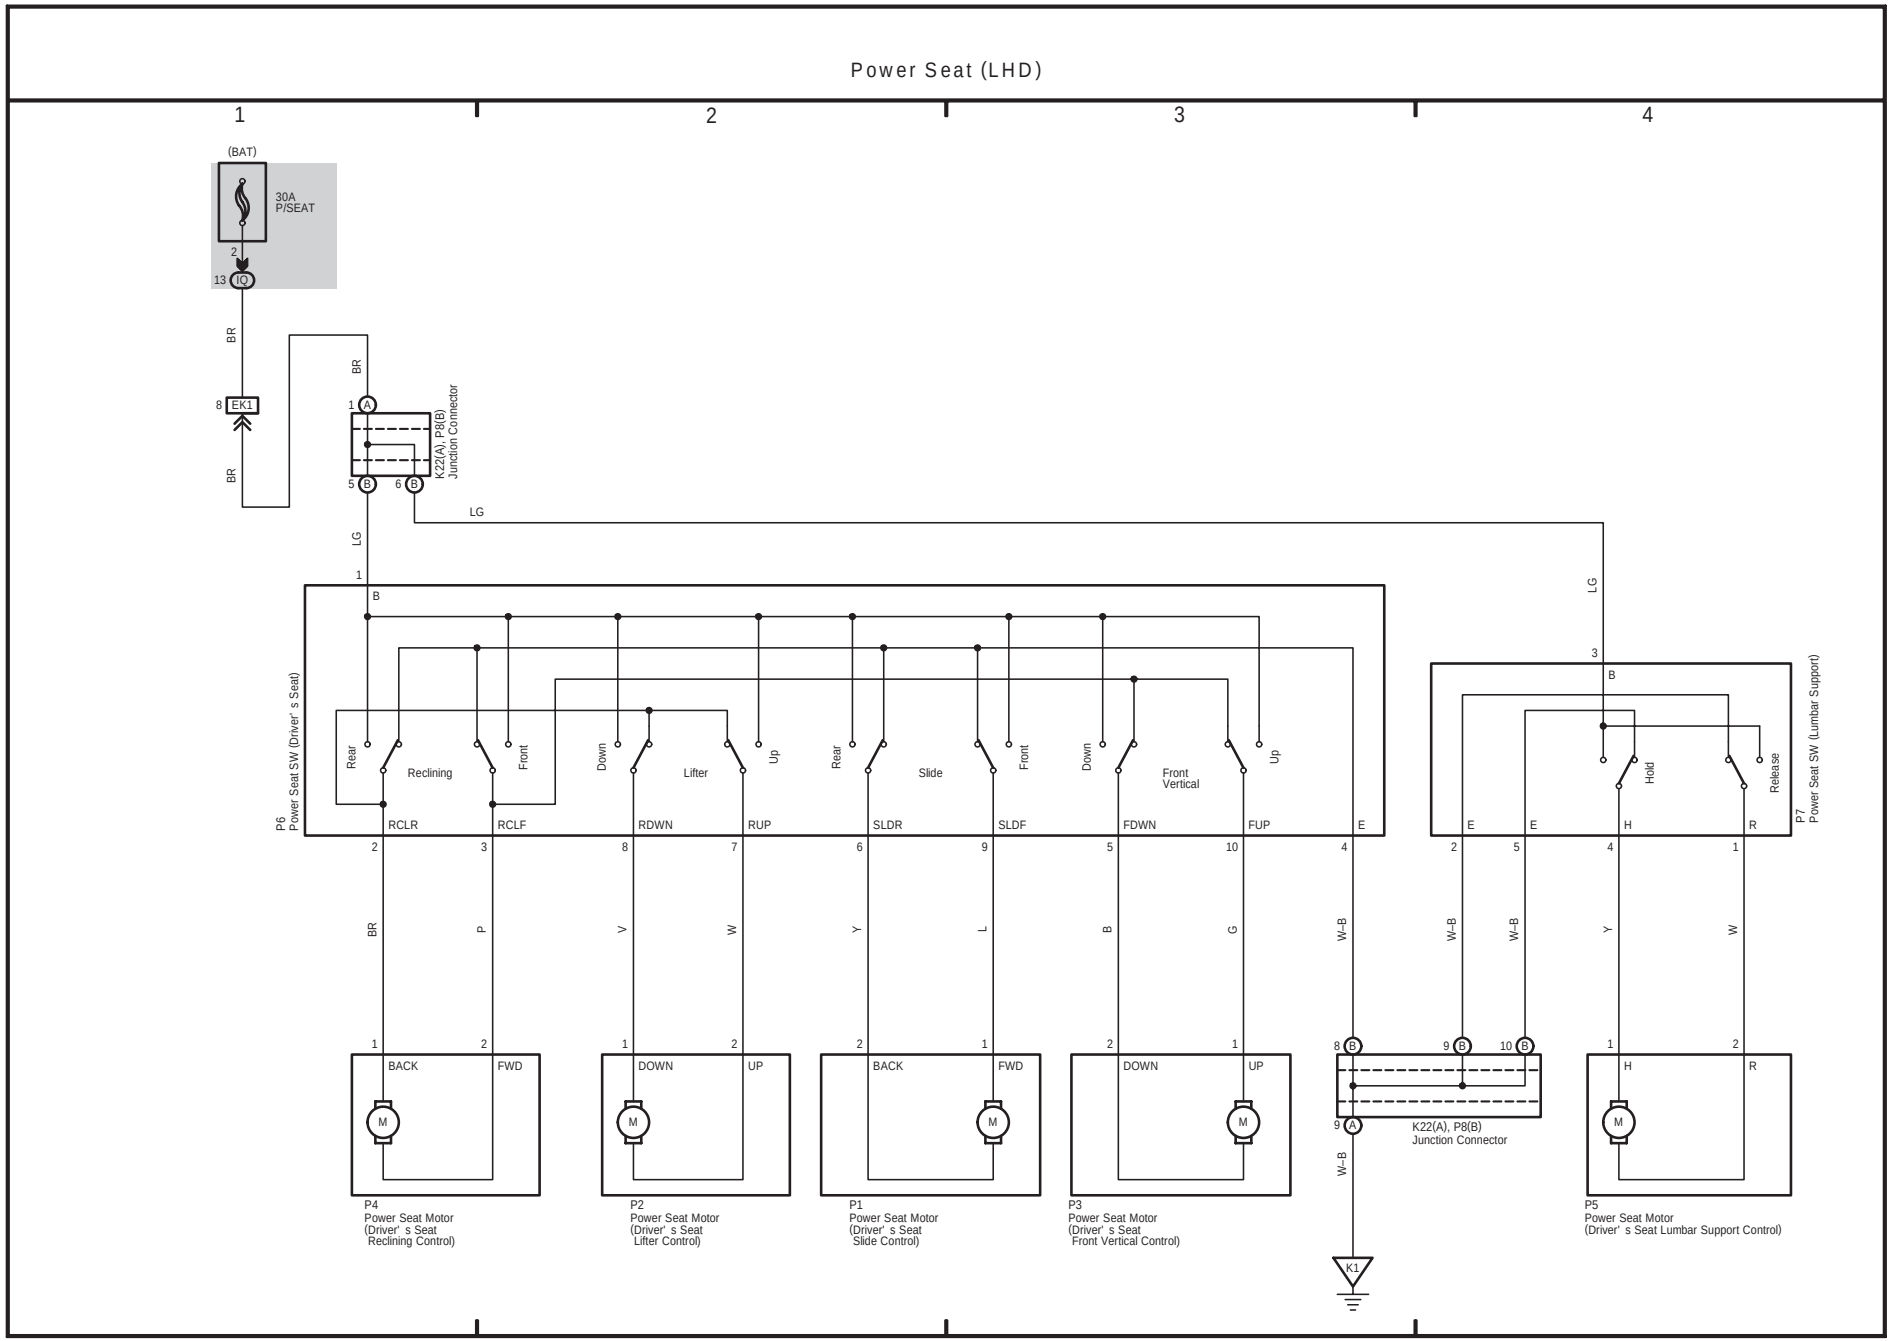

Power Seat (LHD)
1
2
3
4
(BAT)
30A
P/SEAT
2
13 IQ
BR
8 EK1
BR
BR
1 A
5 B
6 B
K22(A), P8(B)
Junction Connector
LG
LG
1
B
LG
3
B
P6
Power Seat SW (Driver' s Seat)
Rear
Reclining
Front
Down
Lifter
Up
Rear
Slide
Front
Down
Front
Vertical
Up
RCLR
RCLF
RDWN
RUP
SLDR
SLDF
FDWN
FUP
E
Hold
Release
P7
Power Seat SW (Lumbar Support)
E
E
H
R
2
3
8
7
6
9
5
10
4
2
5
4
1
BR
P
V
W
Y
L
B
G
W-B
W-B
W-B
Y
W
1
2
1
2
2
1
2
1
8 B
9 B
10 B
1
2
BACK
FWD
DOWN
UP
BACK
FWD
DOWN
UP
H
R
M
M
M
M
M
9 A
K22(A), P8(B)
Junction Connector
W-B
K1
P4
Power Seat Motor
(Driver' s Seat
Reclining Control)
P2
Power Seat Motor
(Driver' s Seat
Lifter Control)
P1
Power Seat Motor
(Driver' s Seat
Slide Control)
P3
Power Seat Motor
(Driver' s Seat
Front Vertical Control)
P5
Power Seat Motor
(Driver' s Seat Lumbar Support Control)