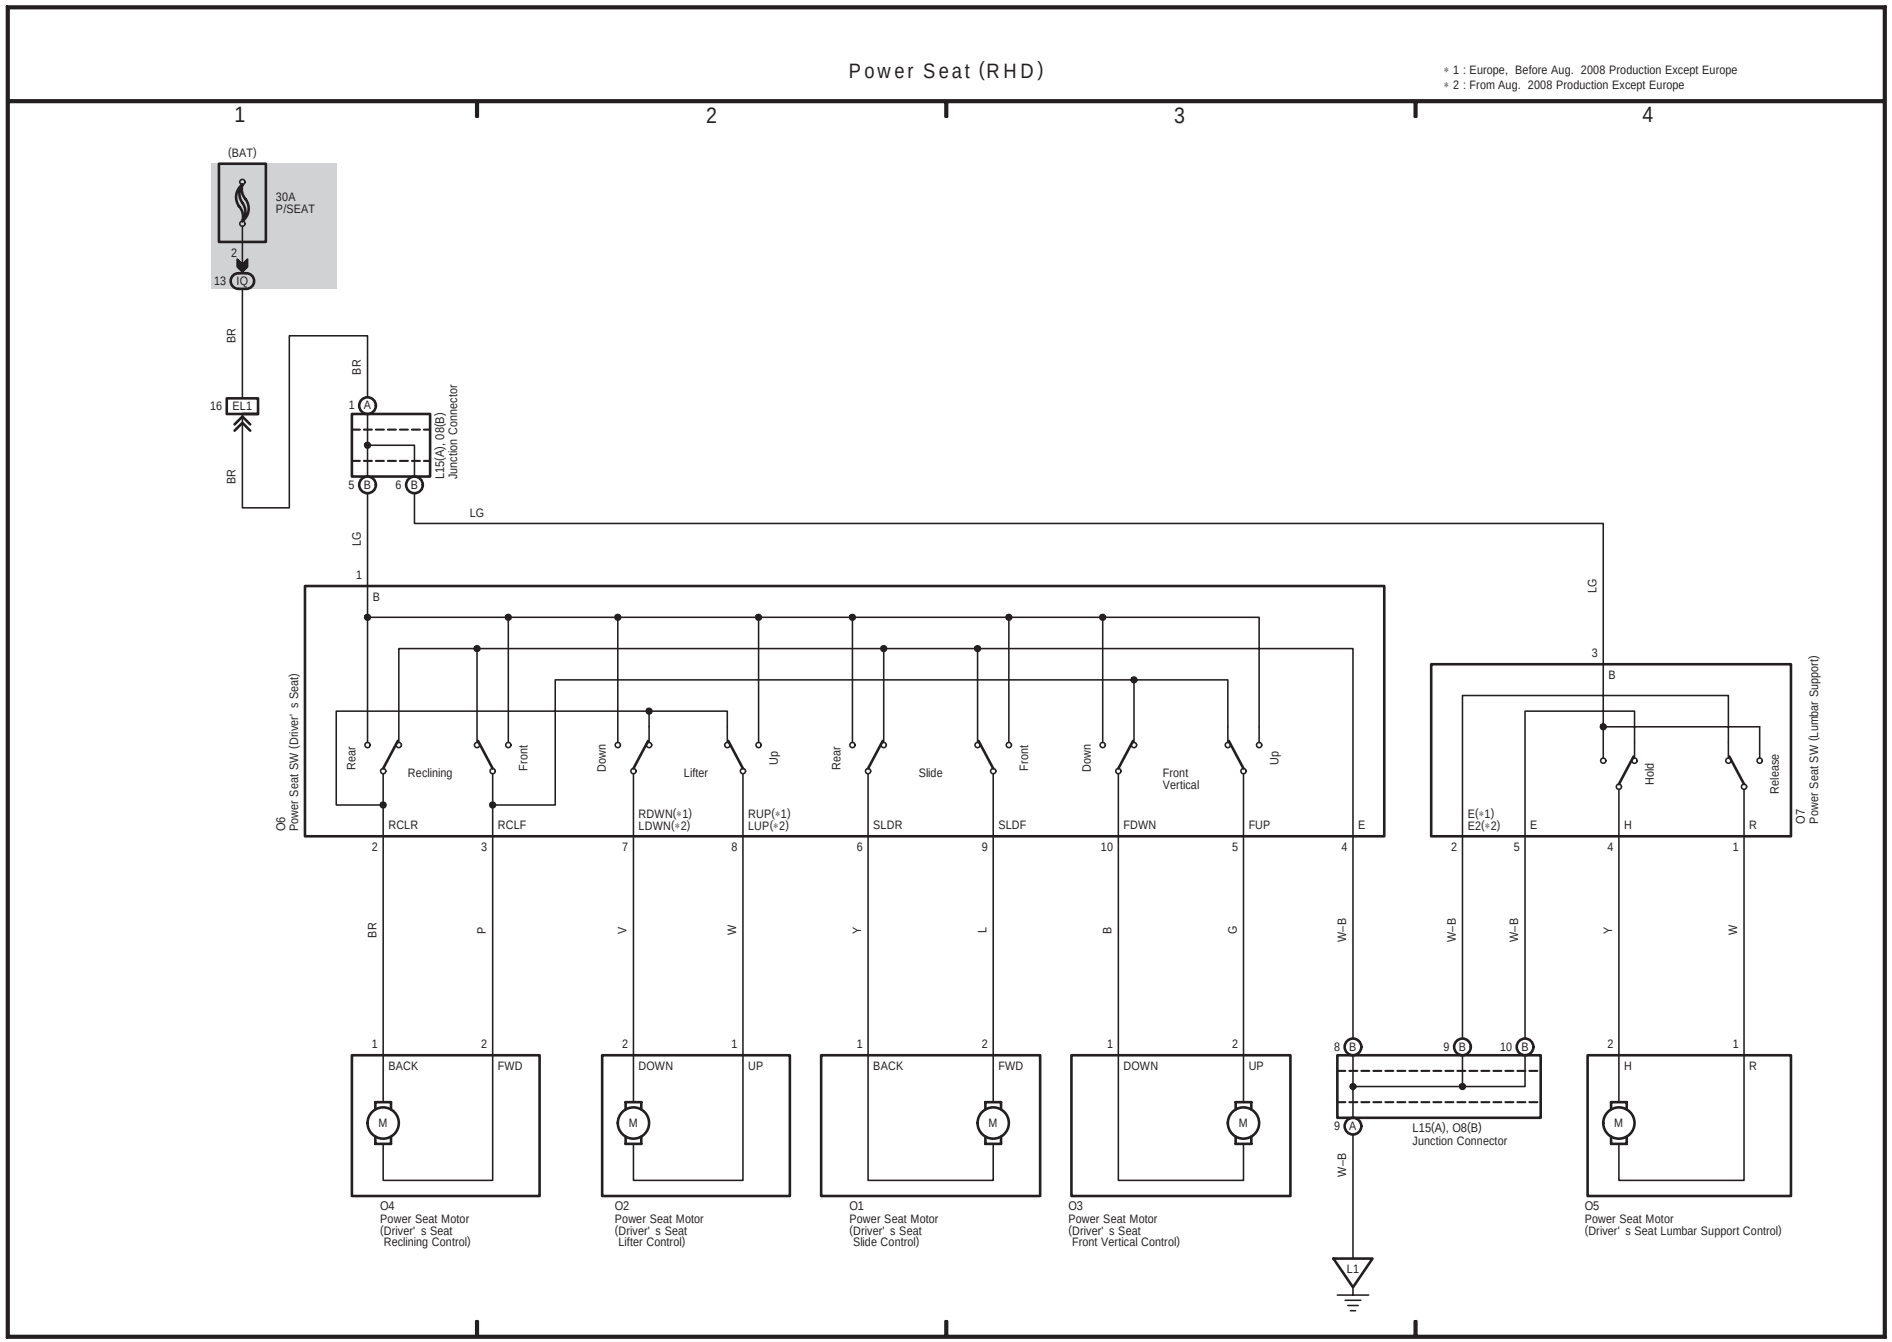

Power Seat (RHD)
* 1 : Europe, Before Aug. 2008 Production Except Europe
* 2 : From Aug. 2008 Production Except Europe
1
2
3
4
(BAT)
30A
P/SEAT
2
13 IQ
BR
16 EL1
BR
BR
1 A
5 B
6 B
L15(A), 08(B)
Junction Connector
LG
LG
1
B
LG
3
B
O6
Power Seat SW (Driver' s Seat)
Rear
Reclining
Front
Down
Lifter
Up
Rear
Slide
Front
Down
Front
Vertical
Up
RCLR
RCLF
RDWN(*1)
LDWN(*2)
RUP(*1)
LUP(*2)
SLDR
SLDF
FDWN
FUP
E
2
3
7
8
6
9
10
5
4
BR
P
V
W
Y
L
B
G
W-B
1
2
2
1
1
2
1
2
BACK
FWD
DOWN
UP
BACK
FWD
DOWN
UP
M
M
M
M
O4
Power Seat Motor
(Driver' s Seat
Reclining Control)
O2
Power Seat Motor
(Driver' s Seat
Lifter Control)
O1
Power Seat Motor
(Driver' s Seat
Slide Control)
O3
Power Seat Motor
(Driver' s Seat
Front Vertical Control)
E(*1)
E2(*2)
E
Hold
H
Release
R
O7
Power Seat SW (Lumbar Support)
2
5
4
1
W-B
W-B
Y
W
8 B
9 B
10 B
9 A
L15(A), 08(B)
Junction Connector
W-B
2
1
H
R
M
O5
Power Seat Motor
(Driver' s Seat Lumbar Support Control)
L1