

(Cont. next page)

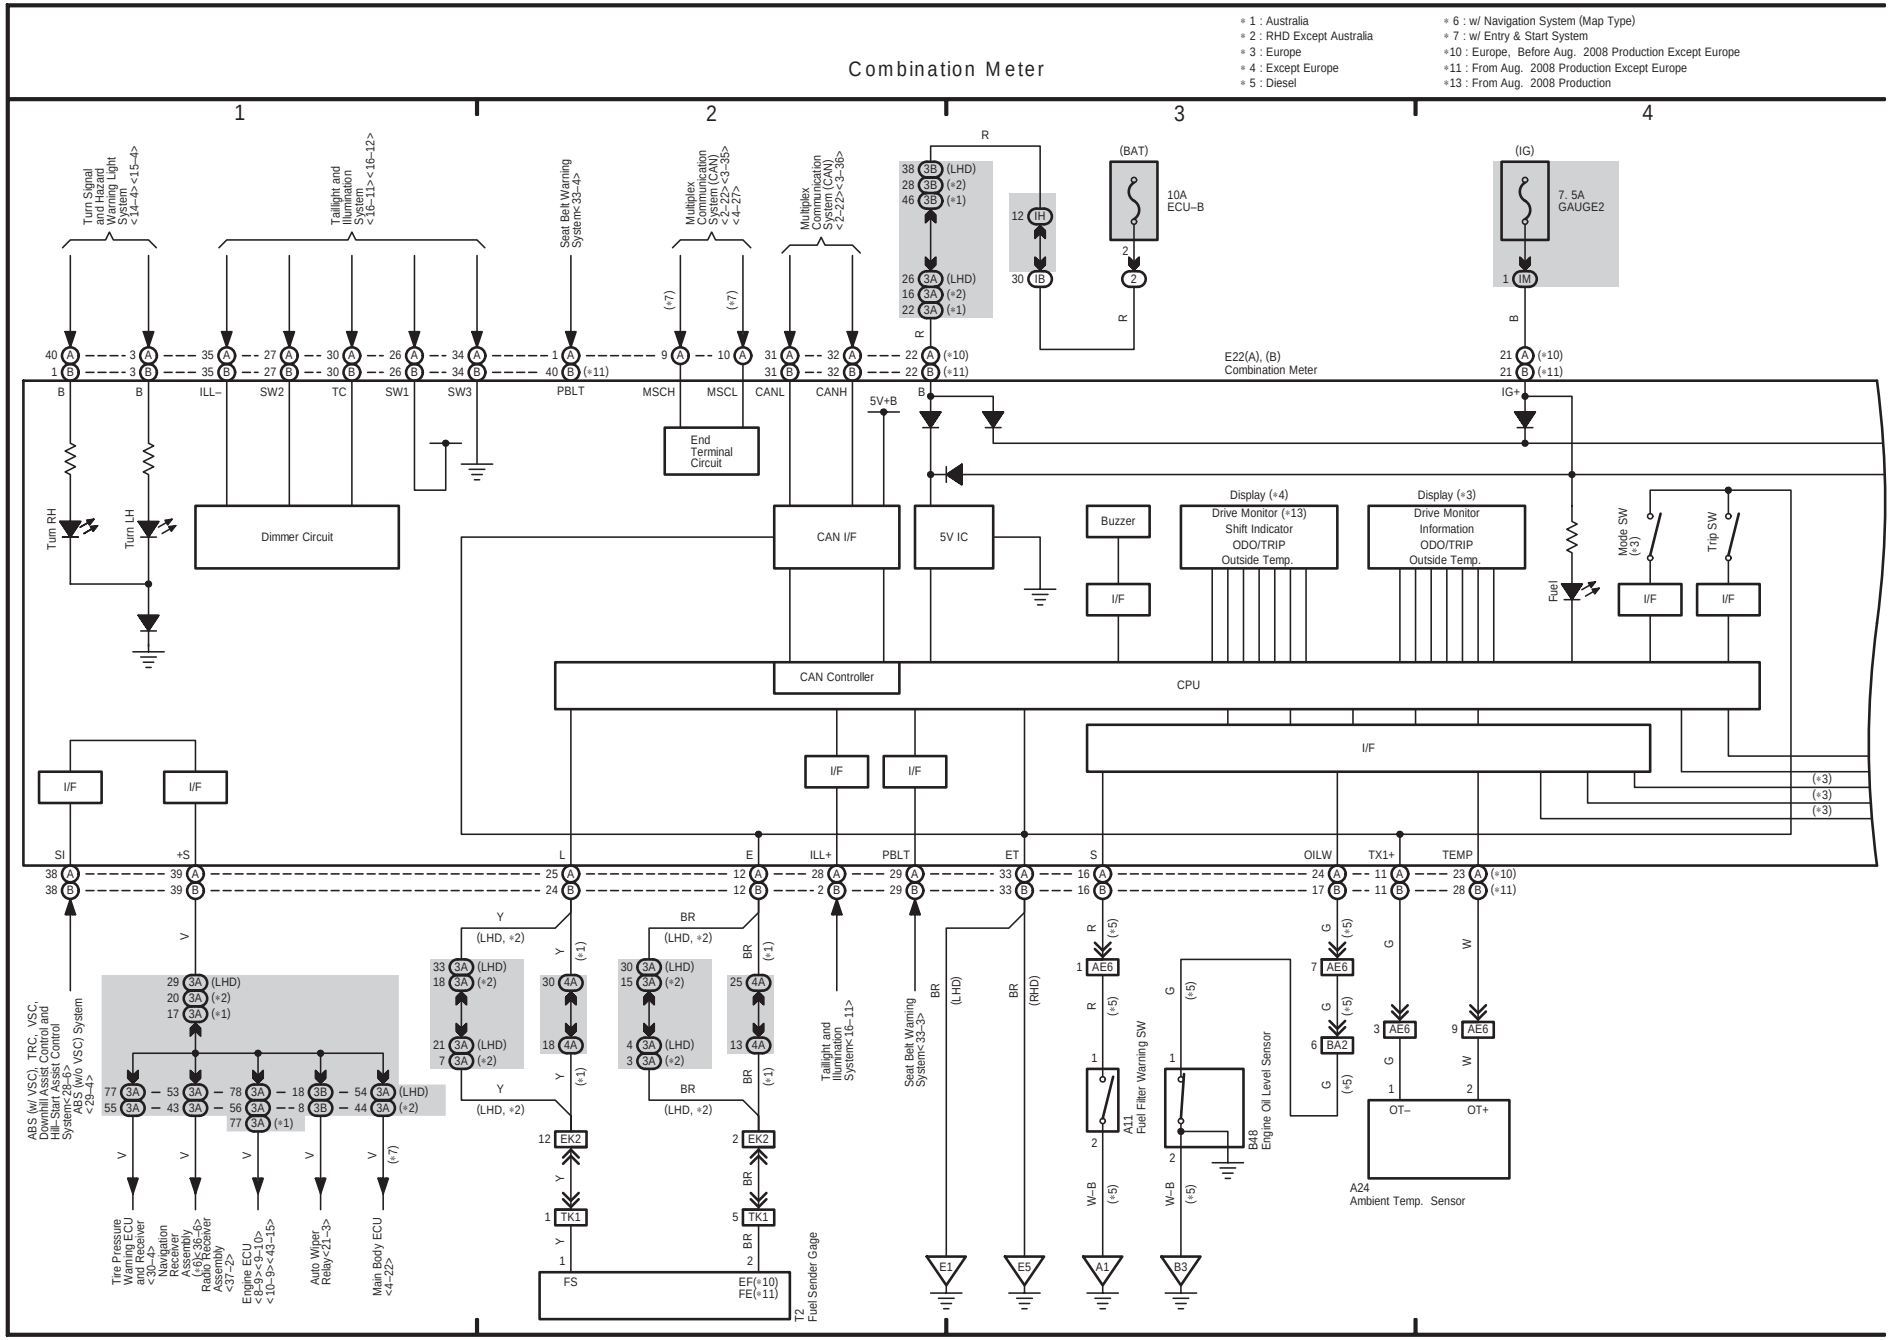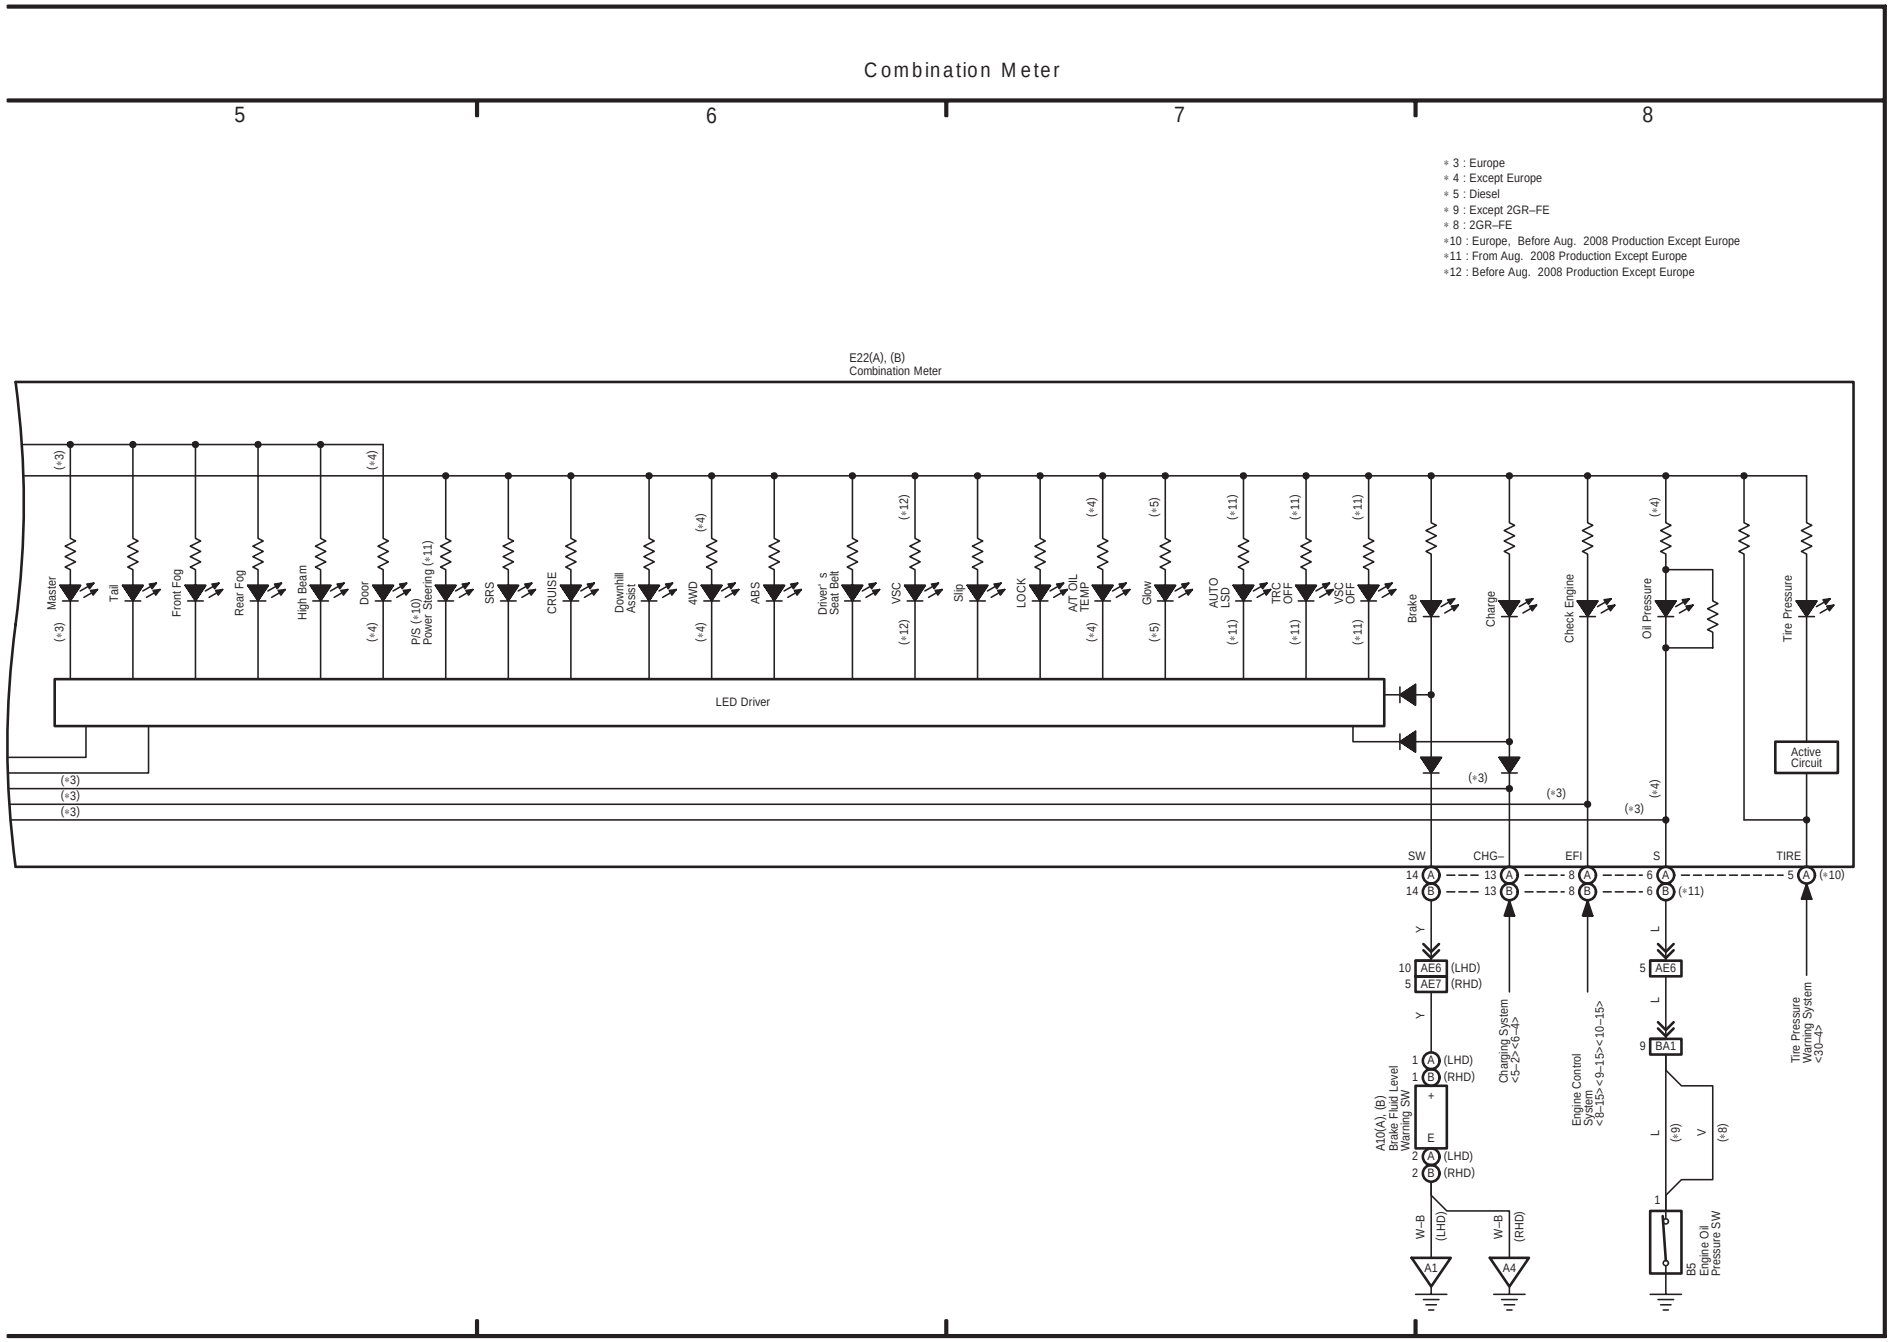


Combination Meter
5
6
7
8
∗ 3 : Europe
∗ 4 : Except Europe
∗ 5 : Diesel
∗ 9 : Except 2GR–FE
∗ 8 : 2GR–FE
∗10 : Europe, Before Aug. 2008 Production Except Europe
∗11 : From Aug. 2008 Production Except Europe
∗12 : Before Aug. 2008 Production Except Europe
E22(A), (B)
Combination Meter
Master
Tail
Front Fog
Rear Fog
High Beam
Door
P/S (∗10)
Power Steering (∗11)
SRS
CRUISE
Downhill Assist
4WD
ABS
Driver' s Seat Belt
VSC
Slip
LOCK
A/T OIL TEMP
Glow
AUTO LSD
TRC OFF
VSC OFF
Brake
Charge
Check Engine
Oil Pressure
Tire Pressure
LED Driver
Active Circuit
SW
CHG–
EFI
S
TIRE
AE6 (LHD)
AE7 (RHD)
BA1
A10(A), (B)
Brake Fluid Level Warning SW
Charging System <5–2><6–4>
Engine Control System <8–15><9–15><10–15>
Tire Pressure Warning System <30–4>
W–B (LHD)
W–B (RHD)
A1
A4
B5
Engine Oil Pressure SW