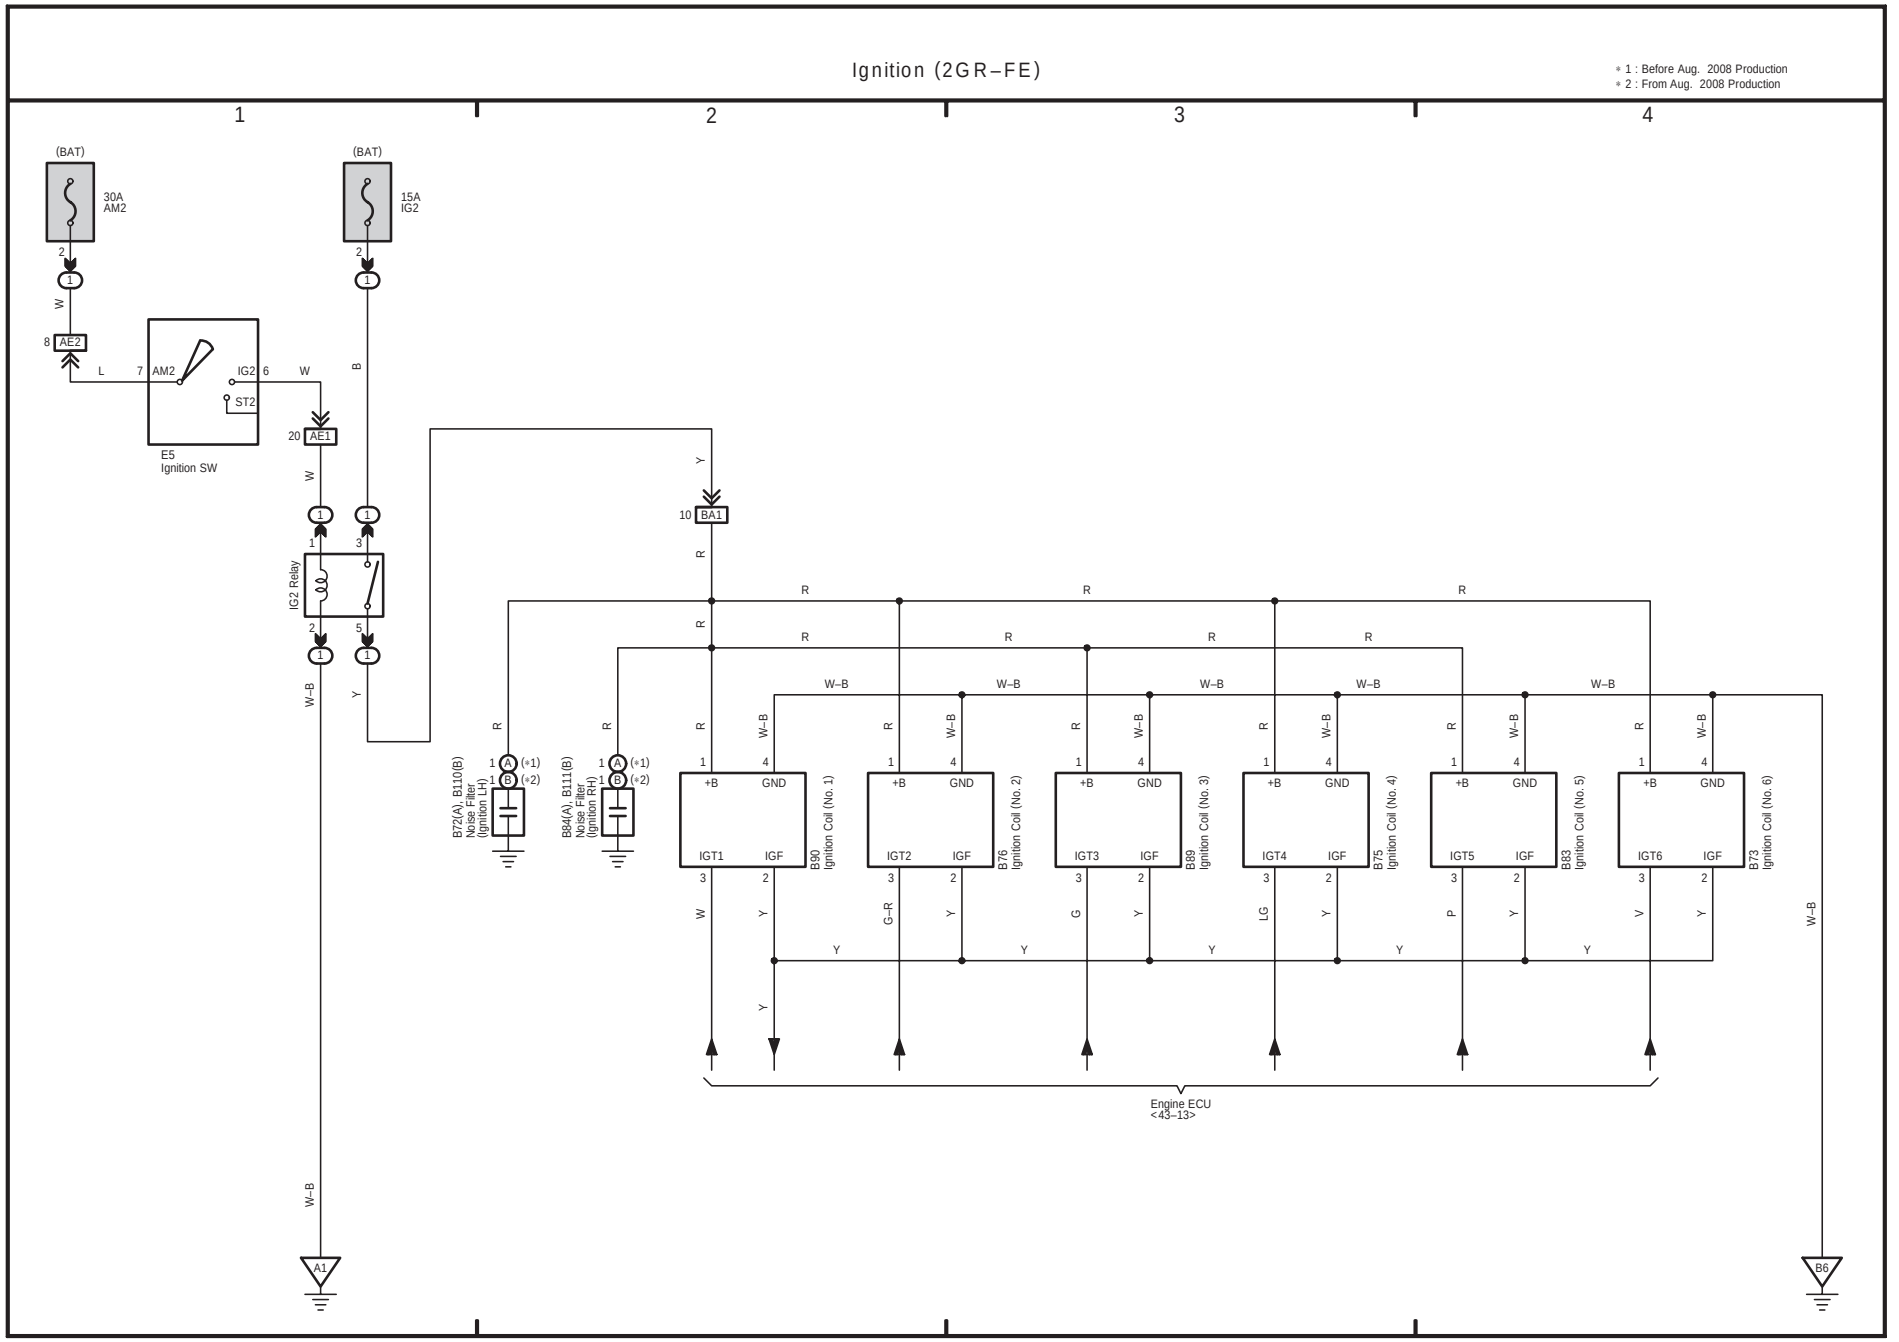

Ignition (2GR–FE)
* 1 : Before Aug. 2008 Production
* 2 : From Aug. 2008 Production
1
2
3
4
(BAT)
30A
AM2
15A
IG2
E5
Ignition SW
IG2 Relay
AE2
AE1
BA1
AM2
IG2
ST2
B72(A), B110(B)
Noise Filter
(Ignition LH)
B84(A), B111(B)
Noise Filter
(Ignition RH)
+B
GND
IGT1
IGT2
IGT3
IGT4
IGT5
IGT6
IGF
B90
Ignition Coil (No. 1)
B76
Ignition Coil (No. 2)
B89
Ignition Coil (No. 3)
B75
Ignition Coil (No. 4)
B83
Ignition Coil (No. 5)
B73
Ignition Coil (No. 6)
Engine ECU
<43–13>
A1
B6