

(Cont. next page)

Engine Control (2AZ–FE, 1AZ–FE)

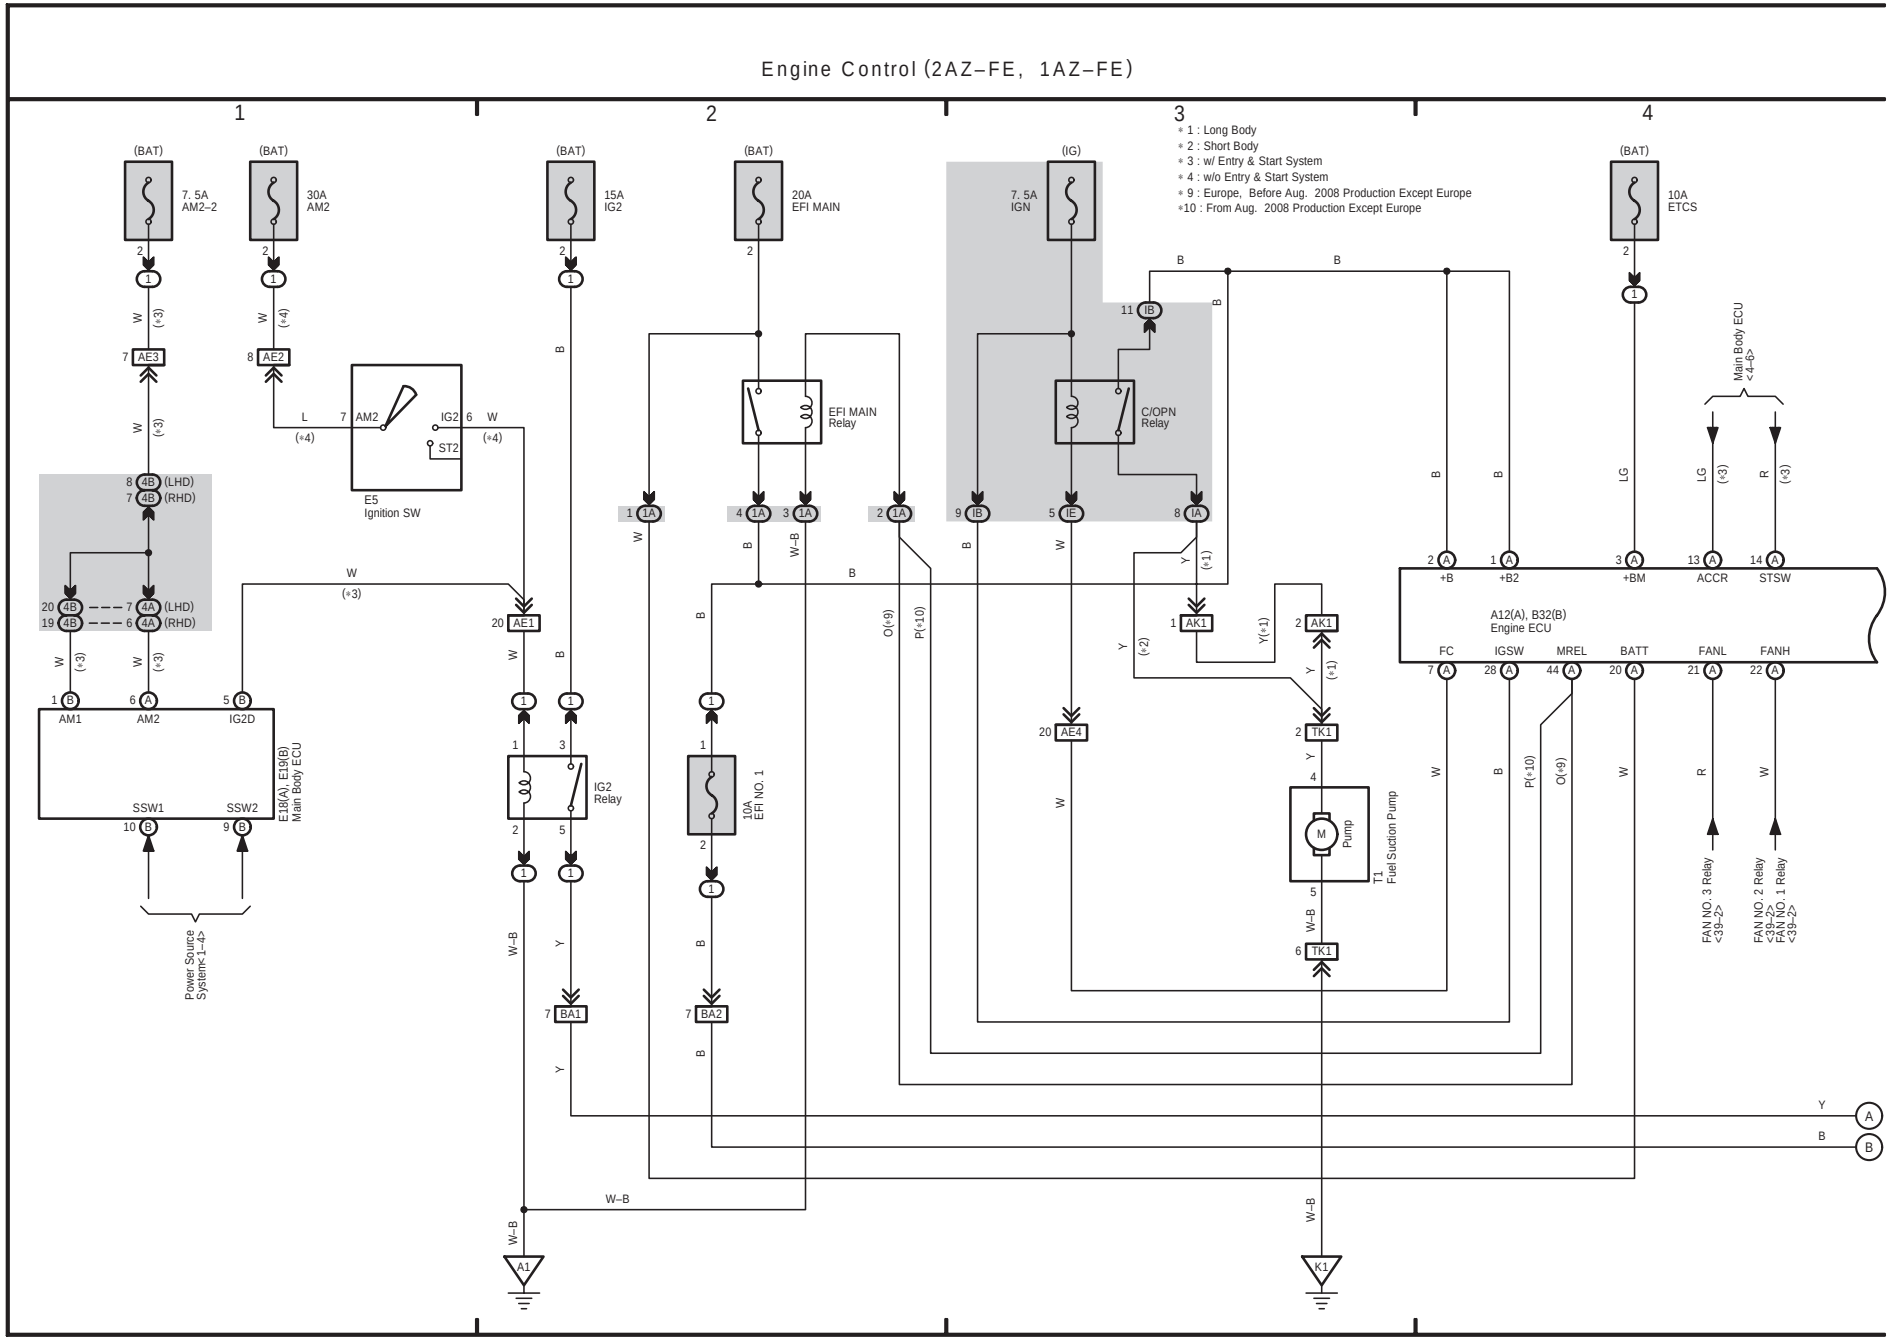

(Cont. next page)

Engine Control (2AZ–FE, 1AZ–FE)

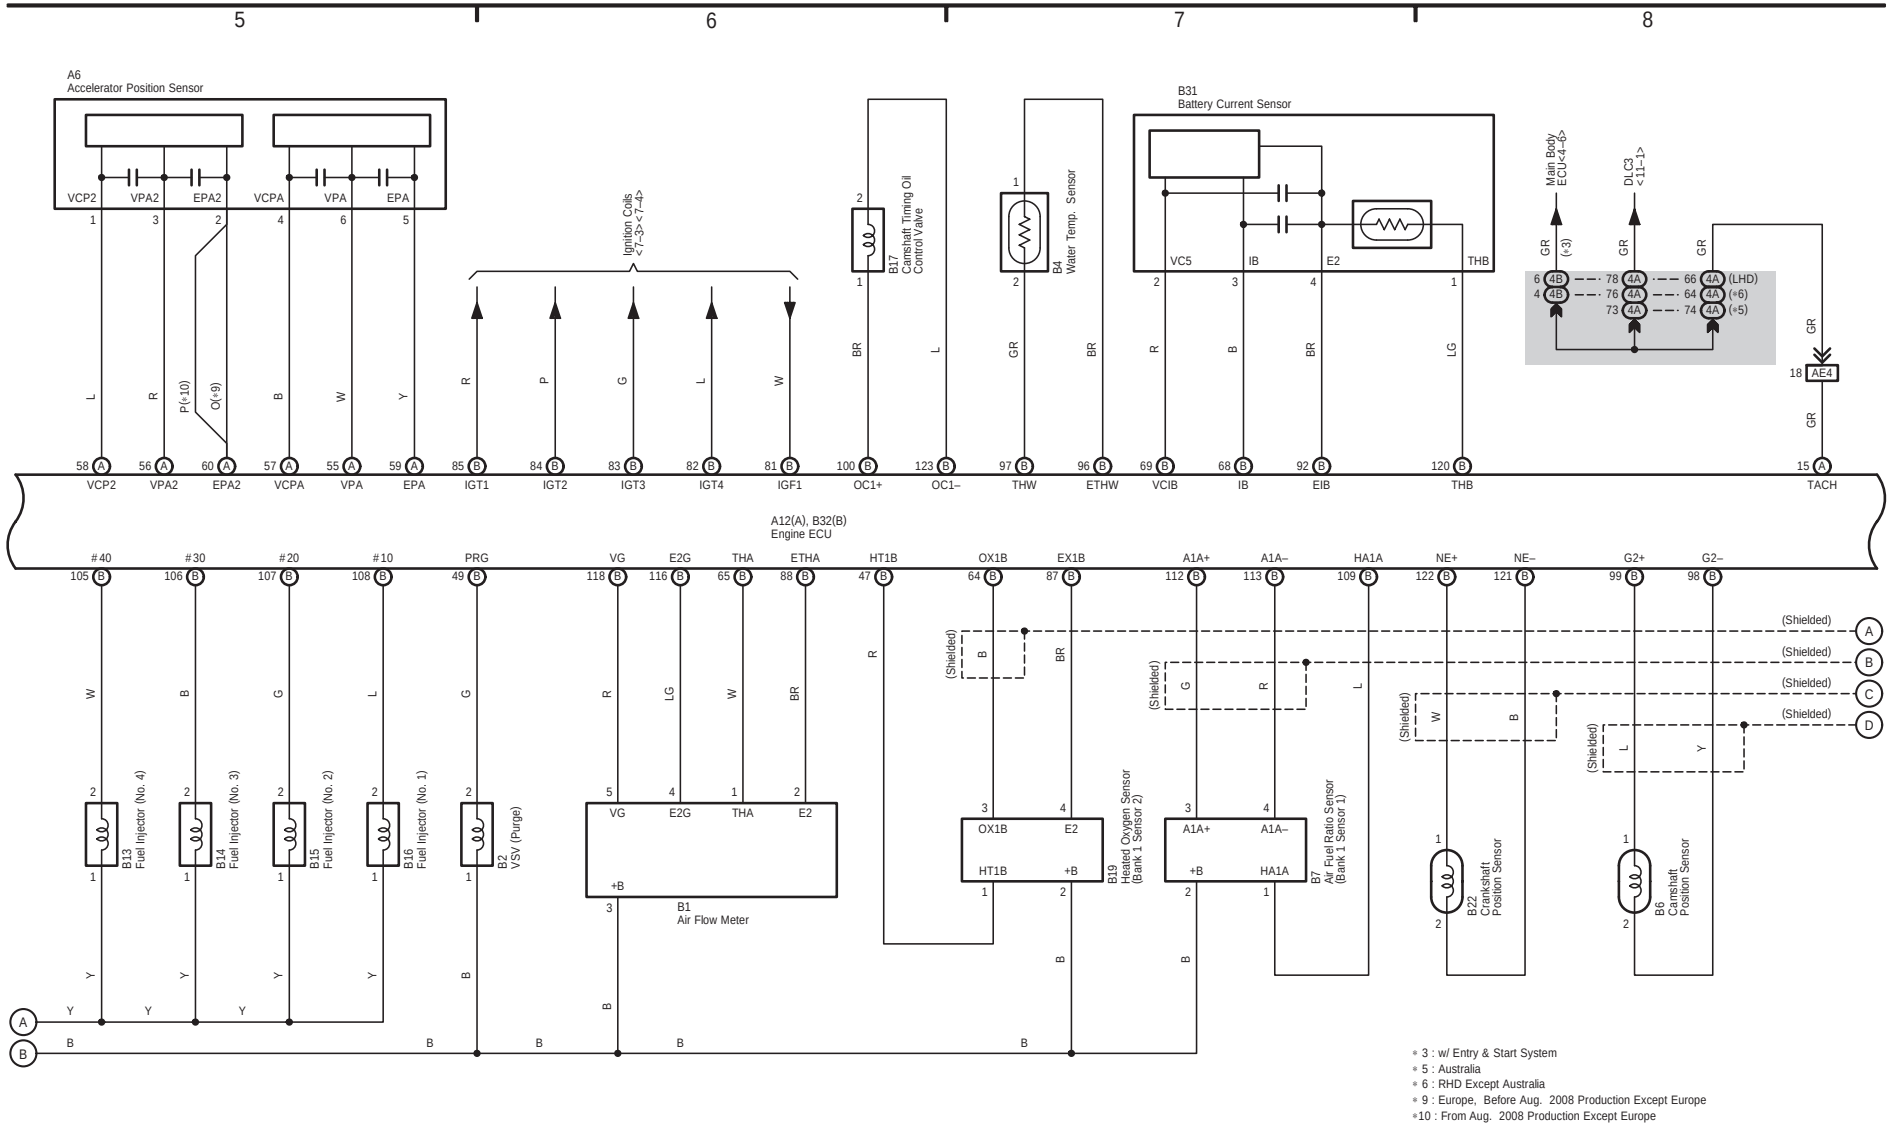


(Cont. next page)

Engine Control (2AZ–FE, 1AZ–FE)


Cruise Control (2AZ–FE, 1AZ–FE)

9 10 11 12

∗ 3 : w/ Entry & Start System
∗ 4 : w/o Entry & Start System
∗ 5 : Australia
∗ 6 : RHD Except Australia
∗ 9 : Europe, Before Aug. 2008 Production Except Europe
∗10 : From Aug. 2008 Production Except Europe

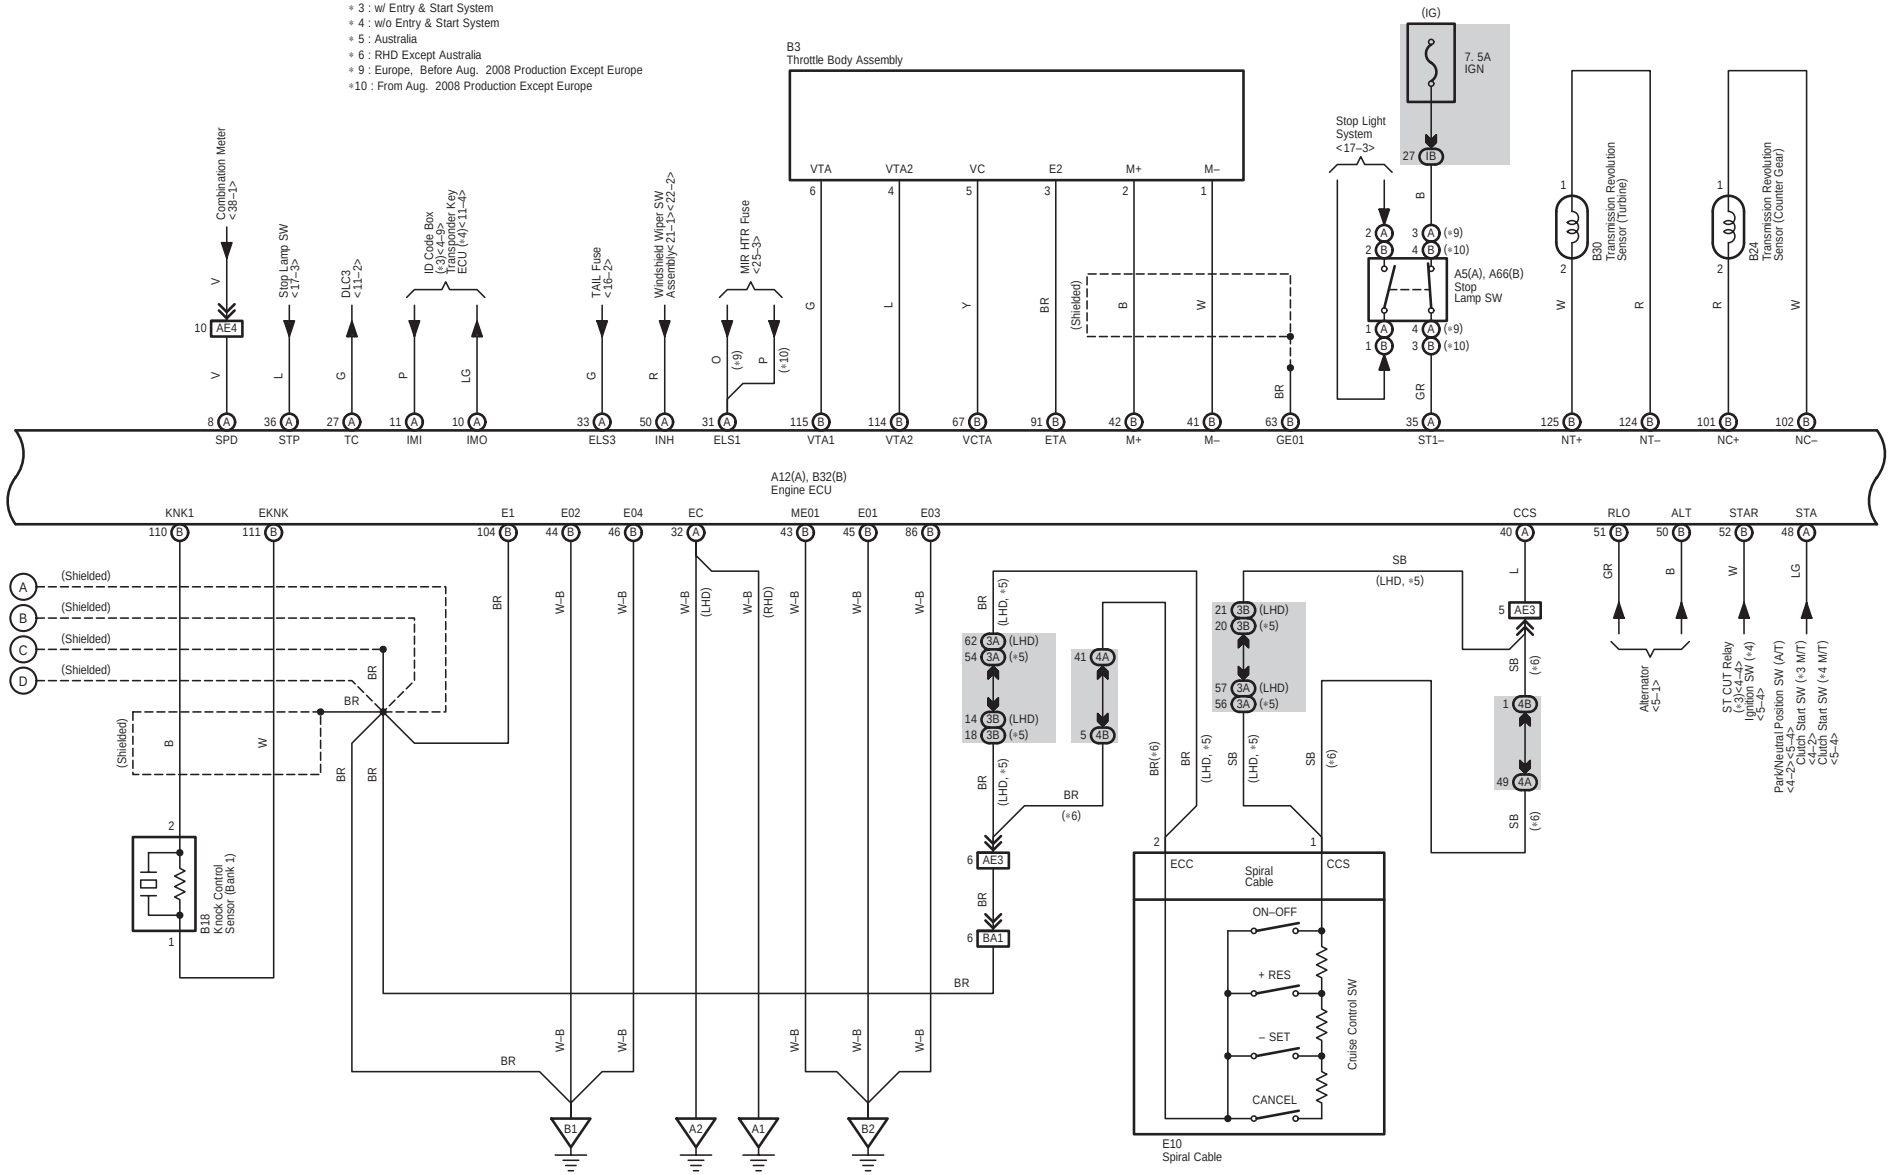

ECT and A/T Indicator (2AZ–FE, 1AZ–FE)

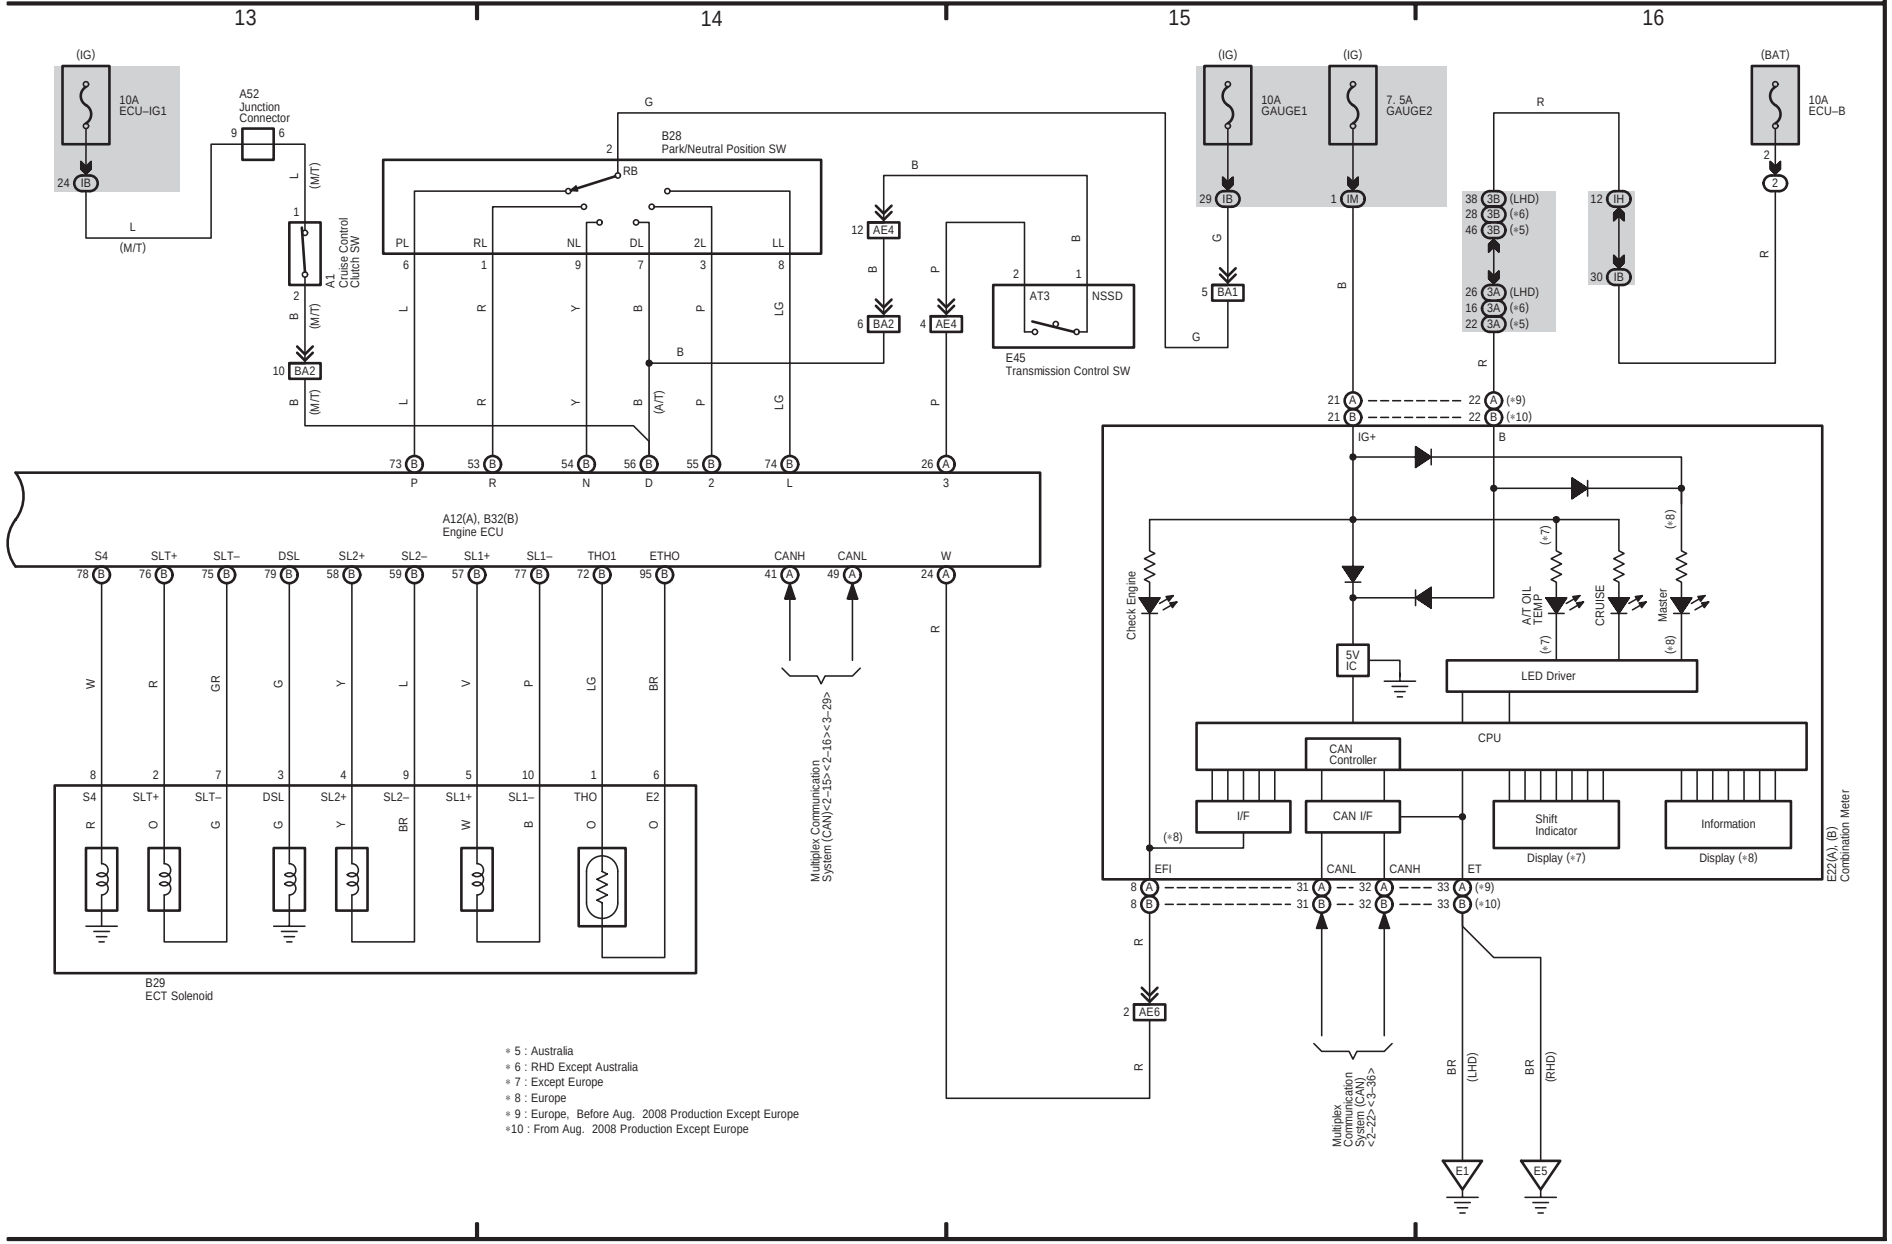

M