

F RELAY LOCATIONS

: Instrument Panel J/B	Cowl Side Left (See Page 21)

(LHD)

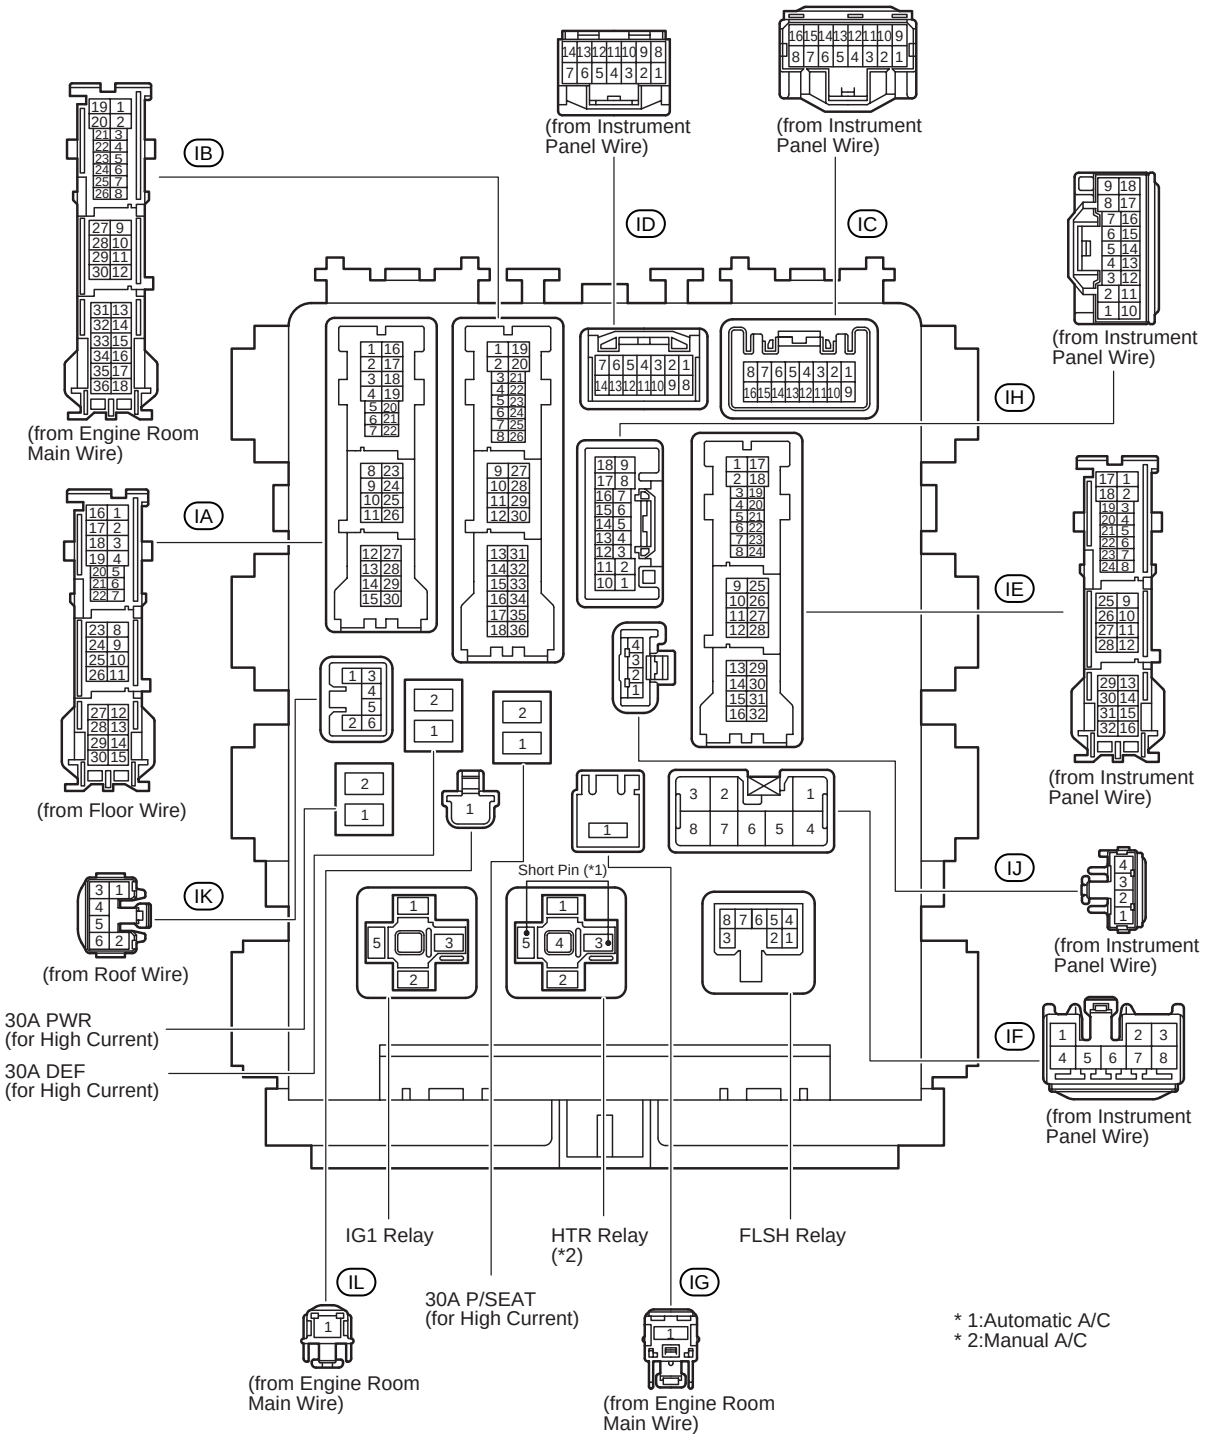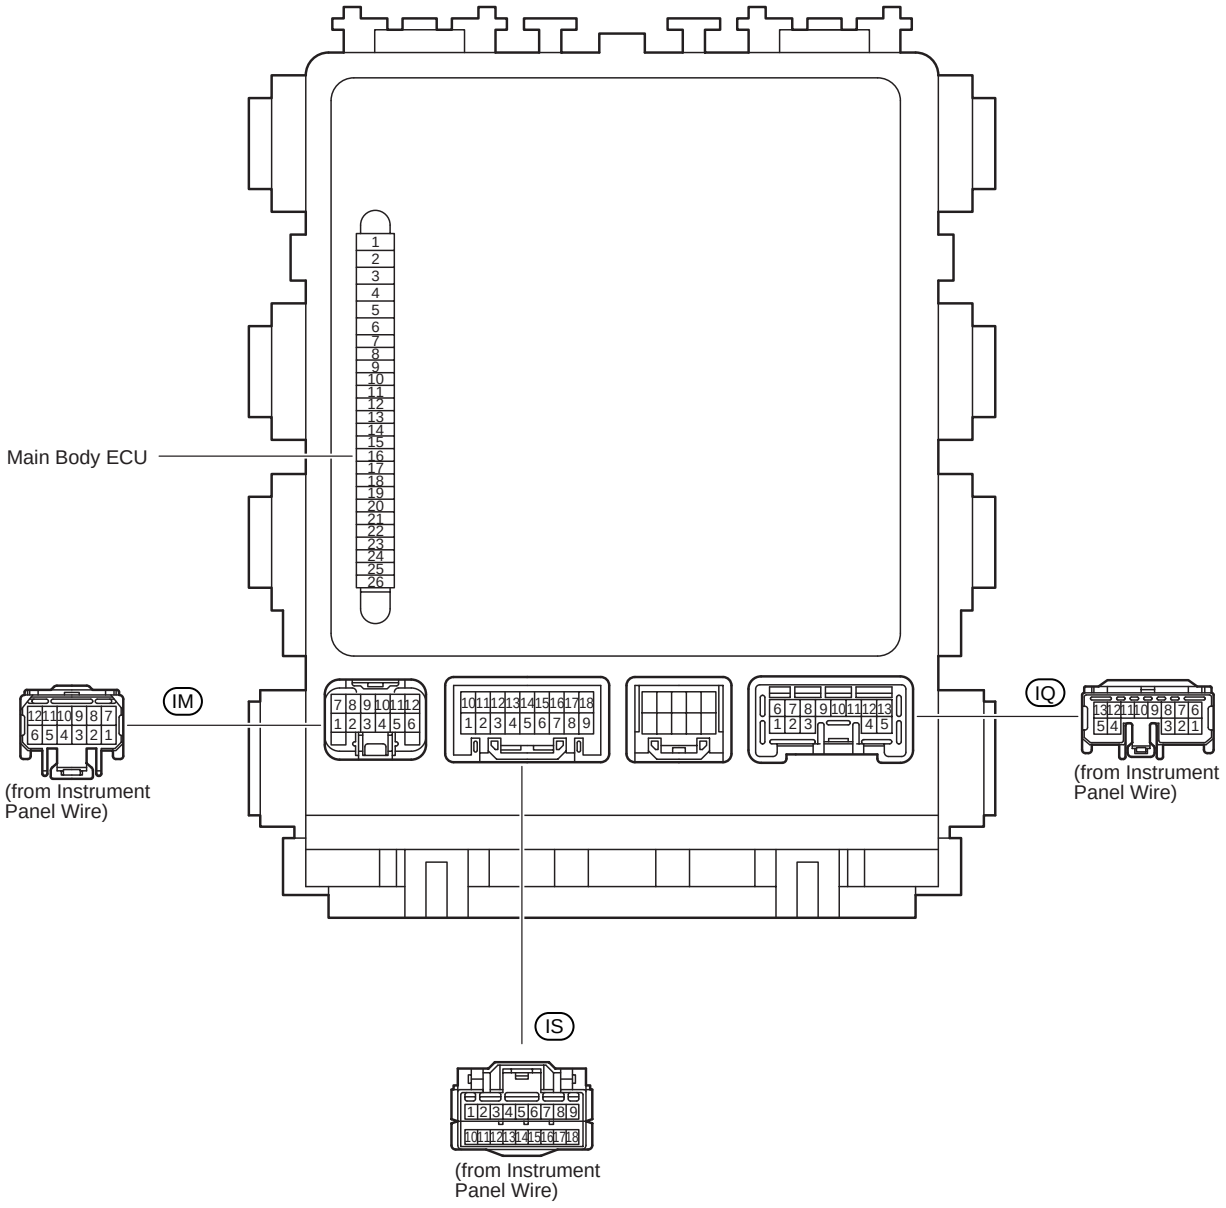


Main Body ECU
IM
(from Instrument Panel Wire)
IQ
(from Instrument Panel Wire)
IS
(from Instrument Panel Wire)

F RELAY LOCATIONS

: Instrument Panel J/B	Cowl Side Left (See Page 21)

(LHD)

