
F RELAY LOCATIONS

⑦ : R/B No.7	Cowl Side Left (See Page 21)

*1:LHD Gasoline or LHD Diesel w/ Entry & Start System
*2:LHD Diesel w/o Entry & Start System

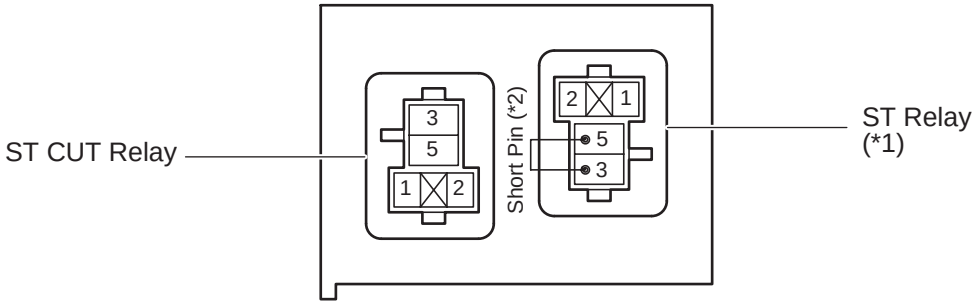

⑧ : R/B No.8	Cowl Side Left (See Page 21)

*1:RHD Gasoline or RHD Diesel w/ Entry & Start System
*2:RHD Diesel w/o Entry & Start System

