

* 3:A/T
* 4:M/T
B17
B12
B15
B11
B14
B10
B13
B9
B3
B2
B1
B16
B19
B22
B20
B21
B6
B32
B7
B31
B8
C1
(*4)
B26
(*3)
B26
B23
B18
B4
B5
B25
B24
B28
B29
B30


B 1 Air Flow Meter
B 2 VSV (Purge)
B 3 Throttle Body Assembly
B 4 Water Temp. Sensor
B 5 Engine Oil Pressure SW
B 6 Camshaft Position Sensor
B 7 Air Fuel Ratio Sensor (Bank 1 Sensor 1)
B 8 Noise Filter (Ignition)
B 9 Ignition Coil (No.4)
B 10 Ignition Coil (No.3)
B 11 Ignition Coil (No.2)
B 12 Ignition Coil (No.1)
B 13 Fuel Injector (No.4)
B 14 Fuel Injector (No.3)
B 15 Fuel Injector (No.2)
B 16 Fuel Injector (No.1)
B 17 Camshaft Timing Oil Control Valve
B 18 Knock Control Sensor (Bank 1)
B 19 Heated Oxygen Sensor (Bank 1 Sensor 2)
B 20 Alternator
B 21 Alternator
B 22 Crankshaft Position Sensor
B 23 A/C Compressor
B 24 Transmission Revolution Sensor (Counter Gear)
B 25 Back-Up Light SW
B 26 Starter
B 28 Park/Neutral Position SW
B 29 ECT Solenoid
B 30 Transmission Revolution Sensor (Turbine)
B 31 Battery Current Sensor
B 32 Engine ECU

C 1 Starter


B 1
Black

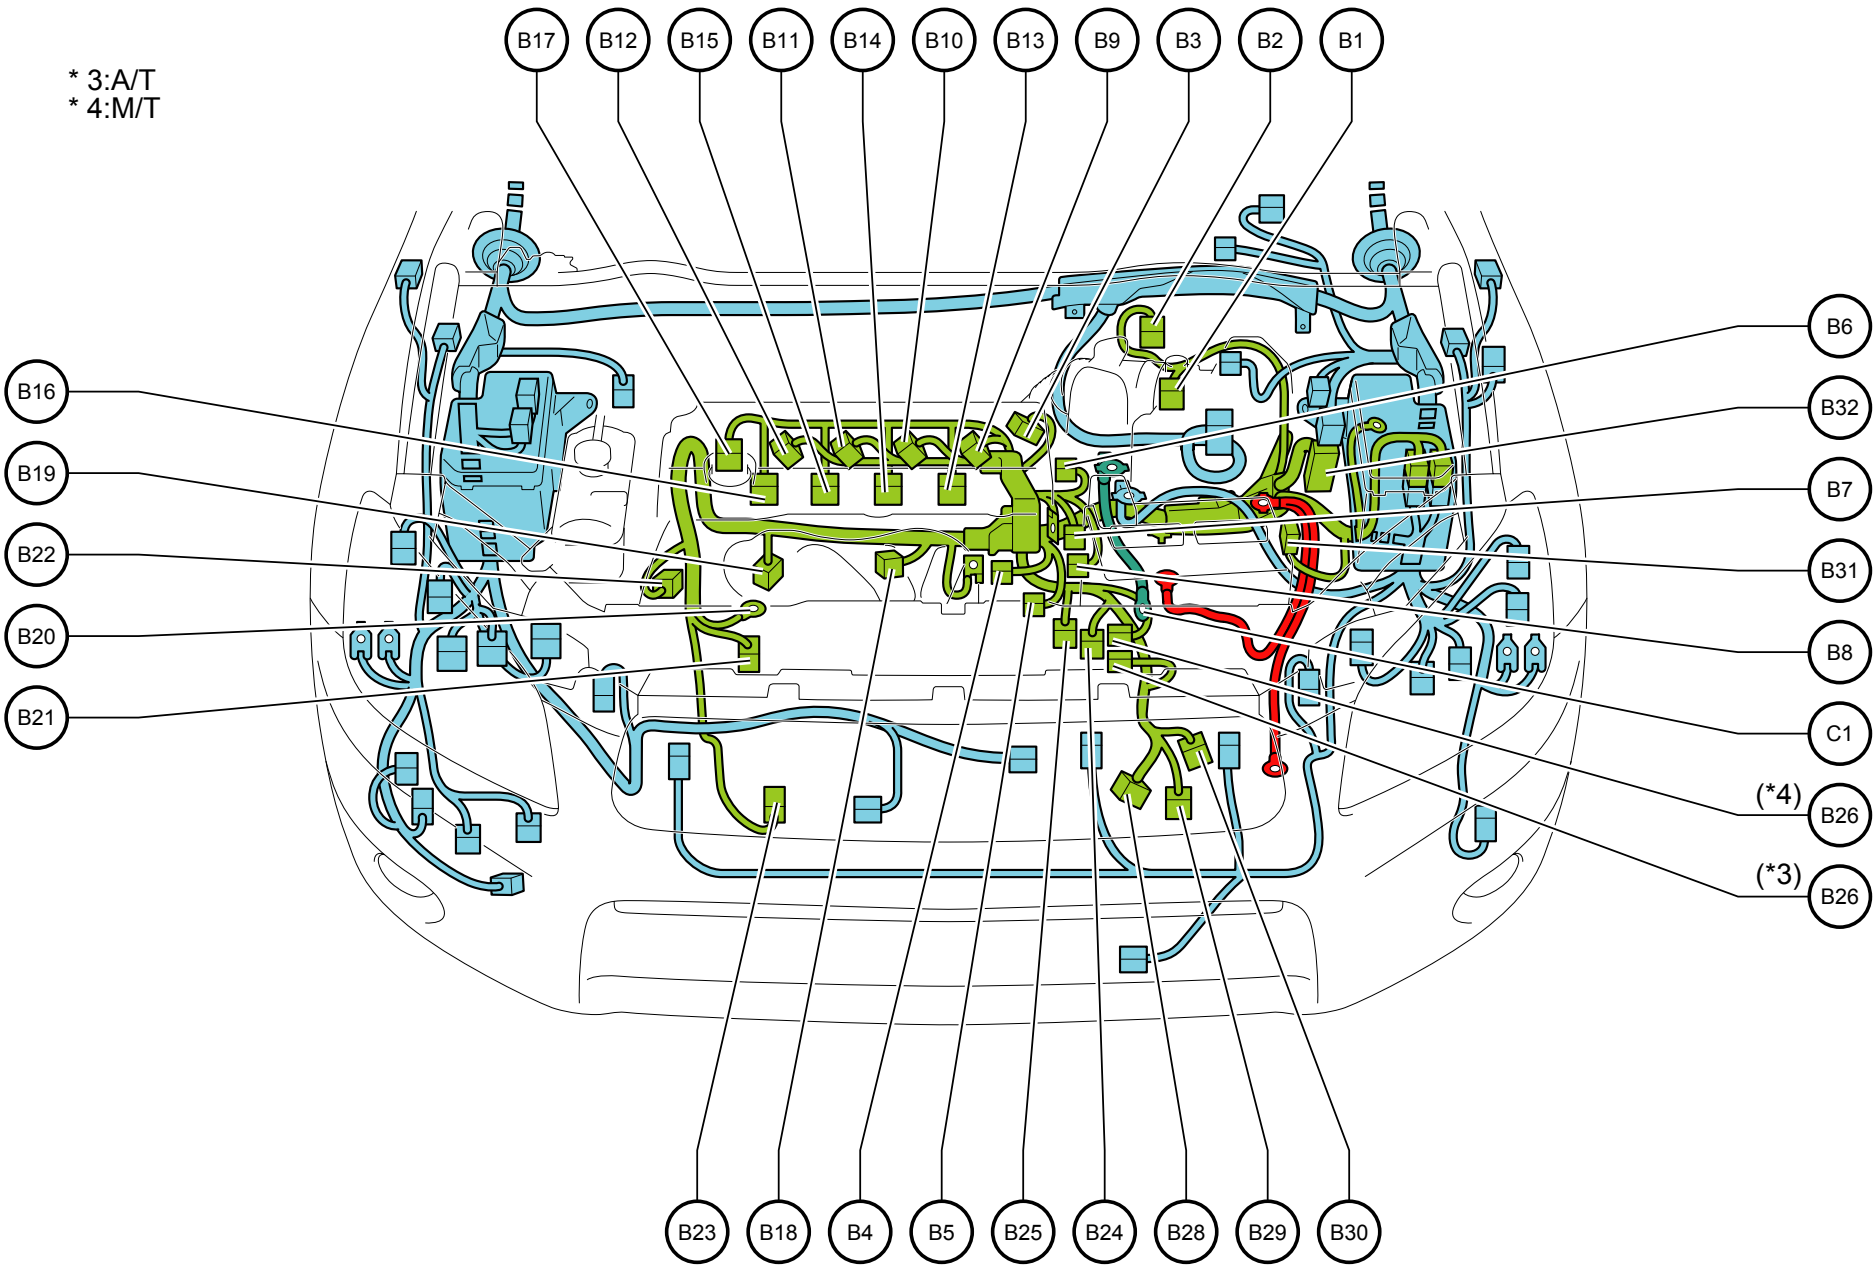

B 2
Blue

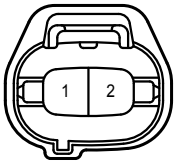

B 3
Black

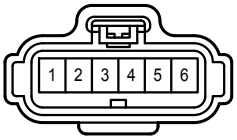

B 4
Gray



B 5
Gray



B 6
Black



B 7
Dark Gray




B 8
Gray




B 9
Gray




B 10
Black




B 11
Gray




B 12
Black




B 13
Gray




B 14
Black



B 15
Gray

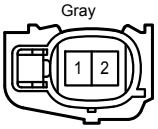


B 16
Black



B 17
Black




B 18
Black



B 19
Dark Gray



B 20




B 21
Black




B 22
Gray




B 23
Black

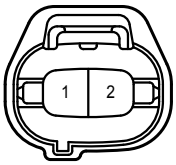

B 24
Black

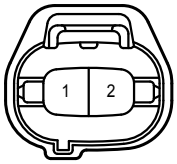


B 25
Gray

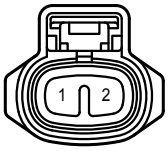


B 26
Black




B 28
Gray

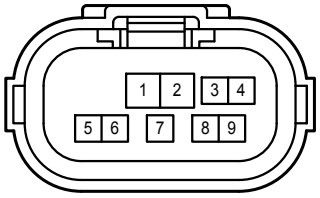


B 29
Gray

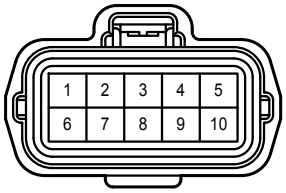

B 30
Black

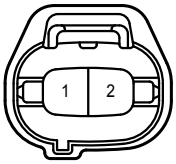


B 31
Gray

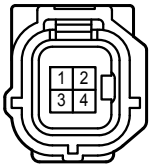


B 32

Black

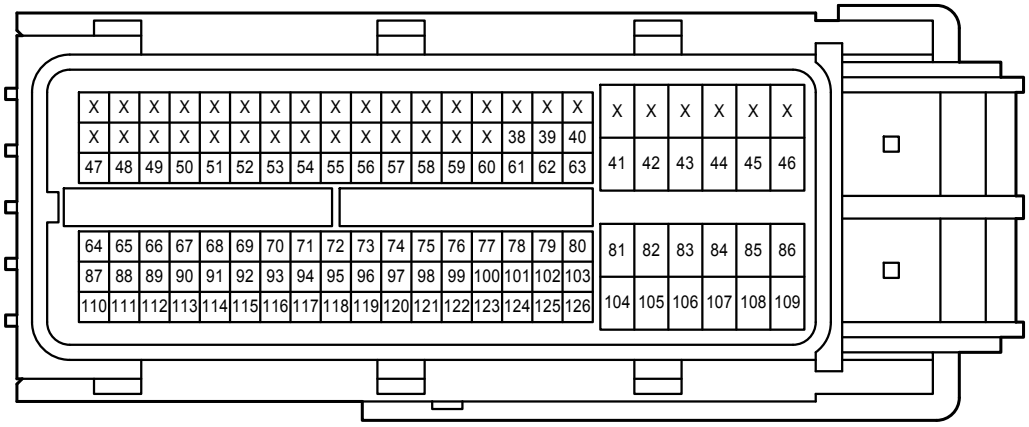
X X X X X X X X X X X X X X X X
X X X X X X X X X X X X X 38 39 40
47 48 49 50 51 52 53 54 55 56 57 58 59 60 61 62 63
X X X X X X
41 42 43 44 45 46
64 65 66 67 68 69 70 71 72 73 74 75 76 77 78 79 80
87 88 89 90 91 92 93 94 95 96 97 98 99 100 101 102 103
110 111 112 113 114 115 116 117 118 119 120 121 122 123 124 125 126
81 82 83 84 85 86
104 105 106 107 108 109

C 1


1