

B17
B12
B15
B11
B14
B10
B13
B9
B3
B2
B1
* 3:A/T
* 4:M/T
B16
B19
B22
B20
B21
B6
B32
B7
B31
B8
C1
(*4)
B26
(*3)
B26
B23
B18
B4
B5
B25
B24
B28
B29
B30


B 1 Air Flow Meter
B 2 VSV (Purge)
B 3 Throttle Body Assembly
B 4 Water Temp. Sensor
B 5 Engine Oil Pressure SW
B 6 Camshaft Position Sensor
B 7 Air Fuel Ratio Sensor (Bank 1 Sensor 1)
B 8 Noise Filter (Ignition)
B 9 Ignition Coil (No.4)
B 10 Ignition Coil (No.3)
B 11 Ignition Coil (No.2)
B 12 Ignition Coil (No.1)
B 13 Fuel Injector (No.4)
B 14 Fuel Injector (No.3)
B 15 Fuel Injector (No.2)
B 16 Fuel Injector (No.1)
B 17 Camshaft Timing Oil Control Valve
B 18 Knock Control Sensor (Bank 1)
B 19 Heated Oxygen Sensor (Bank 1 Sensor 2)
B 20 Alternator
B 21 Alternator
B 22 Crankshaft Position Sensor
B 23 A/C Compressor
B 24 Transmission Revolution Sensor (Counter Gear)
B 25 Back-Up Light SW
B 26 Starter
B 28 Park/Neutral Position SW
B 29 ECT Solenoid
B 30 Transmission Revolution Sensor (Turbine)
B 31 Battery Current Sensor
B 32 Engine ECU

C 1 Starter


B 1
Black

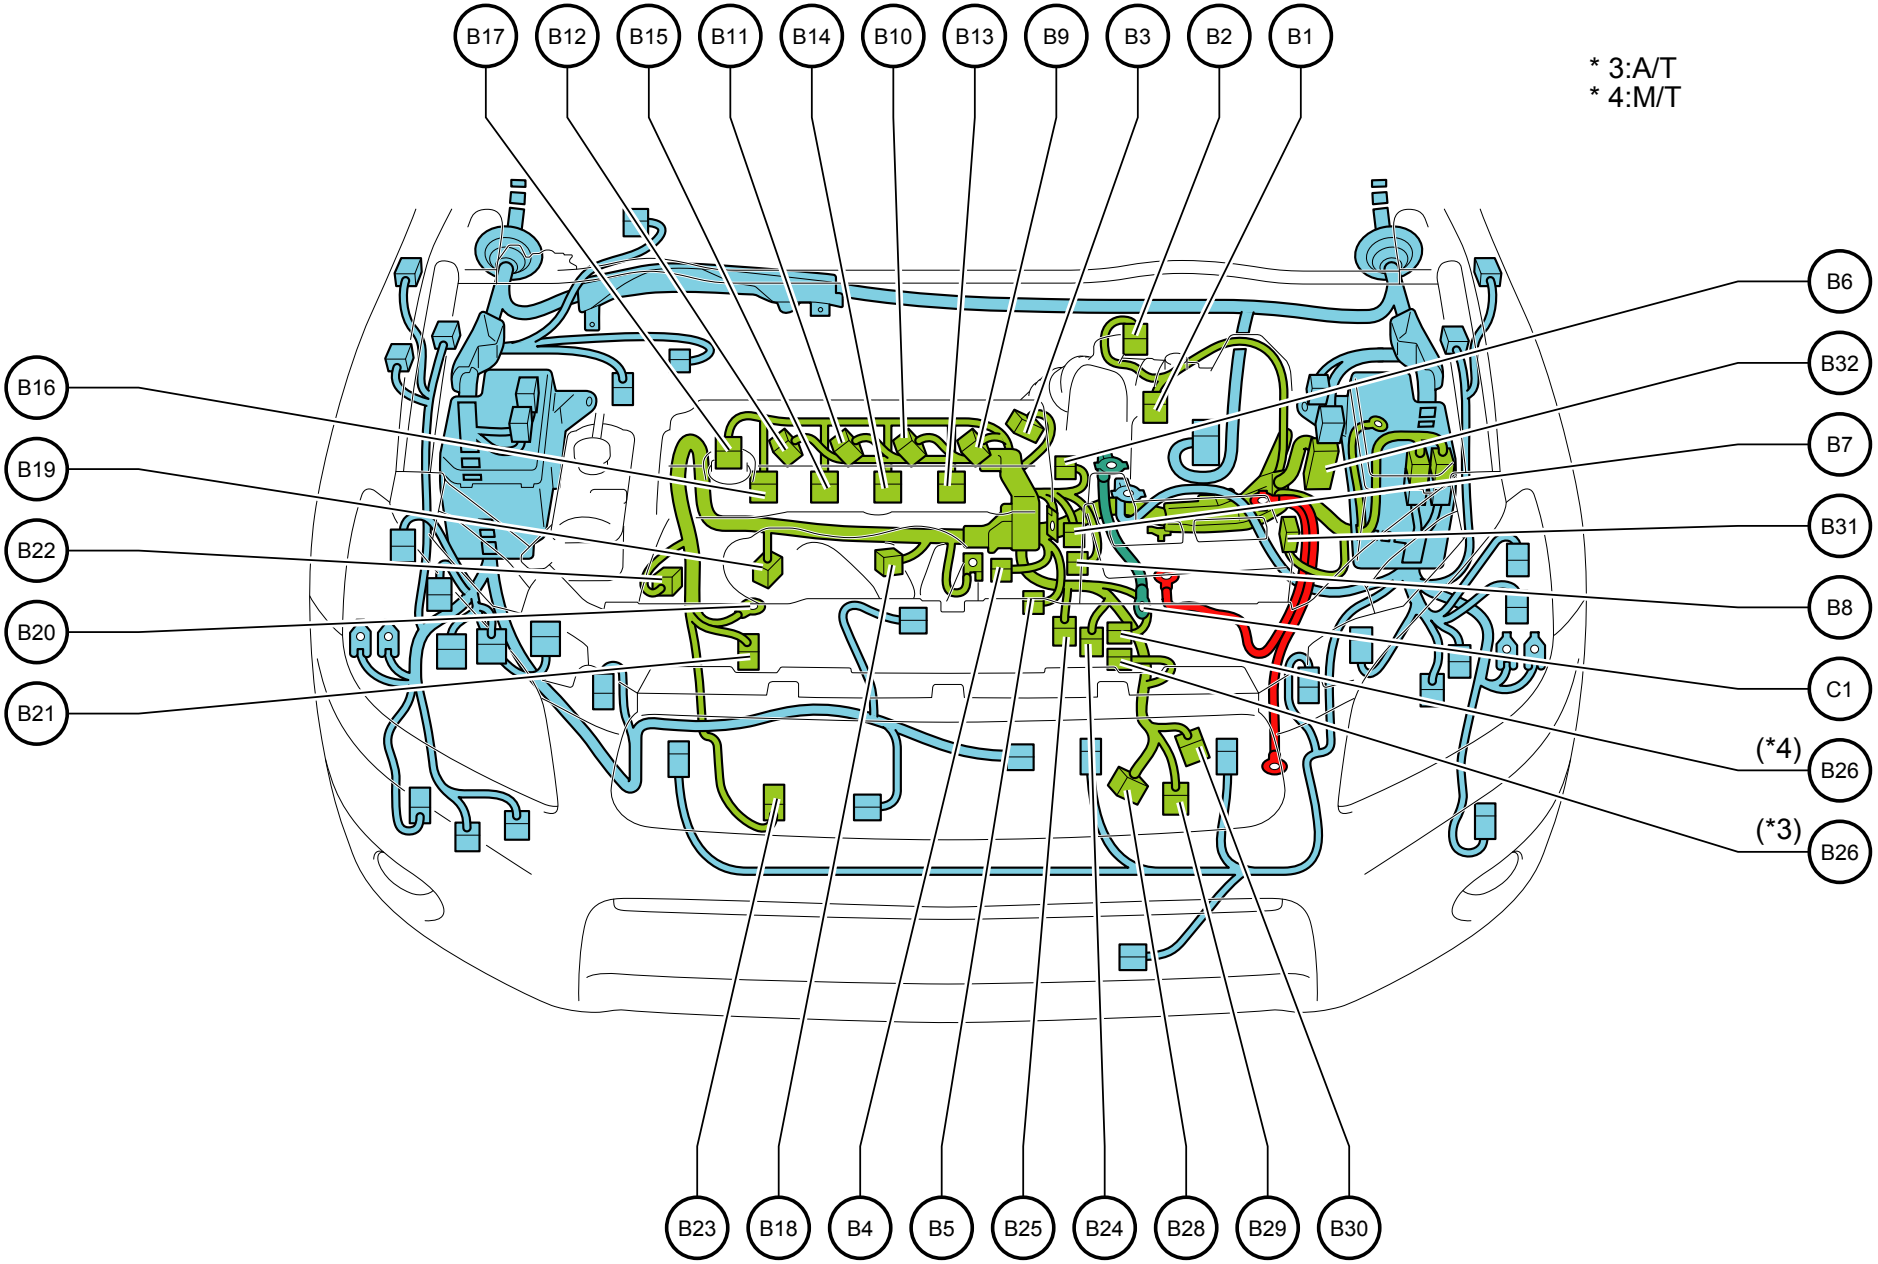

B 2
Blue

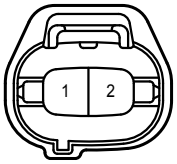

B 3
Black

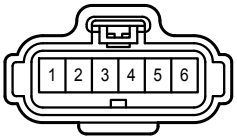

B 4
Gray



B 5
Gray



B 6
Black



B 7
Dark Gray




B 8
Gray




B 9
Gray




B 10
Black




B 11
Gray




B 12
Black




B 13
Gray




B 14
Black



B 15
Gray

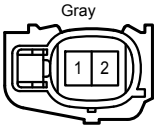


B 16
Black



B 17
Black




B 18
Black



B 19
Dark Gray



B 20




B 21
Black




B 22
Gray




B 23
Black

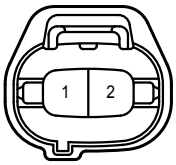

B 24
Black

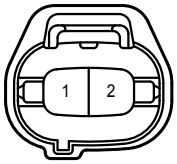


B 25
Gray

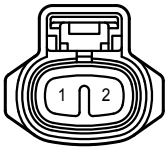


B 26
Black




B 28
Gray

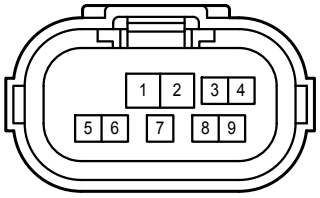


B 29
Gray

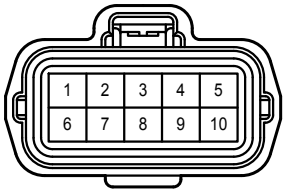


B 30
Black

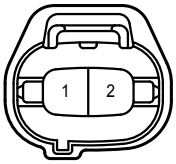


B 31
Gray

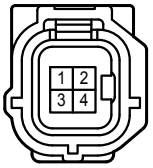

B 32
Black

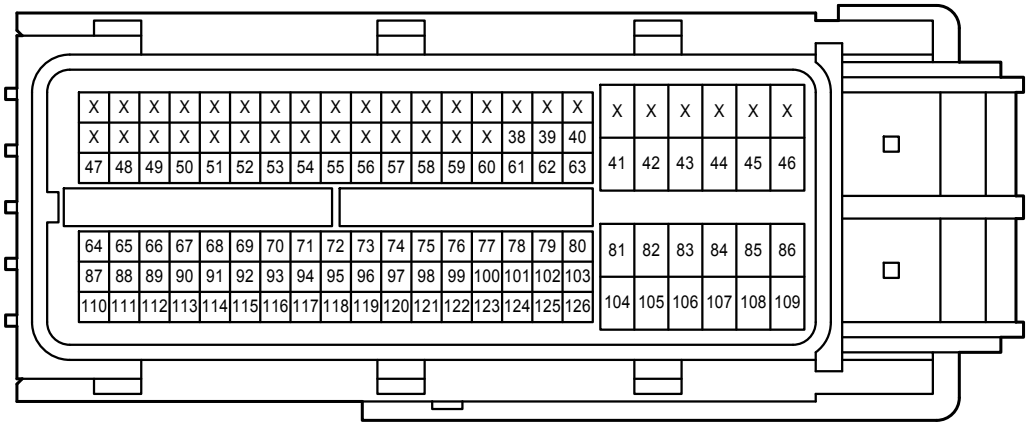
X X X X X X X X X X X X X X X X
X X X X X X X X X X X X X 38 39 40
47 48 49 50 51 52 53 54 55 56 57 58 59 60 61 62 63
64 65 66 67 68 69 70 71 72 73 74 75 76 77 78 79 80
87 88 89 90 91 92 93 94 95 96 97 98 99 100 101 102 103
110 111 112 113 114 115 116 117 118 119 120 121 122 123 124 125 126
X X X X X X
41 42 43 44 45 46
81 82 83 84 85 86
104 105 106 107 108 109

C 1


1