

B36
B50
B51
B58
B53
B37
B44
B61
B38
B59
B39
B46
B54
B34
B43
B49
B60
B35
B42
B57
B56
B62
B32
B31
B41
B21
B45
B40
B48
B33
B55
B26
C2
B5
B4
B47
B52
B25

B 4 Water Temp. Sensor
B 5 Engine Oil Pressure SW
B 21 Alternator
B 25 Back-Up Light SW
B 26 Starter
B 31 Battery Current Sensor
B 32 Engine ECU
B 33 Throttle Body Assembly
B 34 Air Flow Meter
B 35 Camshaft Position Sensor
B 36 Fuel Injector (No.1)
B 37 Fuel Injector (No.2)
B 38 Fuel Injector (No.3)
B 39 Fuel Injector (No.4)
B 40 A/C Compressor
B 41 Alternator
B 42 Crankshaft Position Sensor
B 43 Glow Plug Relay
B 44 VRV (EGR)
B 45 Turbo Pressure Sensor
B 46 Suction Control Valve
B 47 Fuel Temp. Sensor
B 48 Engine Oil Level Sensor
B 49 Glow Plug
B 50 Injector Driver (EDU)
B 51 Injector Driver (EDU)
B 52 Exhaust Fuel Addition Injector Assembly
B 53 VSV (EGR)
B 54 EGR Valve Position Sensor
B 55 Throttle Body Assembly
B 56 Exhaust Gas Temperature Sensor (Front)
B 57 Exhaust Gas Temperature Sensor (Rear)
B 58 Injector Driver (EDU)
B 59 Pressure Discharge Valve
B 60 Fuel Pressure Sensor
B 61 Differential Pressure Sensor
B 62 Air Fuel Ratio Sensor (Bank 1 Sensor 1)

C 2 Starter

B 4
Gray

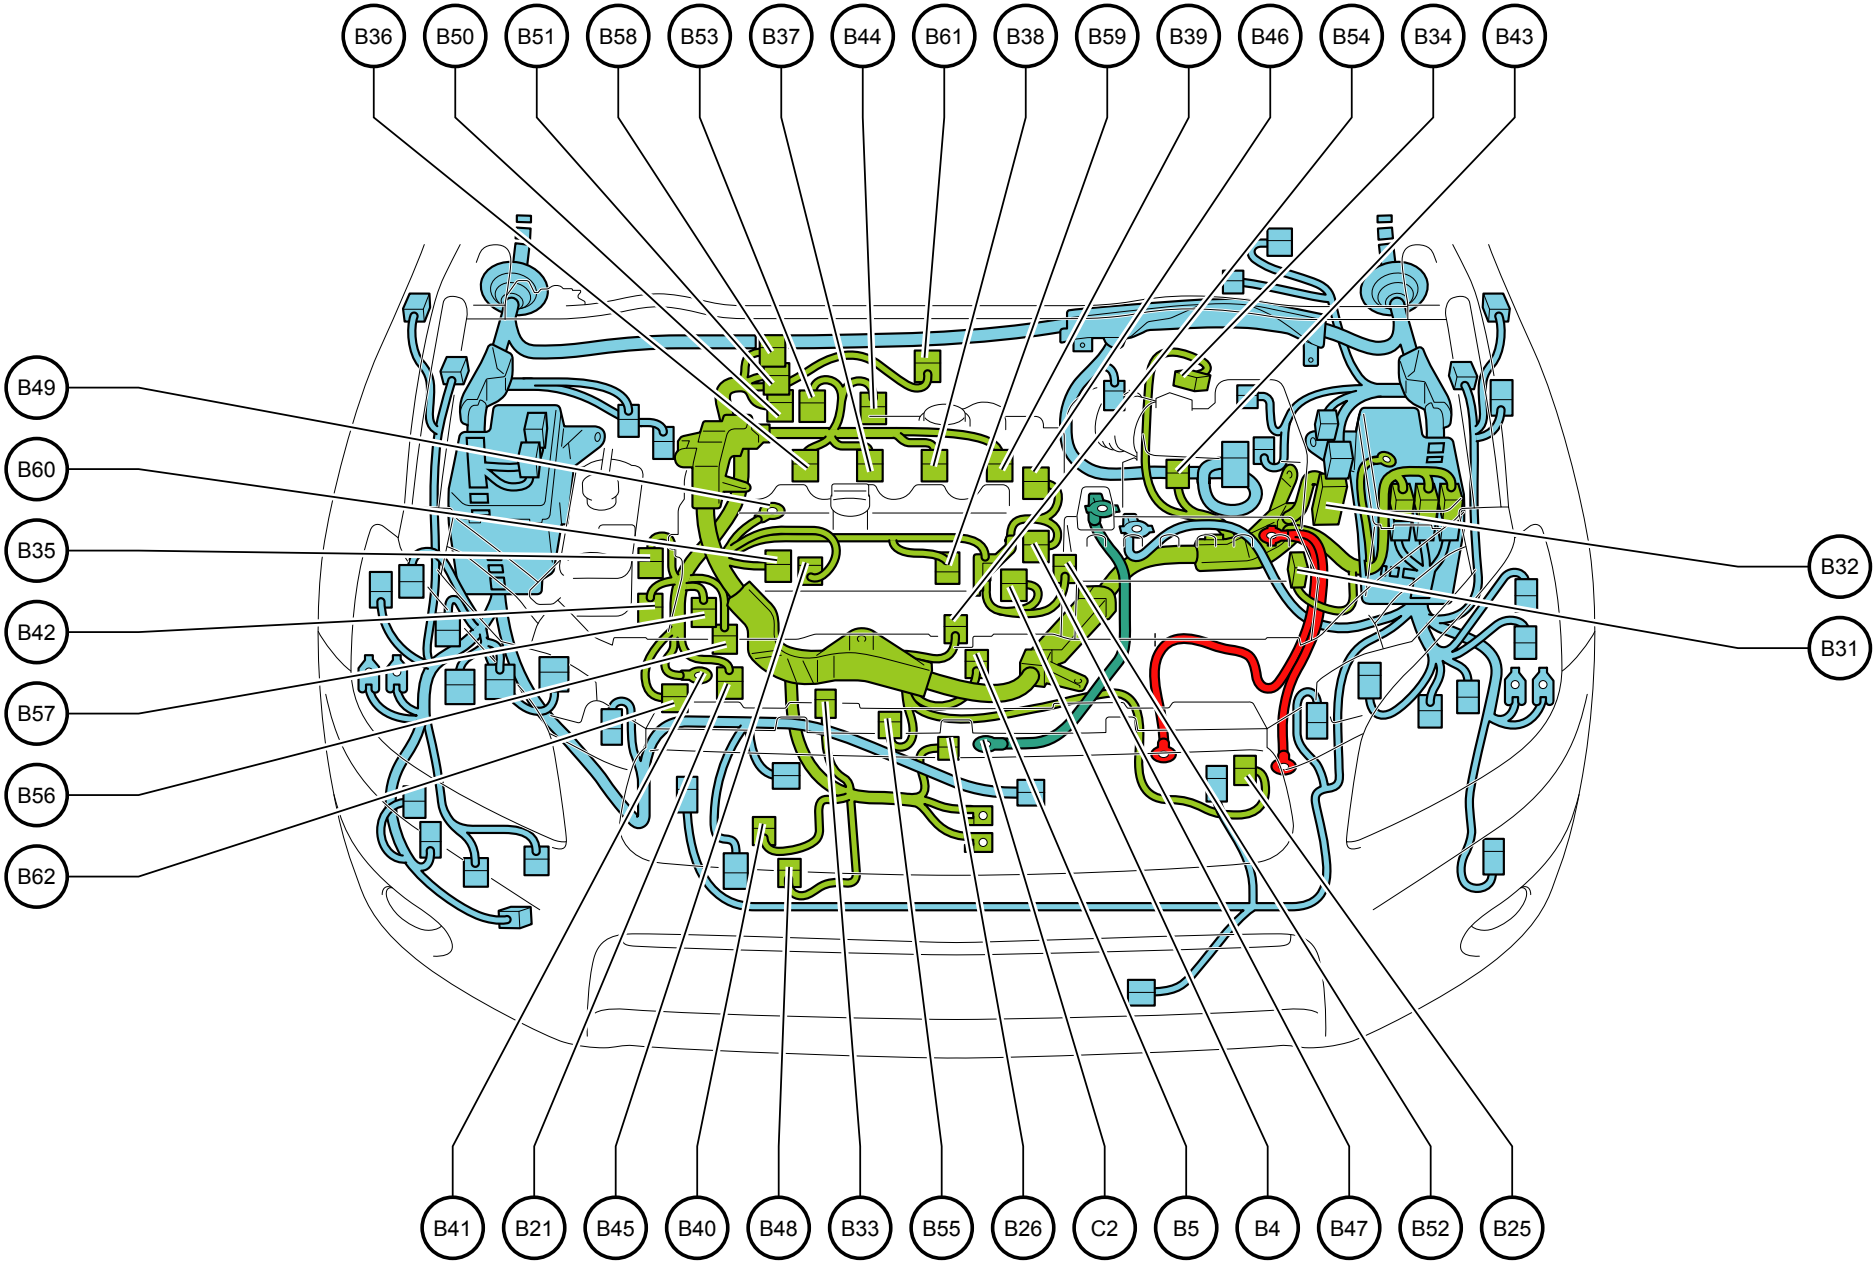


B 5
Gray



B 21
Black




B 25
Gray

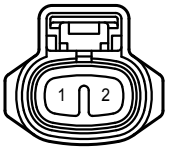


B 26
Black



B 31
Gray

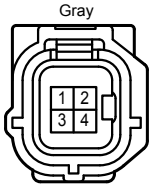


B 32
Black

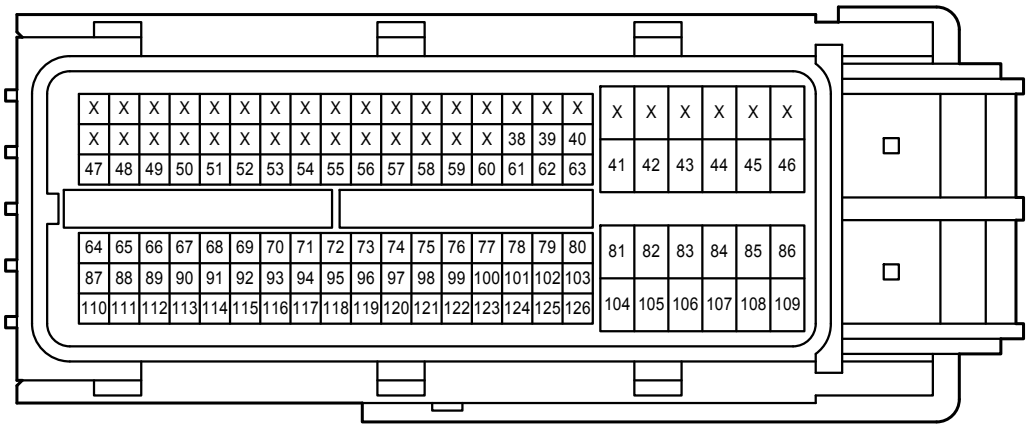

B 33
Black




B 34
Black

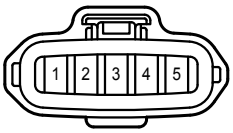

B 35
Black




B 36
Black

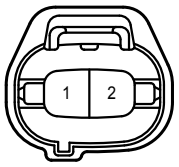


(2AD-FHV)

B 37
Gray

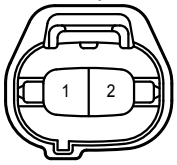


(2AD-FHV)

B 38
Black

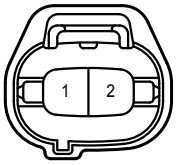


(2AD-FHV)

B 39
Gray

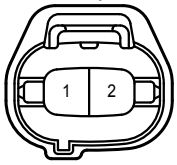


(2AD-FHV)

B 40
Black

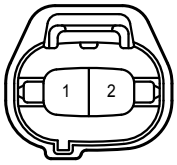


B 41



B 42
Gray




B 43
Gray

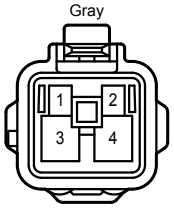

B 44
Black



B 45
Black

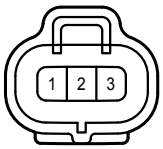

B 46
Gray




B 47
Gray



B 48
Gray




B 49



B 50
Gray




B 51
Black

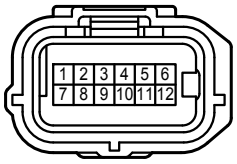


B 52
Black



B 53
Black

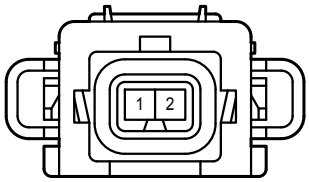

B 54
Black

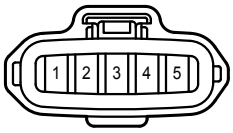

B 55
Black



B 56
Gray



B 57
Dark Gray



B 58
Dark Gray



B 59
Gray




B 60
Black



(2AD-FHV)

B 61
Black

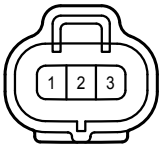

B 62
Dark Gray



C 2

